

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Leifheit](#) /
- › [Leifheit Regulus Mechanical Carpet Sweeper User Manual](#)

Leifheit 11700

Leifheit Regulus 11700 Mechanical Carpet Sweeper User Manual

Model: 11700

Brand: Leifheit

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use, maintenance, and troubleshooting of your Leifheit Regulus 11700 Mechanical Carpet Sweeper. This compact floor sweeper is designed for quick and quiet cleaning of various floor types, including carpets and smooth surfaces, without the need for electricity.

PRODUCT OVERVIEW

The Leifheit Regulus 11700 is a non-electric mechanical sweeper featuring a durable metal handle and an adjustable main brush system. It efficiently collects crumbs, dust, and small debris.

Key Features

- **Non-Electric Operation:** No power cords or batteries required, offering immediate use.
- **Versatile Cleaning:** Effective on all floor types, including carpets of varying heights and smooth floors.
- **Adjustable Brush Height:** A dial allows for precise adjustment of the main brush to suit different floor surfaces.
- **Dual Dust Collectors:** Two easily accessible dust collectors located underneath the sweeper for convenient emptying.
- **Compact Design:** Sweeping width of 22cm (8.5 inches) for efficient cleaning in various spaces.
- **Easy Storage:** Designed for convenient storage, including the option to hang it.

Components

- Sweeper Unit (main body with brushes and dust collectors)
- Multi-piece Handle (for assembly)
- Height Adjustment Dial
- Dust Collectors (2)



The Leifheit Regulus 11700 Mechanical Carpet Sweeper, showcasing its compact design and turquoise color.

SETUP

Your Leifheit Regulus 11700 Mechanical Carpet Sweeper requires minimal assembly before first use.

Assembling the Handle

1. Carefully unpackage all components.
2. Connect the multi-piece handle sections by screwing them together. Ensure all connections are secure and

tight.

3. Insert the assembled handle into the designated slot on the sweeper unit. The handle should fit firmly into place.

Initial Inspection

Before first use, ensure that the main brushes rotate freely and that the dust collectors are properly seated and empty.

OPERATING INSTRUCTIONS

The Leifheit Regulus 11700 is designed for simple and efficient manual operation.

Adjusting Brush Height

Locate the height adjustment dial on the top of the sweeper unit.

Turn the dial to adjust the height of the main brush.

- For *low-pile carpets* and *smooth floors*, set the brush to a lower position (indicated by smaller lines on the dial).
- For *high-pile carpets*, set the brush to a higher position (indicated by larger lines on the dial) to ensure effective sweeping without excessive resistance.



This image shows a hand adjusting the black dial on the top of the sweeper. The dial allows users to set the brush height, optimizing performance for different carpet pile heights or hard floors.

Sweeping Technique

Hold the handle firmly and push the sweeper across the surface to be cleaned. The sweeper is designed to collect debris when pushed both forward and backward.

For best results, use steady, overlapping strokes.



This image depicts a user operating the Leifheit Regulus sweeper on a carpeted floor. The sweeper's compact size and ease of use for quick clean-ups are highlighted.


MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Leifheit Regulus 11700.

Emptying Dust Collectors

The two dust collectors are located on the underside of the sweeper.

1. Lift the sweeper off the floor.
2. Locate the two compartments on the bottom.
3. Open the compartments and empty the collected dust and debris into a waste bin.
4. Close the compartments securely before resuming use.

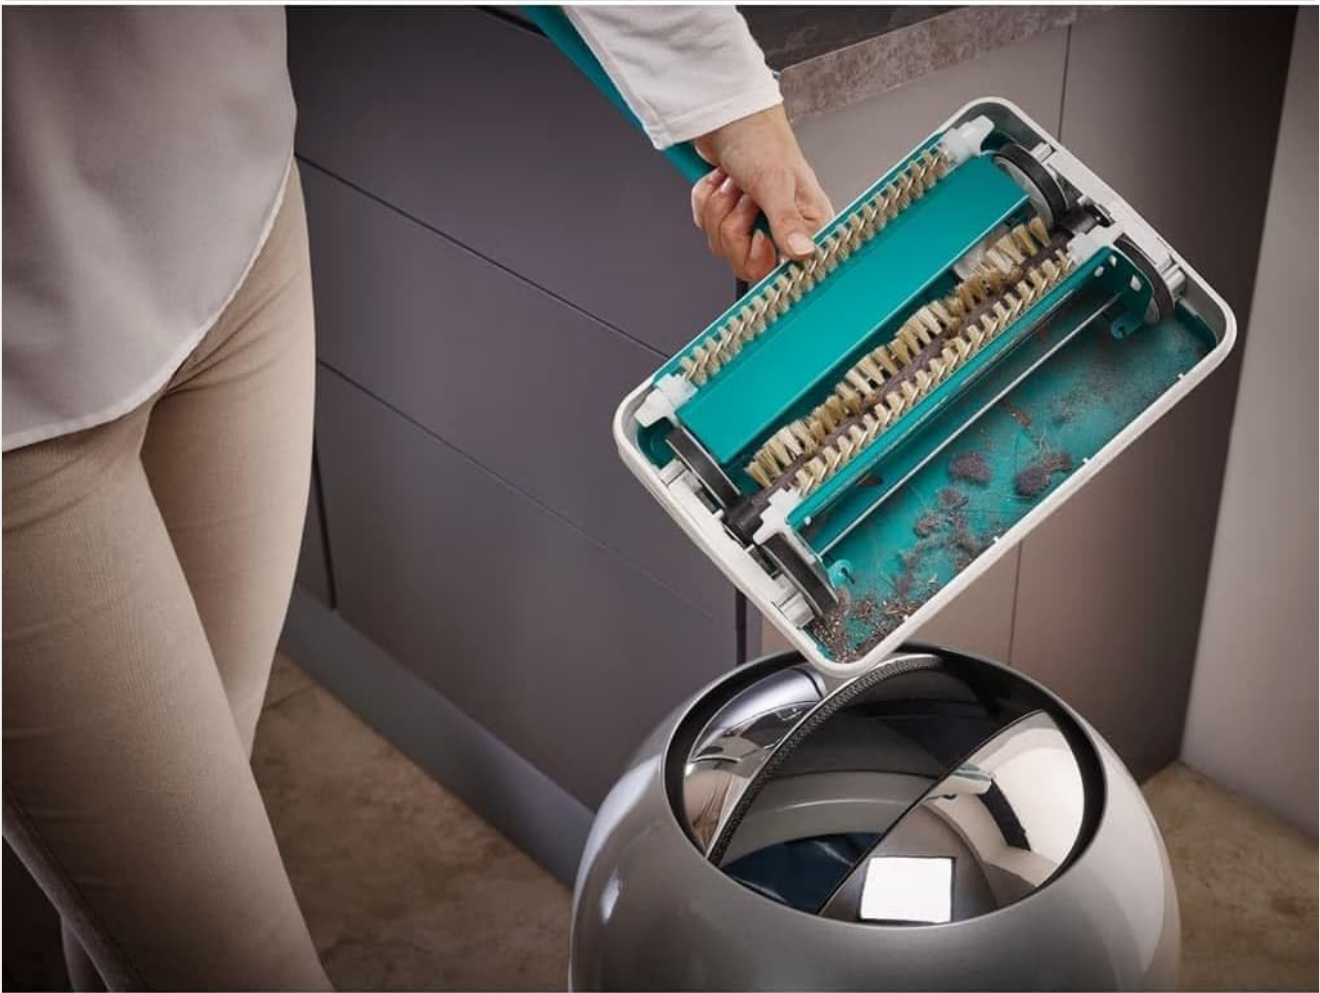

This image shows the underside of the sweeper with one of its dust collection bins open, being emptied into a trash can. This illustrates the simple process of disposing of collected dirt.

Cleaning the Brushes

Periodically inspect the main brushes for tangled hair, threads, or large debris.

Use scissors or a brush to carefully remove any obstructions from the bristles.

Storage

Store the sweeper in a dry place. Its design allows for upright storage or hanging to save space.

TROUBLESHOOTING

If you encounter issues with your Leifheit Regulus 11700, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Sweeper not picking up debris effectively	Incorrect brush height setting	Adjust the height adjustment dial to match the floor type.
Sweeper not picking up debris effectively	Full dust collectors	Empty both dust collectors.

Problem	Possible Cause	Solution
Sweeper not picking up debris effectively	Tangled brushes	Clean any tangled hair or debris from the main brushes.
Difficulty pushing the sweeper	Brush height too low for carpet type	Increase the brush height using the adjustment dial.
Unusual noise during operation	Debris caught in brushes or mechanism	Inspect and clean brushes and the area around them for any obstructions.

SPECIFICATIONS

Feature	Detail
Model Name	Leifheit Regulus 11700
Product Type	Mechanical Carpet Sweeper
Sweeping Width	22 cm (8.5 inches)
Power Source	Manual (Non-electric)
Handle Material	Metal
Bristle Material	Polypropylene (PP)
Dust Collectors	Two, easy to empty
Dimensions (W x H)	9.84"W x 11.81"H (Sweeper Unit)
Item Weight	1.6 Kilograms (3.52 pounds)
Color	Turquoise
UPC	013514035307, 798256072475

WARRANTY AND SUPPORT

The Leifheit Regulus 11700 Mechanical Carpet Sweeper comes with a 3-year warranty, as stated in the product description. For warranty claims, technical support, or further assistance, please contact Leifheit customer service or visit the official Leifheit website.

Note: Please retain your proof of purchase for warranty purposes.