

Coby DVD-527

Coby DVD-527 5.1 Channel Progressive Scan DVD Player User Manual

MODEL: DVD-527

1. Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your Coby DVD-527 5.1 Channel Progressive Scan DVD Player. Please read this manual thoroughly before using the device to ensure optimal performance and safety. The Coby DVD-527 features a super-slim design, 5.1 channel audio output, and progressive scan video output for enhanced picture quality on compatible televisions.

2. Safety Information

- **Power Source:** Ensure the power supply matches the voltage requirements specified on the unit.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the unit for proper airflow to prevent overheating.
- **Moisture:** Do not expose the unit to rain, moisture, or excessive humidity.
- **Cleaning:** Unplug the unit from the power outlet before cleaning. Use a soft, dry cloth.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. Package Contents

Verify that all items are present in the package:

- Coby DVD-527 DVD Player
- Full Function Remote Control
- AV Cable
- User Manual (this document)
- Warranty Information

4. Product Overview

The Coby DVD-527 DVD Player and its accompanying remote control are designed for ease of use and

integration into your home entertainment system.



Figure 1: Coby DVD-527 DVD Player (left) and its full-function remote control (right). The DVD player features a slim profile with a disc tray, display screen, and control buttons on the front panel. The remote control includes various buttons for playback, navigation, and special features.

Front Panel Controls

The front panel typically includes the disc tray, power button, play/pause, stop, and eject buttons, along with a digital display showing playback time or status.

Rear Panel Connections

The rear panel houses various audio and video output ports for connecting to your television and audio system.

Remote Control

The included remote control provides full functionality for operating the DVD player from a distance, including power, playback controls, menu navigation, volume, and special features.

5. Setup

5.1 Connecting to a Television

Choose one of the following video connection methods:

- **Component Video Output (Progressive Scan):** For the highest quality picture on HD-capable televisions, connect the Y, Pb, and Pr component video outputs from the DVD player to the corresponding inputs on your TV using component video cables.
- **RCA Video Output:** Connect the yellow RCA video output from the DVD player to the video input on your TV using an RCA video cable.
- **S-Video Output:** Connect the S-Video output from the DVD player to the S-Video input on your TV using an S-Video cable.

5.2 Connecting to an Audio System

Choose one of the following audio connection methods:

- **5.1 Dolby Digital Output:** For surround sound, connect the 5.1 channel audio outputs (Front Left, Front Right, Center, Surround Left, Surround Right, Subwoofer) from the DVD player to the corresponding inputs on your 5.1 channel receiver or amplifier.
- **Coaxial Digital Audio Output:** Connect the coaxial digital audio output from the DVD player to the coaxial digital audio input on your receiver or amplifier using a coaxial digital audio cable.

- **Optical Digital Audio Output:** Connect the optical digital audio output from the DVD player to the optical digital audio input on your receiver or amplifier using an optical digital audio cable.
- **Analog Audio Output:** Connect the red and white RCA analog audio outputs from the DVD player to the corresponding audio inputs on your TV or stereo system using an RCA audio cable.

5.3 Power Connection

After all audio and video connections are made, plug the DVD player's power cord into a standard AC power outlet.

6. Operating Instructions

6.1 Basic Disc Playback

1. Turn on your television and select the correct input source for the DVD player.
2. Press the Power button on the DVD player or remote control to turn on the unit.
3. Press the Eject button (▲) on the front panel or remote to open the disc tray.
4. Place a compatible disc (DVD, CD, CD-R/RW, MP3) gently into the disc tray with the label side facing up.
5. Press the Eject button (▲) again to close the disc tray. The player will begin reading the disc.
6. Playback should start automatically. If a disc menu appears, use the navigation buttons on the remote to select your desired option and press Enter.
7. Use the Play (▶), Pause (■ ■), Stop (■), Fast Forward (▶▶), and Rewind (◀◀) buttons on the remote for playback control.

6.2 Special Features

- **On-Screen Display:** Press the OSD button on the remote to view playback information on your screen.
- **Zoom Operation:** Use the Zoom button to magnify a portion of the picture.
- **Multiple Viewing Angles:** For discs that support it, press the Angle button to switch between different camera angles.
- **Subtitles:** Press the Subtitle button to select available subtitle languages.
- **Parental Lock Control:** Access the setup menu to configure parental control settings, restricting playback of certain content based on rating.

6.3 System Settings

Press the Setup button on the remote to access the system menu. Here you can adjust video settings (e.g., aspect ratio, progressive scan mode), audio settings, language preferences, and parental control options. Refer to the on-screen menu for detailed navigation.

7. Maintenance

7.1 Cleaning the Unit

Wipe the exterior of the DVD player with a soft, dry cloth. Do not use liquid cleaners or aerosol sprays, as they may damage the finish or internal components.

7.2 Disc Care

Handle discs by their edges. Keep discs clean and free of scratches. Store discs in their cases when not in use to prevent dust and damage.

8. Troubleshooting

If you encounter problems with your DVD player, refer to the following common issues and solutions:

- **No Power:**
 - Ensure the power cord is securely plugged into both the DVD player and a working electrical outlet.
 - Check if the power outlet is functional by plugging in another device.
- **No Picture:**
 - Verify that the video cables are correctly connected between the DVD player and the TV.
 - Ensure your TV is set to the correct input source (e.g., AV1, Component, HDMI).
 - Check the TV's picture settings.
- **No Sound:**
 - Confirm that audio cables are properly connected to your TV or audio system.
 - Check the volume level on both the DVD player and your TV/audio system.
 - Ensure your TV/audio system is set to the correct audio input.
 - If using digital audio, verify the audio settings in the DVD player's setup menu.
- **Disc Not Playing / Disc Error:**
 - Ensure the disc is clean and free of scratches or smudges.
 - Make sure the disc is inserted correctly with the label side facing up.
 - Verify that the disc format is compatible with the player (DVD, CD, CD-R/RW, MP3).
- **Remote Control Not Working:**
 - Check and replace the batteries in the remote control.
 - Ensure there are no obstructions between the remote and the DVD player's sensor.
 - Point the remote directly at the DVD player.

9. Specifications







Model	DVD-527
Brand	Coby
Dimensions (W x D x H)	11 x 10 x 2 inches (approximately)
Weight	7 pounds (approximately)
Media Type Compatibility	DVD, CD, CD-R/RW, MP3
Video Output	Component Video (Y, Pb, Pr), RCA Video, S-Video
Audio Output	5.1 Channel Dolby Digital, Coaxial Digital, Optical Digital, Analog RCA (L/R)
Special Features	Progressive Scan, Multiple Subtitles, Multiple Viewing Angles, On-Screen Display, Zoom Operation, Parental Lock Control
Video Compatibility	NTSC/PAL System

10. Warranty and Support

This product is covered by a limited manufacturer's warranty. Please refer to the warranty information card included in your package for specific terms and conditions, including the warranty period and coverage details. Keep your purchase receipt as proof of purchase.

For technical assistance or customer support, please refer to the contact information provided in your warranty documentation or visit the official Coby website for the most current support resources.

Related Documents - DVD-527

 <p>ifixit</p> <p>Coby DVD209 The bottom portion of the DVD player Replacement</p> <p>This guide will show you how to remove the bottom portion of the DVD player in order to access the internal components.</p> <p>Written By: Kyle Hamilton</p> <p>Page 1 of 1</p>	<p>Coby DVD209 DVD Player Bottom Portion Replacement Guide</p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
 <p>COBY</p> <p>TFT LCD Widescreen Television</p> <p>Instruction Manual</p> <p>TF DVD 3299</p> <p>Please read this manual carefully before connection and use.</p>	<p>COBY TF DVD 3299 TFT LCD Widescreen Television Instruction Manual</p> <p>Comprehensive instruction manual for the COBY TF DVD 3299 TFT LCD Widescreen Television. Learn about setup, operation, safety, and troubleshooting for your COBY television with integrated DVD player.</p>
 <p>COBY</p> <p>MP201</p> <p>EN Coby MP201 USB MP3 Player Instruction Manual Page 1</p> <p>ES Coby MP201 USB MP3 Player Instruction Manual Page 1</p> <p>FR Coby MP201 USB MP3 Player Instruction Manual Page 1</p>	<p>Coby MP201 USB MP3 Player Instruction Manual</p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
 <p>COBY</p> <p>MP-610</p> <p>MP3 & Video Player with FM Radio</p> <p>QUICK SETUP GUIDE</p>	<p>Coby MP-610 MP3 & Video Player Quick Setup Guide</p> <p>Quick setup guide for the Coby MP-610 MP3 & Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>
 <p>COBY®</p> <p>CD201</p> <p>Wireless Anti-Skip CD Player</p> <p>Reproducteur de CD sans fil avec saut automatique</p> <p>Manual de usuario / User Manual</p> <p>Bluetooth®</p> <p>CD</p> <p>EN --01</p> <p>ES --10</p>	<p>Coby CD201 Wireless Anti-Skip CD Player User Manual</p> <p>User manual for the Coby CD201 Wireless Anti-Skip CD Player, covering features, operation, charging, Bluetooth audio-out, FM radio, specifications, safety precautions, and warranty information.</p>
 <p>ifixit</p> <p>Coby Digital Photo Frame Alarm Clock Teardown</p> <p>This guide will show you how to safely remove the Coby Digital Photo Frame Alarm Clock in order to access the internal components.</p> <p>Written By: Jonathan Lumley</p> <p>Page 1 of 1</p>	<p>Coby Digital Photo Frame Alarm Clock Teardown Guide</p> <p>A detailed teardown guide of the Coby Digital Photo Frame Alarm Clock (Model DP356) by iFixit, exploring its internal components and reparability.</p>

