

Hamilton Beach 67800H

Hamilton Beach 67800H Juice Extractor Instruction Manual

Model: 67800H

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not immerse cord, plug, or base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Always make sure juicer cover is properly secured before motor is turned on. Do not unfasten cover while juicer is in operation.
- Be sure to turn switch to OFF position after each use and before disassembling.
- Do not put fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in opening, use food pusher to push it down. If this method is not possible, turn the motor off and disassemble the juicer to remove the remaining food.
- Do not use appliance for other than intended use.
- Do not use a cracked or damaged cutter/strainer.

PARTS AND FEATURES

Familiarize yourself with the components of your Hamilton Beach 67800H Juice Extractor.

1. **Food Pusher:** Used to guide fruits and vegetables into the feed chute.
2. **Feed Chute:** Opening where produce is inserted.
3. **Juicer Cover:** Secures the internal components and prevents splashing.
4. **Cutter/Strainer Basket:** Stainless steel component that grates and separates juice from pulp.

5. **Pulp Bin:** Collects the extracted pulp.
6. **Juice Spout:** Where the extracted juice flows out.
7. **Motor Base:** Houses the motor and controls.
8. **On/Off Switch:** Controls the power to the unit.



Image: The Hamilton Beach 67800H Juice Extractor, showing the main unit with its feed chute, juice spout, and on/off switch.



Image: Close-up of the stainless steel cutter/strainer basket, a key component for juice extraction.

SETUP AND ASSEMBLY

Before first use, wash all parts except the motor base in warm, soapy water. Rinse and dry thoroughly.

1. Place the motor base on a clean, dry, and level surface.
2. Insert the pulp bin into the motor base, ensuring it is securely seated.
3. Place the cutter/strainer basket onto the motor base, aligning it with the drive shaft. Press down firmly until it clicks into place.
4. Position the juicer cover over the cutter/strainer basket and pulp bin. Ensure the locking clips on the sides of the cover engage with the grooves on the motor base. The unit will not operate unless the cover is correctly locked.
5. Place a glass or pitcher under the juice spout to collect the extracted juice.
6. Insert the food pusher into the feed chute.

OPERATING INSTRUCTIONS

Follow these steps for effective juicing:

1. **Prepare Produce:** Wash all fruits and vegetables. Most fruits and vegetables do not need to be peeled, but thick skins (e.g., pineapple, melon, oranges) should be removed. Remove pits from fruits like peaches, cherries, etc. Cut produce into pieces small enough to fit into the feed chute.
2. **Start Juicer:** Plug the juicer into an electrical outlet. Turn the On/Off switch to the "ON" position.
3. **Insert Produce:** With the motor running, place prepared fruits or vegetables into the feed chute. Use the food pusher to gently guide the produce down. Do not force the food pusher, as this can affect juice yield and potentially damage the motor.
4. **Collect Juice:** Juice will flow from the spout into your container, and pulp will collect in the pulp bin.
5. **Finish Juicing:** Once all produce has been juiced, turn the On/Off switch to the "OFF" position and unplug the unit.

Tips for Best Results:

- For maximum juice extraction, process softer fruits and vegetables after harder ones.
- Do not overload the juicer. Feed produce at a steady, moderate pace.
- Empty the pulp bin when it becomes full to maintain optimal performance.
- Freshly extracted juice is best consumed immediately.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and performance of your juicer.

1. **Unplug:** Always unplug the juicer from the electrical outlet before cleaning.
2. **Disassemble:** Remove the food pusher, juicer cover, cutter/strainer basket, and pulp bin.
3. **Rinse Immediately:** Rinse all removable parts under running water to prevent pulp from drying and sticking.
4. **Wash Parts:** Wash the food pusher, juicer cover, cutter/strainer basket, and pulp bin in warm, soapy water. The cutter/strainer basket requires special attention; use a brush to remove pulp from the mesh.
5. **Dishwasher Safe:** The removable parts (food pusher, juicer cover, cutter/strainer basket, pulp bin) are top-rack dishwasher safe.
6. **Clean Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
7. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing the juicer.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Juicer does not turn on.	Unit not plugged in. Cover not properly secured. Power outage.	Ensure the power cord is securely plugged into a working outlet. Make sure the juicer cover is locked into place. The safety interlock prevents operation if not secured. Check other appliances to confirm power supply.
Low juice yield or excessive wet pulp.	Pulp bin is full. Cutter/strainer basket is clogged. Produce fed too quickly.	Empty the pulp bin. Clean the cutter/strainer basket thoroughly. Feed produce at a slower, more consistent pace.
Motor stops during operation.	Overheating due to continuous use or overloading. Food lodged in the chute or basket.	Turn off and unplug the unit. Allow it to cool down for at least 15-20 minutes. Turn off and unplug. Disassemble and clear any obstructions.

SPECIFICATIONS

- **Brand:** Hamilton Beach
- **Model:** 67800H
- **Maximum Power:** 350 Watts
- **Blade Material:** Stainless Steel
- **Finish Type:** Stainless Steel
- **Product Care Instructions:** Dishwasher Safe (removable parts)

- **Power Source:** Corded Electric
- **Item Weight:** 5.72 pounds
- **Product Dimensions:** 24 x 18.01 x 30.2 inches

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official documentation included with your product or visit the Hamilton Beach website. For customer support, product registration, or to purchase replacement parts, please visit the official Hamilton Beach store.

Official Hamilton Beach Store: [Hamilton Beach Store](#)

© 2024 Hamilton Beach. All rights reserved.