

[Manuals.plus](#) /

› [CAMPINGAZ](#) /

› [CAMPINGAZ CV 470 Plus Gas Cartridge Instruction Manual](#)

CAMPINGAZ CV 470 Plus

CAMPINGAZ CV 470 Plus Gas Cartridge Instruction Manual

Model: CV 470 Plus | Brand: CAMPINGAZ

1. INTRODUCTION

The Campingaz® CV 470 Plus valve cartridge is designed for use with Campingaz Easy Clic® Plus appliances. It contains a high-performance butane/propane mix (80/20) for efficient and reliable operation of your camping stoves and grills. This cartridge features a self-sealing safety valve, allowing for secure connection and removal even when not empty, providing flexibility for multiple device usage or transport.



Image 1.1: The Campingaz CV 470 Plus Gas Cartridge, a compact and resealable gas canister.

Important Safety Information

- Use only with Campingaz Easy Clic® Plus compatible appliances.
- Ensure proper ventilation when using the cartridge indoors or in enclosed spaces.
- Keep out of reach of children.
- Store in a cool, dry place away from direct sunlight and heat sources.
- Do not puncture, incinerate, or expose to temperatures exceeding 50°C (122°F).
- Always check for leaks after connecting the cartridge.

2. PRODUCT FEATURES

High Performance and Quality: Valve cartridge with high-performance butane/propane mix (80/20); manufacturing and

quality control in our own factory in Europe (Lyon, France).

Hassle-Free Installation: Features a self-sealing safety valve – simply push and turn the device onto the cartridge until you hear a click for a secure and tight connection.

Safe Removal: The cartridge can be removed and re-attached, even if not yet empty – an ideal solution if you need to operate multiple devices or transport your cartridge between uses.

Compatibility and Availability: Fits all Campingaz devices which run on valve cartridges (Party Grill & 360 Grill CV). Worldwide availability in more than 50 countries.

Scope of Supply: Campingaz CV 470 Plus valve gas cartridge; size approx.: 11 x 14 cm, weight: 710 g, capacity/gas: 450 g; ideal for camping, garden, balcony, terrace or trekking.

3. SETUP & INSTALLATION

The Campingaz CV 470 Plus cartridge is designed for quick and secure connection to compatible Easy Clic® Plus appliances.

1. **Prepare your Appliance:** Ensure your Campingaz Easy Clic® Plus appliance is turned off and in a stable position.
2. **Align the Cartridge:** Hold the gas cartridge upright. Align the valve of the cartridge with the connection point on your appliance.
3. **Connect the Cartridge:** Push the appliance firmly onto the cartridge. While pushing down, turn the appliance clockwise until you hear a distinct "click". This indicates a secure and tight connection.
4. **Check for Leaks:** After connection, it is crucial to check for any gas leaks. You can do this by applying a soapy water solution to the connection point. If bubbles appear, there is a leak. Disconnect immediately and re-attempt the connection. If the leak persists, do not use the cartridge or appliance.



Image 3.1: Top view of the CV 470 Plus cartridge, highlighting the Easy Clic® Plus valve system.

Fuel Your Fun: CV470/300 Are Only Compatible With Campingaz Party Grills



The cartridge can be removed & re-attached, even if not yet empty

Image 3.2: Illustrates the process of connecting the gas cartridge to a compatible Campingaz stove.

The self-sealing valve allows for safe disconnection and re-connection of the cartridge from your appliance, even if it's not empty. This is particularly useful for transporting the cartridge or switching between different compatible devices.

4. OPERATION

Once the Campingaz CV 470 Plus cartridge is securely connected to your Easy Clic® Plus appliance, you can proceed with its operation according to the appliance's specific instructions.

- Ensure the appliance's control knob is in the "OFF" position before igniting.
- Slowly turn the control knob to the "ON" or "IGNITE" position as per your appliance's manual.
- Use the integrated igniter (if available on your appliance) or a long-stem lighter/match to ignite the gas.
- Adjust the flame intensity as needed using the control knob.
- When finished, turn the control knob to the "OFF" position and allow the appliance to cool down before disconnecting the cartridge.

 


Image 4.1: A Campingaz stove operating with a gas cartridge, demonstrating typical usage.

5. STORAGE & MAINTENANCE

Proper storage and handling will ensure the longevity and safety of your Campingaz CV 470 Plus cartridge.

- **Storage:** Store the cartridge in a well-ventilated area, away from direct sunlight, heat sources, and open flames. The ideal storage temperature is below 40°C (104°F).
- **Disconnection for Storage:** Thanks to its self-sealing valve, the cartridge can be safely disconnected from the appliance for storage or transport, even if it still contains gas.
- **Disposal:** Dispose of empty cartridges according to local regulations. Do not refill or tamper with the cartridge.
- **Inspection:** Before each use, visually inspect the cartridge for any signs of damage, corrosion, or leaks. Do not use a damaged cartridge.

6. TROUBLESHOOTING

If you encounter issues with your Campingaz CV 470 Plus cartridge, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Gas not flowing / Appliance not igniting	<ul style="list-style-type: none">◦ Cartridge not securely connected.◦ Appliance control knob not fully open.◦ Cartridge is empty.◦ Incompatible appliance.	<ul style="list-style-type: none">◦ Ensure the cartridge is pushed and turned until it clicks.◦ Check the appliance's control knob.◦ Replace with a new cartridge.◦ Verify your appliance is Campingaz Easy Clic® Plus compatible. This cartridge is not compatible with standard screw-on or other non-Easy Clic® Plus systems.
Gas leak detected (hissing sound, smell, or bubbles with soapy water)	<ul style="list-style-type: none">◦ Improper connection.◦ Damaged cartridge valve or appliance seal.	<ul style="list-style-type: none">◦ Immediately disconnect the cartridge in a well-ventilated area.◦ Re-connect carefully, ensuring a firm click.◦ If the leak persists, do not use. Contact Campingaz customer support or dispose of the cartridge safely.
Appliance flame is weak or inconsistent	<ul style="list-style-type: none">◦ Low gas level in cartridge.◦ Appliance burner/jets are clogged.	<ul style="list-style-type: none">◦ Replace the cartridge.◦ Clean the appliance's burner and jets according to its manual.

Note: This cartridge is specifically designed for Campingaz Easy Clic® Plus systems. It is not compatible with standard screw-on stoves or other gas systems. Please ensure your appliance is compatible before purchase and use.

7. SPECIFICATIONS

Attribute	Detail
Brand	CAMPINGAZ
Model	CV 470 Plus
Fuel Type	Butane/Propane Mix (80/20)
Material	Alloy Steel
Product Dimensions (L x W x H)	11L x 11W x 14H Centimeters
Item Weight	0.18 Kilograms (Cartridge only), 710 Grams (Total weight with gas)
Gas Capacity	450 g
Compatibility	Campingaz Easy Clic® Plus appliances (e.g., Party Grill, 360 Grill CV)
Country of Origin	France
UPC	013523048893



Image 7.1: Visual representation of the Campingaz CV 470 Plus cartridge dimensions.

8. WARRANTY & SUPPORT

Specific warranty information for the Campingaz CV 470 Plus gas cartridge is typically provided with the product packaging or can be obtained from the point of purchase. For any product-related inquiries, technical support, or warranty claims, please contact Campingaz customer service or visit the official Campingaz website.

For more information and product compatibility, please visit the official [CAMPINGAZ Store on Amazon](#).



© 2025 CAMPINGAZ. All rights reserved.

This manual is for informational purposes only. Always follow safety guidelines.