

Behringer MX882

Behringer Ultralink Pro MX882 Ultra-Flexible 8-Channel Splitter/Mixer Instruction Manual

Model: MX882

1. INTRODUCTION

The Behringer Ultralink Pro MX882 is an ultra-flexible 8-channel splitter/mixer designed for professional audio applications. This versatile device offers multiple operational modes to suit various studio and live sound requirements.

Key functionalities include:

- **8-Input/2-Output Line Mixer:** Combine up to eight audio signals into two main outputs.
- **2-Input/8-Output Line Splitter:** Distribute two input signals to up to eight separate outputs.
- **6-Input/6-Output Level Matching Amplifier:** Convert levels between -10 dBV and +4 dBu, or function as a direct inject box.
- Each channel can operate independently in either mixer or splitter mode, providing exceptional flexibility.
- Features an extremely wide bandwidth from 5 Hz to 200 kHz for high audio fidelity.

2. SAFETY INSTRUCTIONS

Please read and follow all safety instructions before operating the Behringer Ultralink Pro MX882. Retain this manual for future reference.

- **Power Source:** Connect the unit only to the specified power supply voltage. Ensure the power cord is undamaged.
- **Moisture:** Do not expose the unit to rain or moisture. Avoid placing liquid-filled objects on the unit.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Heat:** Do not place near heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Servicing:** Do not attempt to service this unit yourself. Refer all servicing to qualified service personnel.
- **Cleaning:** Clean only with a dry cloth.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Behringer Ultralink Pro MX882 Ultra-Flexible 8-Channel Splitter/Mixer Unit
- Power Cable

- Instruction Manual (this document)

If any items are missing or damaged, please contact your dealer immediately.

4. PRODUCT OVERVIEW

The Behringer Ultralink Pro MX882 features a robust 1U rack-mountable chassis with clearly labeled controls and connections for intuitive operation.

4.1. Front Panel

The front panel provides access to all primary controls and indicators for each channel, as well as the main input/output sections.



Figure 4.1: Front view of the Behringer Ultralink Pro MX882. This image displays the full front panel with all controls and LED indicators.



Figure 4.2: Detailed view of the front panel controls for the Behringer Ultralink Pro MX882. This close-up shows the MAIN INPUT LEVEL, MAIN LINK, MAIN OUTPUT LEVEL, SPLIT/MIX switch, LEVEL, and LEFT/RIGHT BALANCE/PAN controls, along with their respective LED meters.

- **MAIN INPUT LEVEL (dB):** Controls the input level for the main stereo input.
- **MAIN LINK:** Button to link channels for stereo operation.
- **MAIN OUTPUT LEVEL (dB):** Controls the output level for the main stereo output.
- **SPLIT/MIX Switch:** Determines whether the individual channel operates in splitter or mixer mode.
- **LEVEL:** Adjusts the input/output level for individual channels.
- **LEFT/RIGHT BALANCE/PAN:** Controls the balance (in splitter mode) or pan (in mixer mode) for individual channels.
- **LED Meters:** Provide visual indication of input and output signal levels.
- **POWER Switch:** Turns the unit on or off.

4.2. Rear Panel

The rear panel houses all audio input and output connections, as well as the power inlet.



Figure 4.3: Combined front and rear view of the Behringer Ultralink Pro MX882. This image provides an overview of both the control surface and the connection panel.



Figure 4.4: Detailed view of the rear panel connections for the Behringer Ultralink Pro MX882. This close-up shows the AC power inlet, XLR inputs and outputs, and 1/4-inch TRS inputs and outputs.

- **AC Power Inlet:** For connecting the included power cable.
- **XLR Inputs/Outputs:** Balanced connections for professional audio equipment.
- **1/4-inch TRS Inputs/Outputs:** Balanced/unbalanced connections for various audio devices.

5. SETUP

Follow these steps to set up your Ultralink Pro MX882:

1. **Rack Mounting:** If desired, mount the MX882 into a standard 19-inch equipment rack using appropriate rack screws. Ensure sufficient space for ventilation.
2. **Power Connection:** Connect the supplied AC power cable to the power inlet on the rear panel and then to a suitable power outlet. Do not power on the unit yet.
3. **Audio Connections:** Connect your audio sources (e.g., mixers, instruments, playback devices) to the desired input channels on the rear panel using XLR or 1/4-inch TRS cables. Connect your audio destinations (e.g., amplifiers, recording interfaces, other mixers) to the corresponding output channels.
4. **Initial Settings:** Ensure all LEVEL controls on the front panel are set to their minimum position.
5. **Power On:** Turn on the MX882 using the POWER switch on the front panel.
6. **System Power Up:** Power on your connected audio equipment, typically starting with sources and

ending with amplifiers/monitors.

6. OPERATING MODES

The MX882 offers flexible operation as either a mixer or a splitter, with each channel configurable independently.

6.1. Mixer Mode (8 In / 2 Out)

In mixer mode, the MX882 combines up to eight mono input signals into a stereo output. This is ideal for sub-mixing multiple sources before sending them to a main mixer or recording device.

- Set the **SPLIT/MIX** switch for each desired channel to the 'MIXER' position.
- Connect your mono audio sources to the individual channel inputs (CH 1 IN to CH 8 IN) on the rear panel.
- Adjust the **LEVEL** control for each channel to achieve the desired input gain.
- Use the **LEFT/RIGHT BALANCE/PAN** control to position each channel within the stereo field.
- The combined stereo signal will be available at the MAIN OUT L and MAIN OUT R connections. Adjust the **MAIN OUTPUT LEVEL** as needed.

6.2. Splitter Mode (2 In / 8 Out)

In splitter mode, the MX882 takes a stereo input signal and distributes it to up to eight individual mono outputs. This is useful for sending a main mix to multiple amplifiers, recording devices, or monitor systems.

- Set the **SPLIT/MIX** switch for each desired channel to the 'SPLITTER' position.
- Connect your stereo audio source to the MAIN IN L and MAIN IN R connections on the rear panel.
- Adjust the **MAIN INPUT LEVEL** to set the overall input gain.
- Each channel's output (CH 1 OUT to CH 8 OUT) will receive a mono sum of the main stereo input.
- Use the **LEVEL** control for each channel to adjust its individual output level.
- The **LEFT/RIGHT BALANCE/PAN** control in splitter mode allows you to select whether the channel receives the left, right, or a sum of both main inputs.

6.3. Level Matching Amplifier / DI Box (6 In / 6 Out)

The MX882 can also function as a level matching amplifier or a direct inject (DI) box, converting signal levels between -10 dBV (consumer level) and +4 dBu (professional level).

- This functionality is inherent in the design, allowing you to connect devices with different nominal operating levels without signal degradation.
- By using individual channels, you can convert unbalanced signals to balanced, or vice-versa, and adjust levels precisely.

7. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your MX882.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Avoid abrasive cleaners or solvents.
- **Ventilation:** Ensure that the ventilation openings are free from dust and debris.
- **Connections:** Periodically check all cable connections for secure fit and signs of wear.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store in a dry, dust-free environment.

8. TROUBLESHOOTING

If you encounter issues with your MX882, refer to the following common troubleshooting steps:

- **No Power:**
 - Check if the power cable is securely connected to both the unit and the power outlet.
 - Ensure the power outlet is functional.
 - Verify the POWER switch on the front panel is in the 'ON' position.
- **No Sound Output:**
 - Check all audio cable connections.
 - Ensure the **LEVEL** controls for the relevant channels and main outputs are not set to minimum.
 - Verify the **SPLIT/MIX** switches are set correctly for your desired operation (mixer or splitter).
 - Check the input and output levels of connected external equipment.
 - Observe the LED meters for signal presence.
- **Distorted Sound:**
 - Reduce the **LEVEL** controls on the MX882 and/or the output levels of your source equipment to prevent clipping (indicated by red LEDs).
 - Ensure all cables are in good condition and correctly connected.
- **Hum or Noise:**
 - Ensure all connections are balanced where possible (using XLR or TRS cables).
 - Check for ground loops. Try connecting all audio equipment to the same power strip.
 - Keep audio cables away from power cables.

If the issue persists, contact Behringer customer support or a qualified service technician.

9. SPECIFICATIONS

Technical specifications for the Behringer Ultralink Pro MX882:

 
Feature	Specification
Item Model Number	MX882
Item Weight	5.25 pounds
Product Dimensions	19.02 x 1.75 x 8.54 inches
Voltage	230 Volts (AC)
Wattage	35 watts
Number of Channels	8
Connectivity Technology	Standard Analog Audio Connectivity
Frequency Response	5 Hz to 200 kHz

10. WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the official Behringer website or contact your local Behringer distributor. Keep your purchase receipt as proof of purchase for any warranty claims.

Online Resources: For additional information, FAQs, and software/firmware updates, visit the official Behringer website: www.behringer.com

Documents - Behringer – MX882

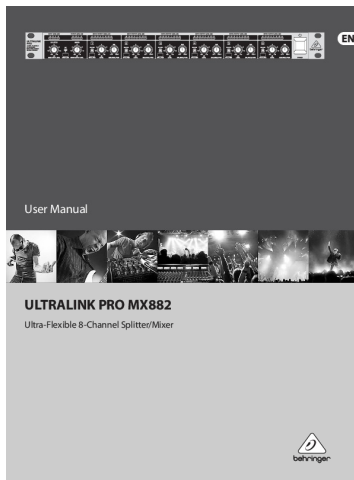


[\[pdf\]](#) User Manual Instructions Warranty

MX882 P0056 BEHRINGER ULTRALINK PRO User Manual Important Safety Instructions LEGAL DISCLAIMER Terminals marked with this symbol carry electrical current of 9a9530766df0bc7474e520eb6e7dd0d3 fotosklad ru upload iblock 9a9

User Manual ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2 ULTRALINK PRO **MX882** User Manual Table of Contents Important Safety Instructions..... 3 Legal

Disclaimer..... 3 Limited warranty.....

 lang:en **score:47** filesize: 1.65 M page_count: 12 document date: 2017-06-27

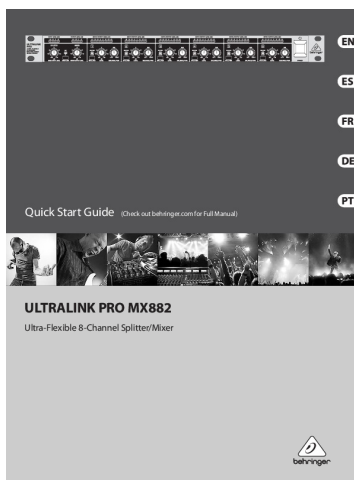


[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

ULTRALINK PRO MX882 Quick Start Guide Check out behringer for Full Manual Ultra Flexible 8 Channel Splitter Mixer QSG proavl net 2020 10 |||

Quick Start Guide Check out behringer.com for Full Manual ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2 ULTRALINK PRO **MX882** Important Safety Instructions Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use ...

 lang:en **score:46** filesize: 1.1 M page_count: 11 document date: 2020-10-14

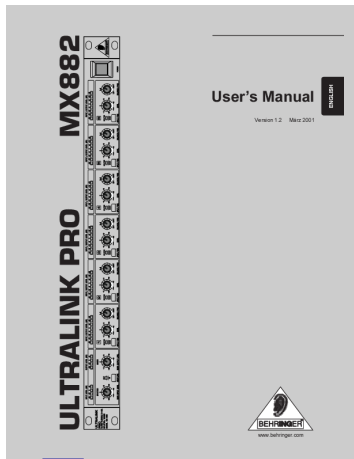

[\[pdf\]](#) User Manual Instructions

Provided by ManualsAndMore Download User Manual Behringer MX882 manualsandmore |||

ULTRALINK PRO **MX882** ENGLISH Users Manual Version 1.2 Mrz 2001

www.behringer.com ULTRALINK PRO **MX882** SAFETY INSTRUCTIONS CAUTION:

To reduce the risk of electrical shock, do not remove the cover or back . No user serviceable parts inside; refer servicing to qualified personnel. WARNING: To reduce...

lang:en score:43 filesize: 1.24 M page_count: 16 document date: 2019-07-23



[\[pdf\]](#) Quick Start Guide Instructions Guide

QSG BE 0602 AAG MX882 V2 WWcdn mediaalet aunsw musictribe PEivYKa68UqN0twJcunpHA

QU4X4tPJk26GMk0YeYxKA Original WW Behringer mx882 v2Линейный многоканальный

предусилитель Rmmedia ruQSG WWQSG ||| ||| Quick Start Guide ULTRALINK PRO MX882 Ultra-

Flexible 8-Channel Splitter/Mixer V 5.0 2 ULTRALINK PRO MX882 Important Safety Instructions

 
Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of

Quick Start Guide ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer V

5.0 2 ULTRALINK PRO **MX882** Important Safety Instructions Terminals marked with

this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speak...

lang:en score:42 filesize: 897.43 K page_count: 15 document date: 2023-04-26

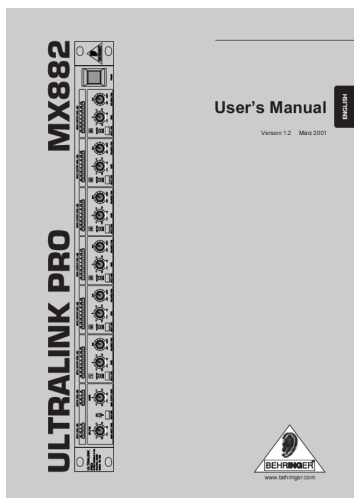

[\[pdf\]](#) User Manual Instructions

DATA MANFULL MX882 ENG Rev E p65 Bathke Parts Express g ~~~ ~~~ !! 4 utf 8 248 6306 behringer

mx882 manual 42611 parts express pedocs manuals

ULTRALINK PRO **MX882** ENGLISH Users Manual Version 1.2 Mrz 2001

www.behringer.com ULTRALINK PRO **MX882** SAFETY INSTRUCTIONS CAUTION:

To reduce the risk of electrical shock, do not remove the cover or back . No user serviceable parts inside; refer servicing to qualified personnel. WARNING: To reduce...


lang:en score:41 filesize: 886.38 K page_count: 16 document date: 2020-02-07



[\[pdf\]](#) User Manual Instructions Declaration of Conformity

Provided by ManualsAndMore Download User Manual Behringer Ultralink Pro MX882 manualsandmore |||
ULTRALINK PRO **MX882** Users Manual E Bedienungsanleitung D Version 1.0 July 1998 www.behringer.de 1 EG-Declaration of Conformity Spezielle Studiotechnik GmbH acc. to the Directives 89/336/EEG and 73/23/EEG We, BEHRINGER INTERNATIONAL GmbH Hanns-Martin-Schleyer-Strae 4 D - 47877 Willich Name and ...

 lang:en score:41 filesize: 1.22 M page_count: 17 document date: 2019-07-23

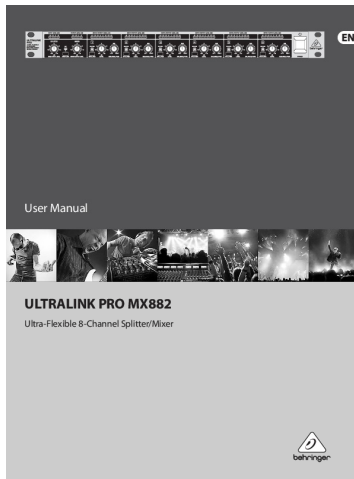

[\[pdf\]](#) User Manual Owner's Manual Instructions Warranty

Behringer MX882 Proavl Owner Manual proavl net 2020 10 |||
User Manual ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2
ULTRALINK PRO **MX882** User Manual Table of Contents Important Safety Instructions..... 3 Legal

Disclaimer..... 3 Limited warranty.....

lang:en score:40 filesize: 1.56 M page_count: 12 document date: 2020-10-14




[\[pdf\]](#) Quick Start Guide Guide Warranty

Quick Start Guide Chinese Analog Rack Mixer Behringer MX882 V2 QSG BE P0CCU CN mediadl musictribe media PLM data docs |||

ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer V 3.0 2 ULTRALINK PRO **MX882**, TS , , , , , , 1. 2. 3. 4. 5. 6. 7. 8. , , 9. , 10. , , 11. 12. , , , , 13. , 14. , , , , 15. 16. , 17...

 lang:fr score:40 filesize: 975.03 K page_count: 5 document date: 2021-10-21

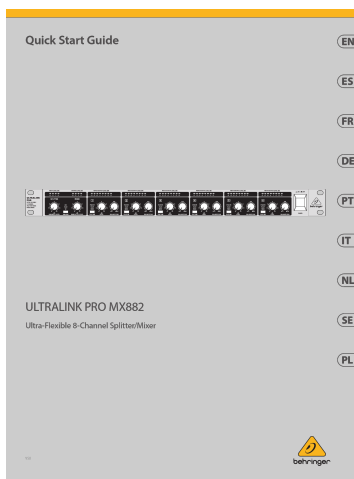

[\[pdf\]](#) Quick Start Guide Instructions Guide

Quick Start Guide All Languages Analog Rack Mixer Behringer MX882 V2 QSG BE P0CCU WW mediadl musictribe media PLM data docs |||

Quick Start Guide ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer V 5.0 2 ULTRALINK PRO **MX882** Important Safety Instructions Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speak...

lang:en score:39 filesize: 1.29 M page_count: 15 document date: 2021-10-25

 


[\[pdf\]](#) User Manual

DATA MANFULL MX882 GER Rev E p65 Bathke 135348 manual P0056 M images static thomann de
pics atg atgdata document behringer 80 EN

ULTRALINK PRO **MX882** DEUTSCH Bedienungsanleitung Version 1.2 Mrz 2001
www.behringer.com ULTRALINK PRO **MX882** SICHERHEITSHINWEISE ACHTUNG:
Um eine Gefhrdung durch Stromschlag auszuschließen, darf die Gerteabdeckung bzw.
Gerterckwand nicht abgenommen werden. Im Innern des Gerts befinden sich keine
v...

lang:de score:36 filesize: 1.41 M page_count: 16 document date: 2001-03-15

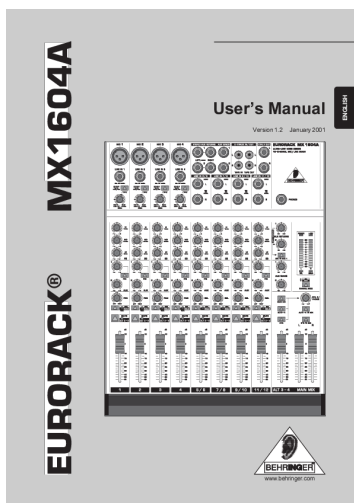


[\[pdf\]](#) User Manual Instructions

DATA MANFULL MX1604A ENG Rev H p65 p jannusch nance instructions in the accompanying
literature Read manual SAFETY INSTRUCTIONS CAUTION To reduce risk of electrical shock do not
remove cover or back No user serviceable parts ~~~~~ ~ ! ~ Unbalanced use mono 1 4 jack plugs Ring
Balanced stereo with XLR connectors filename* mx1604a p0087 m en 8849400594462 Behringer Manual
P0087 M EN studio community bose ziiw76728 attachments PortablePA 54526 178 synthmanuals
manuals behringer mediadl musictribe media sys master h83 h49 mz unic ac cy 2015 12 80 music group
PLM data docs User |||

EURORACK MX1604A ENGLISH Users Manual Version 1.2 January 2001
www.behringer.com EURORACK MX1604A ... ge console, the BEHRINGER
EURODESK MX9000. Later we will see how adding the BEHRINGER ULTRALINK
PRO **MX882** to your system can inexpensively expand the capacity and flexibility of
you mixing power even ...

 lang:en score:36 filesize: 1.58 M page_count: 27 document date: 2001-08-20

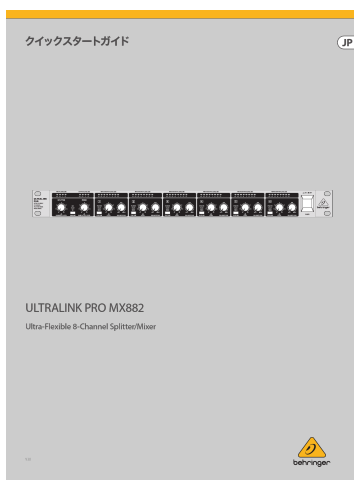


[\[pdf\]](#) Quick Start Guide Guide Warranty

Quick Start Guide Japanese Analog Rack Mixer Behringer MX882 V2 QSG BE P0CCU JP mediadl
musictribe media PLM data docs |||

ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer V 3.0 2 ULTRALINK
PRO **MX882** . TS 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21.
45C Music...

 lang:fr score:35 filesize: 1023.36 K page_count: 5 document date: 2021-10-25

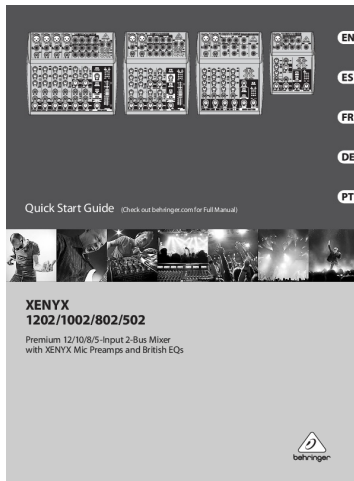

[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

XENYX 1202 1002 802 502 BEHRINGER Recordcase de Quick Start Guide Check out behringer for Full Manual Premium 12 10 8 5 Input 2 Bus Mixer with Mic Preamps and British EQs Behringer DE EN ES FR PT recordcase media 39 3e f7

Quick Start Guide Check out behringer.com for Full Manual XENYX 1202/1002/802/502 Premium 12/10/8/ ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. 19 2-TRACK OUTPUT These connectors are wired in parallel with the MAIN OU...

lang:en score:35 filesize: 3.67 M page_count: 17 document date: 2019-07-05




[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

XENYX 1202 1002 802 502 BEHRINGER recordcase de Quick Start Guide Check out behringer for Full Manual Premium 12 10 8 5 Input 2 Bus Mixer with Mic Preamps and British EQs Behringer Xenyx DE EN FR ES PT media c3 e0 9e |||

Quick Start Guide Check out behringer.com for Full Manual XENYX 1202/1002/802/502 Premium 12/10/8/ ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. 19 2-TRACK OUTPUT These connectors are wired in parallel with the MAIN OU...

 lang:en score:35 filesize: 3.67 M page_count: 17 document date: 2019-05-23

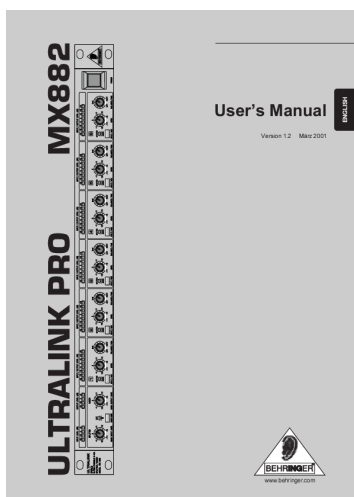


[\[pdf\]](#) User Manual Instructions

DATA MANFULL MX882 ENG Rev E p65 Bathke home httpd data media b c3 zzounds 80 b4d5facc0f8ec61742f7a2d93a94574 music group software behringer starin info Product Info Behringer Manuals Manual P0056 SoundCreation ENGLISH Page 2 ULTRALINK PRO This symbol wherever it appears alerts you to the presence of uninsulated dangerous voltage inside Index soundcreation ro admin files cms products module 3541 |||

ULTRALINK PRO **MX882** ENGLISH Users Manual Version 1.2 Mrz 2001 www.behringer.com ULTRALINK PRO **MX882** SAFETY INSTRUCTIONS CAUTION: To reduce the risk of electrical shock, do not remove the cover or back . No user serviceable parts inside; refer servicing to qualified personnel. WARNING: To reduce...

 lang:en score:34 filesize: 1.21 M page_count: 16 document date: 2001-03-15

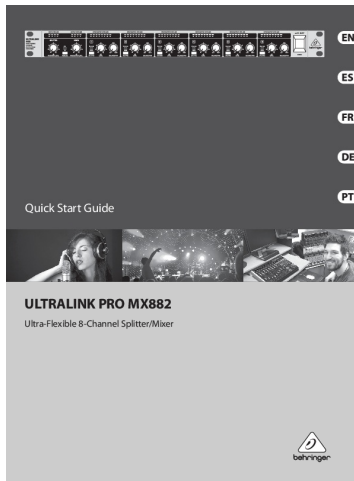

[\[pdf\]](#) Quick Start Guide Instructions Guide Warranty

FEEL Prod Grap PH Artwork P0CCU QSG WW A4 2017 07 21 Rev 1 indd mark vicente ULTRALINK

PRO MX882 Full Compass Systems Quick Start Guide Ultra Flexible 8 Channel Splitter Mixer 2 3

Important Safety Instructions LEGAL DISCLAIMER Instrucciones de seguridad NEGACIÓN GARANTÍA

 
LIMITADA LIMITED WARRANTY Terminals marked with this symbol carry 33390

MX882V2QuickStartGuide fullcompass common files

Quick Start Guide ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2

ULTRALINK PRO **MX882** Important Safety Instructions Terminals marked with this symbol carry electrical current of sufficient magnitude to constitute risk of electric shock. Use only high-quality professional speaker cab...

lang:en score:34 filesize: 1.02 M page_count: 10 document date: 2018-07-23

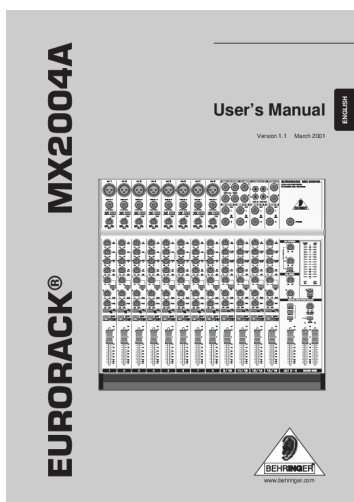

[\[pdf\]](#) User Manual Instructions Guide

DATA MANFULL MX2004 ENG Rev H p65 derks User s Manual ENGLISH Read the manual SAFETY

INSTRUCTIONS CAUTION To reduce risk of electrical shock do not remove cover or back Thorsten for this marvellous layout Bernhard Rammi whose technical ingenuity is unique C W fine mechanics key

phrase Tooling modification and all others who have made very personal contributions My friends it been

worth trouble! Thank you much Uli Behringer The existing users BEHRINGER equipment comments

suggestions them most important members design team 8850213666846 MX2004A P0030 M EN home

httpd data media 1 mx2004a p0030 m en mediadl musictribe sys master ha1 h9d media63 music group

PLM docs c3 zzounds 1e51e5d01023bf9b4676a25c622394f1 synthmanuals manuals behringer user 80

assets erha se ~ronny mx Musical Instrument Guide Index f3569893 9021 4b87 9243 72cf253c8c15

archive org manualsonline id |||

 
EURORACK MX2004A ENGLISH User s Manual Version 1.1 March 2001

www.behringer.com EURORACK MX2004A ... ge console, the BEHRINGER

EURODESK MX9000. Later we will see how adding the BEHRINGER ULTRALINK

PRO **MX882** to your system can inexpensively expand the capacity and flexibility of you mixing power even ...


lang:en score:34 filesize: 1.52 M page_count: 26 document date: 2001-03-16

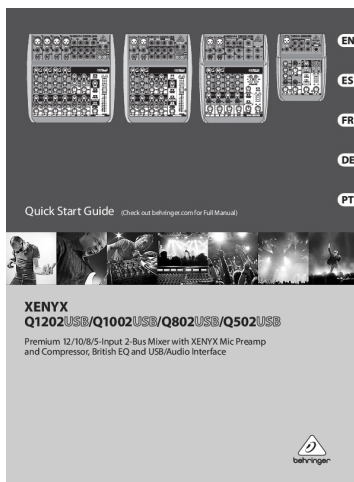

[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

XENYX Q1202USB Q1002USB Q802USB Q502USB BEHRINGER Q1202 Q1002 Q802 Q502 Quick Start Guide Check out behringer for Full Manual Premium 12 10 8 5 Input 2 Bus Mixer with Mic Preamp Behringer recordcase de media 8b ce d0

 
Quick Start Guide Check out behringer.com for Full Manual XENYX Q1202 /Q1002 /Q802 /Q502 Premium 1 ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. The mixer cannot be bus-powered via USB. Always use the included power adap...
lang:en score:34 filesize: 4.23 M page_count: 18 document date: 2019-06-03

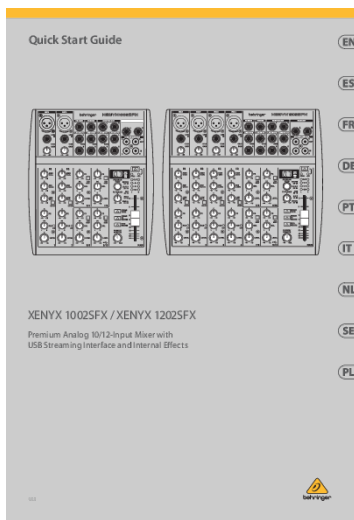

[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

Quick Start Guide XENYX 1002SFX 1202SFX Pult ruor Behringer ULTRALINK PRO MX882 can be connected 19 STREAM OUTPUT These Getting started FR eglise


Pour mknkau5rdoxsi9zj2xlqll3yo1htmxaput ru upload iblock e66 mknkau5rdoxsi9zj2xlqll3yo1htmx ||| Quick Start Guide XENYX 1002SFX / XENYX 1202SFX Premium Analog 10/12-Input Mixer with USB Streaming ... tput of a second mixer 28 PHANTOM Press this button to send 48 V of or Behringer ULTRALINK PRO **MX882** can be connected. phantom power to the XLR inputs for use with 19 STREAM OUTPUT These con...
lang:en score:33 filesize: 2.2 M page_count: 24 document date: 2022-12-13

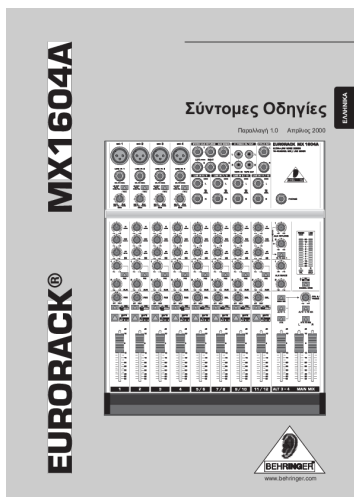 

[\[pdf\]](#) User Manual

DATA MANSHT MX1604A GRE Rev A p65 t derks mx1604a p0087 m el midimanuals manuals behringer user manual greek Behringer User Manual Greek |||

 EURORACK MX1604A 1.0 2000 www.behringer.com : , . . . : ... K TO CONTROL ROOM . . , , EURORACK BEHRINGER ULTRALINK PRO **MX882**. Main Mix Sum 4 dBu, 2-Track Out Cinch, XLR . fader . : n...
lang:de score:33 filesize: 1.04 M page_count: 10 document date: 2001-12-19

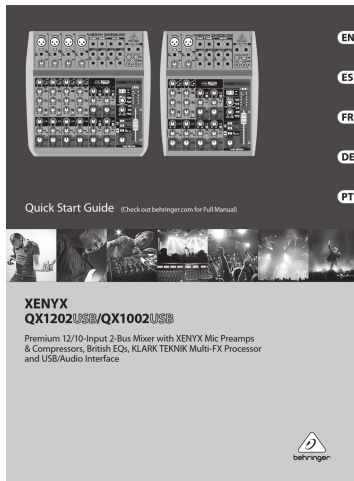

[\[pdf\]](#) User Manual Quick Start Guide Instructions Guide

XENYX QX1202USB QX1002USB BEHRINGER QX1202 QX1002 Recordcase de Quick Start Guide

Check out behringer for Full Manual Premium 12 10 Input 2 Bus Mixer with Mic Preamps Compressors

 
British EQs KLARK TEKNIK Multi FX Processor Behringer recordcase media 32 96 c9

CLIP SIG Quick Start Guide Check out behringer.com for Full Manual XENYX

QX1202 /QX1002 Premium 12 ... , so the output of a second PROGRAM control; the blinking stops. XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected.

28 COMP This knob adjusts the amount of compression effect on the channe...

lang:en **score:33** filesize: 3.12 M page_count: 17 document date: 2019-06-14

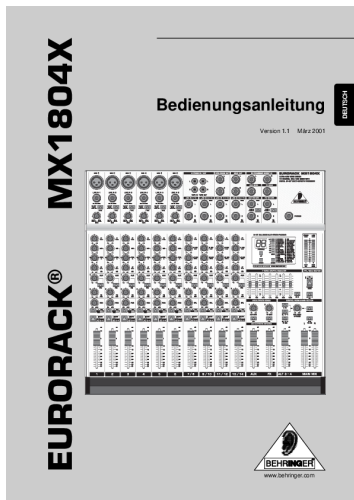

[\[pdf\]](#) User Manual

DATA MANFULL MX1804X GER Rev D p65 derks Behringer User Manual German mx1804x p0064 m de midimanuals manuals behringer user manual german |||

EURORACK MX1804X DEUTSCH Bedienungsanleitung Version 1.1 Mrz 2001

www.behringer.com SICHERHEITSHI ... erleichtern. Weiter hinten in diesem

Handbuch wird erklrt, wie Sie mit dem BEHRINGER ULTRALINK PRO **MX882** die Kapazitt und Flexibilitt Ihres Mischpults auf preisgnstige Weise erweitern knnen.

Zuerst m...

lang:de **score:32** filesize: 1.53 M page_count: 29 document date: 2001-03-12



[\[pdf\]](#) Warranty


BEHRINGER MX882 P0056 Product Information Document Atonal Behringer Brosur startelektronik tr

behringer |||

Product Information Document Rackmount Mixers 6-53 -*/130 .9 Ultra-Flexible 8-Channel Splitter/Mixe ... tion ensure long life # 3-Year Warranty Program* #

Conceived and designed by BEHRINGER Germany The **MX882** is definitely one piece of gear every audio engineer and musician should always have close at ...

 lang:en **score:32** filesize: 521.51 K page_count: 3 document date: 2017-08-16

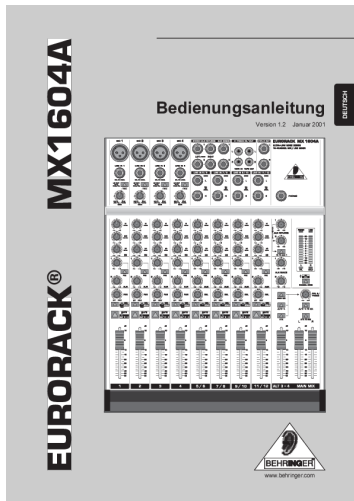


[\[pdf\]](#) User Manual

DATA MANFULL MX1604A GER Rev J p65 p jannusch Behringer User Manual German mx1604a p0087
m de midimanuals manuals behringer user manual german |||

EURORACK MX1604A DEUTSCH Bedienungsanleitung Version 1.2 Januar 2001
www.behringer.com EURORACK M ... ODESK MX9000. Weiter hinten in diesem Handbuch wird erklärt, wie Sie mit dem BEHRINGER ULTRALINK PRO **MX882** die Kapazität und Flexibilität Ihres Mischpults auf preisgünstige Weise erweitern können. Zuerst m...

 lang:de **score:32** filesize: 1.85 M page_count: 28 document date: 2001-08-20

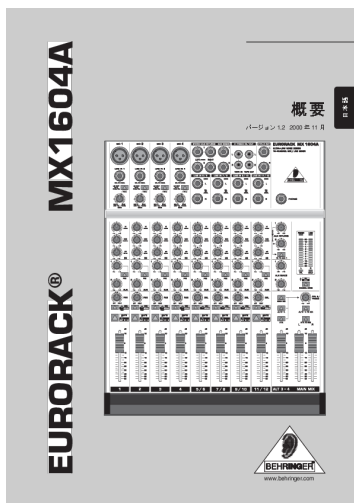


[\[pdf\]](#) User Manual

DATA MANSHT MX1604A JPN Rev G p65 jannusch mx1604a p0087 m ja midimanuals manuals
behringer user manual japanese |||

EURORACK MX1604A 1.2 2000 11 www.behringer.com BEHRINGER BEHRINGER
EURORACK EURODESK 2000 BEH ... FL 5. 2 RCA 2- 2TK TO CONTROL ROOM
Solo Mono-PFL PFL EURORACK BEHRINGER ULTRALINK PRO **MX882** 4 dBu 2-
Track Out XLR 2- 6 CONTROL ROOM OUT Alt 3-4 2-Track 4. EUROR...

 lang:de **score:31** filesize: 1.17 M page_count: 9 document date: 2001-01-30

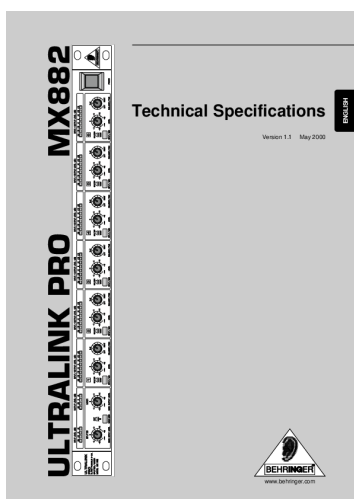


[\[pdf\]](#) Specifications

ULTRALINK PRO MX882 Technical Specifications english Revision B BEHRINGER 248 6306 behringer
mx882 specifications 45832 parts express pedocs specs |||

ULTRALINK PRO **MX882** ENGLISH Technical Specifications Version 1.1 May 2000
www.behringer.com **MX882** ULTRALINK PRO Ultra-flexible, multi-purpose 8-channel
Signal Router for stage and studio applications s Use it as Effects Mixer, for P.A.
Monitoring, Live Sound Systems, Theaters, Conference Rooms, ...

 lang:en **score:31** filesize: 322.67 K page_count: 5 document date: 2020-02-07

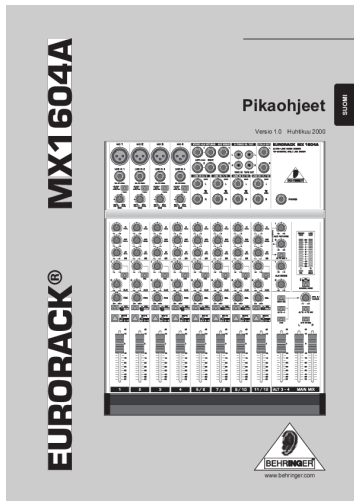


[\[pdf\]](#) User Manual

DATA MANSHT MX1604A FIN Rev A p65 p jannusch Behringer User Manual Finnish mx1604a p0087 m fi midimanuals manuals behringer user manual finnish |||

EURORACK MX1604A SUOMI Pikaohjeet Versio 1.0 Huhtikuu 2000

www.behringer.com TURVALLISUUSOHJEET ... n yksi lis Stereo-Line-tulo, johon voidaan liitt mys toisen EURORACK:in tai BEHRINGER ULTRALINK PRO **MX882**:n menosignaali. Meno Main Mix-summasignaali 4 dBu:n tasolla ei sijaitse ainoastaan 2-Track-Ou...

 lang:fi **score:31** filesize: 971.85 K page_count: 9 document date: 2001-08-20

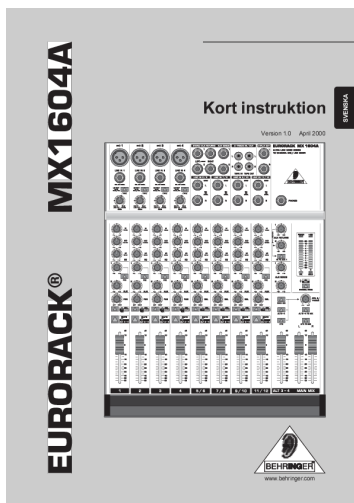


[\[pdf\]](#) User Manual

DATA MANSHT MX1604A SVE Rev A p65 p jannusch Behringer User Manual Swedish mx1604a p0087 m sv synthmanuals manuals behringer user manual swedish |||

EURORACK MX1604A SVENSKA Kort instruktion Version 1.0 April 2000

www.behringer.com SKERHETSANVISN ... ing, vilken ocks kan kopplas till utnggssignalen fr en annan EURORACK eller BEHRINGER ULTRALINK PRO **MX882**. Utngng Signalen fr Huvud Mix Summan har en niv av 4 dBu, inte endast vid 2-sprs Out Cinch Jac...

 lang:no **score:30** filesize: 950.39 K page_count: 9 document date: 2001-08-20

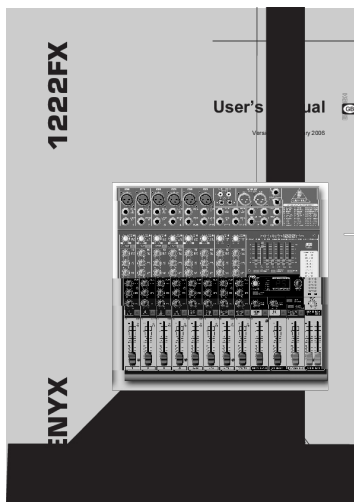


[\[pdf\]](#) User Manual Installation Guide Instructions Guide

Behringer Stereo Equalizer 1222FX User Guide 7504228d 3cdf 466a a3ad 9207946debd9 archive org manualsonline id

ENGLISH 1222FX Users Manual Version 1.0 January 2006 XENYX XENYX 1222FX IMPORTANT SAFETY INSTR ... as stereo line input. Alternatively, the output signal of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can also be connected. If you connect a hi-fi amplifier with a source selection switch to the ...

 lang:en **score:30** filesize: 2.18 M page_count: 0 document date: 0000-00-00

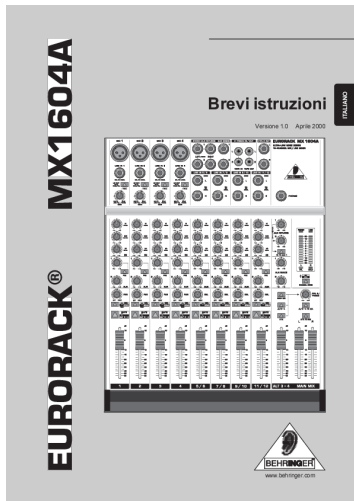

[\[pdf\]](#) User Manual

DATA MANSHT MX1604A ITL Rev A p65 p jannusch Behringer User Manual Italian mx1604a p0087 m
it midimanuals manuals behringer user manual italian |||

EURORACK MX1604A ITALIANO Brevi istruzioni Versione 1.0 Aprile 2000

www.behringer.com ISTRUZIONI ... anche essere collegato al segnale di uscita di un secondo EURORACK o di un BEHRINGER ULTRALINK PRO **MX882**. Uscita Il segnale principale Mix Sum dotato di un livello di 4 dBu, disponibile non solo me...

lang:it **score:30** filesize: 986.72 K page_count: 9 document date: 2001-08-20



[\[pdf\]](#)

DATA MANSHT MX882 JPN Rev D p65 bathke P0056 M JA behringer 80 assets |||

ULTRALINK PRO **MX882** 1.1 2001 3 www.behringer.com , BEHRINGER

BEHRINGER 2001 BEHRINGER ULTRALINK PRO **MX882** 1. 2. 2.1 2.2 2.3 3

ULTRALINK PRO **MX882** 3. 3.1 4 ULTRALINK PRO **MX882** 3.2 5 ULTRALINK PRO

MX882 6 ULTRALINK PRO **MX882** 4. -24/-12/0/ 6 dB -24/-12/0/ 6 dB -24/-18/-12/-6/0/ 6/ 12...

lang:it **score:30** filesize: 1.18 M page_count: 7 document date: 2010-12-13



 
[\[pdf\]](#) Warranty

BEHRINGER MX882 P0056 Product Information Document 8849994612766 mediadl musictribe media
sys master h1d hf1

Product Information Document Rackmount Mixers 6-53 -*/130 .9 Ultra-Flexible 8-Channel Splitter/Mixe ... tion ensure long life # 3-Year Warranty Program* #

Conceived and designed by BEHRINGER Germany The **MX882** is definitely one piece of gear every audio engineer and musician should always have close at ...

lang:en **score:30** filesize: 3.11 M page_count: 5 document date: 2015-03-10

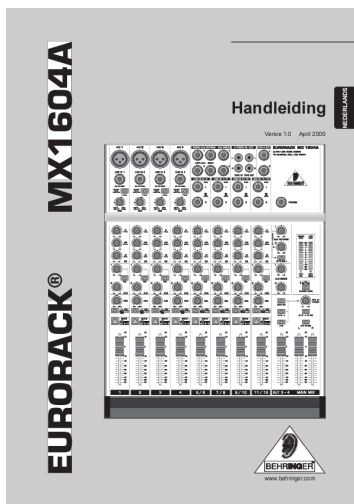


[\[pdf\]](#) User Manual

DATA MANSHT MX1604A NED Rev A p65 p jannusch Behringer User Manual Dutch mx1604a p0087 m nl synthmanuals manuals behringer user manual dutch |||

EURORACK MX1604A NEDERLANDS Handleiding Versie 1.0 April 2000

www.behringer.com VEILIGHEIDSINSTRU ... uwer beschikking, die ook met het uitvoersignaal van een tweede ERUORACK of BEHRINGER ULTRALINK PRO **MX882** in verbinding gebracht kan worden. Uitgang De hoofdmixsom heeft een niveau van 4 dBu. Dit bes...

 lang:nl score:30 filesize: 971.29 K page_count: 9 document date: 2001-08-20

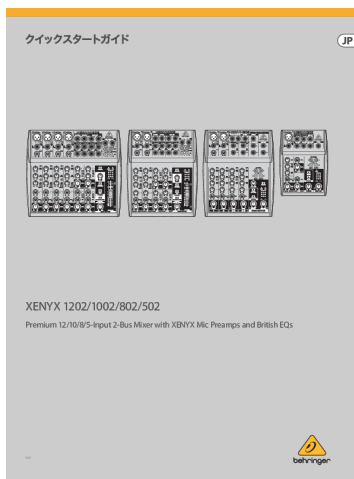


[\[pdf\]](#) Quick Start Guide Guide Warranty

Quick Start Guide Japanese Mixer Analog 8 in 2 Bus Tích Hợp Mic Preamp EQ Behringer 802 XENYX 1202 1002 502 QSG JP mediadl musictribe media PLM data docs P0575 |||

XENYX 1202/1002/802/502 Premium 12/10/8/5-Input 2-Bus Mixer with XENYX Mic Preamps and British EQs V ... 0 dBu MAIN MIX XENYX 502 802 18 2-TRACK INPUT 2-TRACK INPUT CD 1 XENYX ULTRALINK PRO **MX882** 19 2-TRACK OUTPUT MAIN OUT MAIN MIX MAIN MIX 20 2-TR TO MIX 2-TR TO MIX ...

 lang:de score:30 filesize: 3.16 M page_count: 9 document date: 2021-01-26

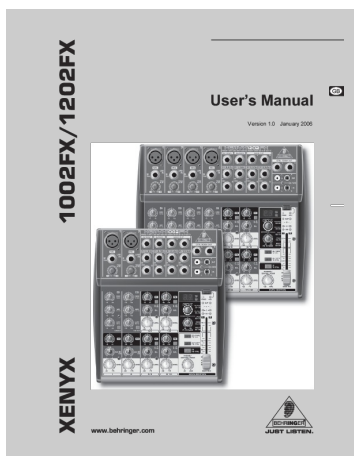


[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Xenyx 1002FX behringer xenyx 1002fx user manual 1 manualsandmore |||

1002FX/1202FX Users Manual Version 1.0 January 2006 XENYX XENYX

1002FX/1202FX IMPORTANT SAFETY ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected. Alternatively the line or tape output of a hi-fi amplifier with source selec...

 lang:en score:30 filesize: 1.57 M page_count: 13 document date: 2019-07-23

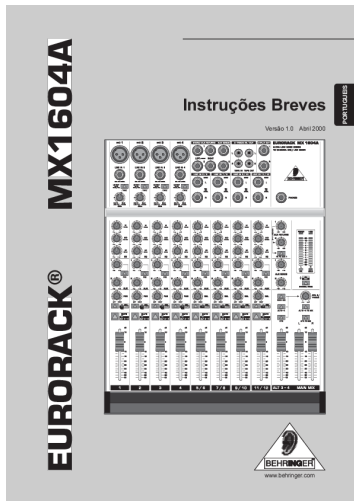

[\[pdf\]](#) User Manual


DATA MANSHT MX1604 POR Rev A p65 p jannusch Behringer MX1604A User Manual Portuguese mx1604a p0087 m pt midimanuals manuals behringer user manual portuguese |||

EURORACK MX1604A PORTUGUEIS Instrues Breves Verso 1.0 Abril 2000

www.behringer.com INSTRUES DE SE ... qual poder tambm ser conectada com o sinal de sada dum segundo EURORACK ou BEHRINGER ULTRALINK PRO **MX882**.

Sada O sinal da soma de mistura principal Main Mix Sum tem um nvel de 4 dBu, no smente na ...

 lang:pt **score:30** filesize: 1006.54 K page_count: 10 document date: 2001-08-20

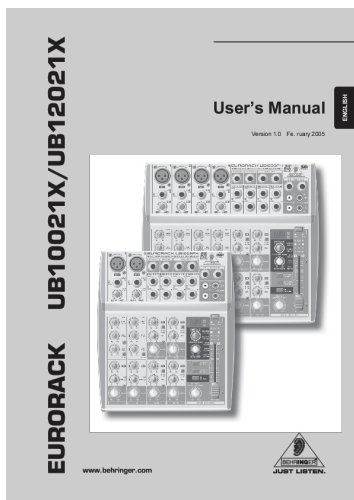


[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Eurorack UB1002FX behringer eurorack ub1002fx user manual 1 manualsandmore |||

EURORACK UB10021X/UB12021X ENGLISH Users Manual Version 1.0 February 2005 EURORACK UB10021X/UB12 ... usld as a standard stlrlo linl input, so thl output of a slcond EURORACK or BEHRINGER ULTRALINK PRO **MX882** can bl connlctld.

Altlnrativly thl linl or tapl output of a hi-fi amplifilr with sourcl sllecti...

 lang:en **score:30** filesize: 2.63 M page_count: 12 document date: 2019-07-24




[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Eurorack UB1222FX PRO behringer eurorack ub1222fxpro user manual 1 manualsandmore |||

ENGLISH UB1222FX-PRO Users Manual Version 1.0 October 2003 EURORACK

EURORACK UB1222FX-PRO IMPO ... stereo line input. Alternatively, the output signal of a second EURORACK or BEHRINGER ULTRALINK PRO **MX882** can also be connected. If you connect a hi-fi amplifier with a source selection switch to the ...

 lang:en **score:30** filesize: 1.85 M page_count: 15 document date: 2019-07-23

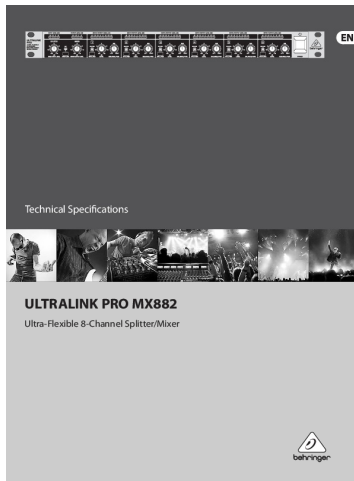

[\[pdf\]](#) Specifications Datasheet Diagram

میکسر کلیات فنی دستگاه میکسر Behringer MX882 Proavl Data Sheet proavl net 2020 10 |||

Technical Specifications ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer 2 ULTRALINK PRO **MX882** Technical Specifications ULTRALINK PRO **MX882** Ultra-Flexible 8-Channel Splitter/Mixer Ultra-low noise 8 in/2 out line mixer and 2 in/8 out line splitter Each channel can operate independently ...

lang:en score:29 filesize: 412.11 K page_count: 3 document date: 2020-10-14




[\[pdf\]](#) User Manual

DATA MANSHT MX1804X DEN Rev A p65 derks Behringer User Manual Danish mx1804x p0064 m da synthmanuals manuals behringer user manual danish |||

EURORACK MX1804X DANSK Kort vejledning Udgave 1.1 Marts 2001
www.behringer.com SIKKERHEDSINSTRUKT ... ghed til mixet, til hvilket
outputsignalet fra en yderligere EURORACK eller BEHRINGER ULTRALINK PRO
MX882 kan forbindes. Output Hovedmixtotalsignalet er ikke kun p 2-spors ud-
klemmestikdser med et ni...

 lang:da score:29 filesize: 1.22 M page_count: 13 document date: 2001-03-12

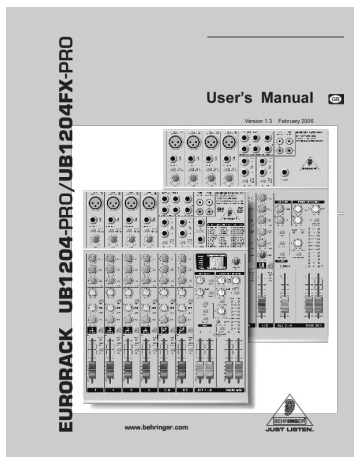


[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Eurorack UB1204 PRO behringer eurorack ub1204pro user manual 1 manualsandmore |||

EURORACK UB1204-PRO/UB1204FX-PRO Users Manual Version 1.3 February 2006 EURORACK UB1204-PRO/UB120 ... stereo line input. Alternatively, the output
signal of a second EURORACK or BEHRINGER ULTRALINK PRO **MX882** can also
be connected. If you connect a hi-fi amplifier with a source selection switch to the ...

 lang:en score:29 filesize: 1.96 M page_count: 13 document date: 2019-07-23

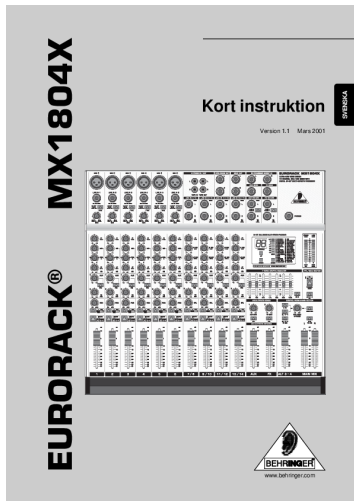

[\[pdf\]](#) User Manual

DATA MANSHRT MX1804X SVE Rev A p65 derks Behringer User Manual Swedish mx1804x p0064 m sv synthmanuals manuals behringer user manual swedish |||

 
EURORACK MX1804X SVENSKA Kort instruktion Version 1.1 Mars 2001

www.behringer.com SKERHETSANVISNI ... illgnglig hos mixen, till vilken

utngngssignalen hos en andra EURORACK eller BEHRINGER ULTRALINK PRO

MX882 kan kopplas. Utngng Signalen fr huvudmix summan finns inte endast p 2-spr s ut-cinch kontakten m...

lang:no **score:29** filesize: 1.21 M page_count: 13 document date: 2001-03-12

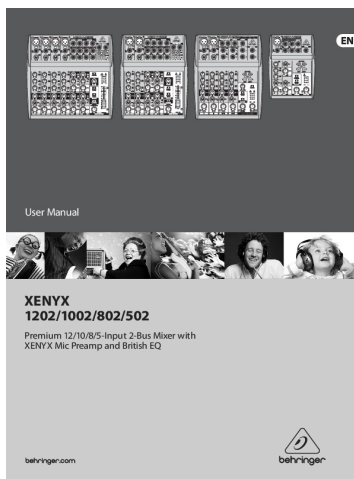

[\[pdf\]](#) User Manual Instructions Warranty


BEHRINGER XENYX 1002 02 MANUAL Manual Hub drive google file d

1zDj8vGZZOGAXdGz9OTvhh2eG4toXqSs9 preview |||

User Manual XENYX 1202/1002/802/502 Premium 12/10/8/5-Input 2-Bus Mixer with XENYX Mic Preamp and Br ... be used as a standard stereo line input, so the output of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected.

Alternatively the line or tape output of a hi-fi amplifier with source selec...

 lang:en **score:29** filesize: 3.12 M page_count: 12 document date: 2023-09-11

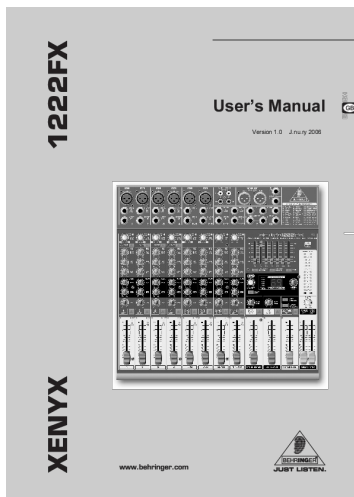


[\[pdf\]](#) User Manual Installation Guide Instructions

Provided by ManualsAndMore Download User Manual Behringer Xenyx 1222FX behringer xenyx 1222fx user manual 1 manualsandmore |||

ENGLISH 1222FX Users Manual Version 1.0 J.nu.ry 2006 XENYX XENYX 1222FX

IMPORTANT SAFETS INSTRU ... as stlrlo linl input. Altlnatively, thl output signal of a slcond XENYX or BEHRINGER ULTRALINK PRO **MX882** can also bl connlctld. If you connlct a hi-fi ampliflr with a sourcl sllection switch to thl C...

 lang:en **score:29** filesize: 4.35 M page_count: 15 document date: 2019-07-24

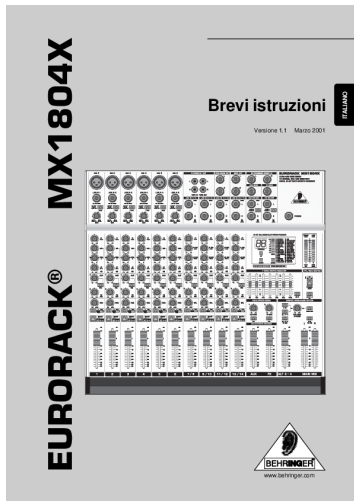


[\[pdf\]](#) User Manual

DATA MANSHT MX1804X ITL Rev A p65 derks Behringer User Manual Italian mx1804x p0064 m it
synthmanuals manuals behringer user manual italian |||

EURORACK MX1804X ITALIANO Brevi istruzioni Versione 1.1 Marzo 2001

 www.behringer.com ISTRUZIONI D ... ale pu essere collegato il segnale di uscita di
un secondo EURORACK o di un BEHRINGER ULTRALINK PRO **MX882**. Uscita Il
segnale della somma del mix principale non si trova solo nelle due prese esterne a ...
lang:it **score:29** filesize: 1.22 M page_count: 13 document date: 2001-03-12

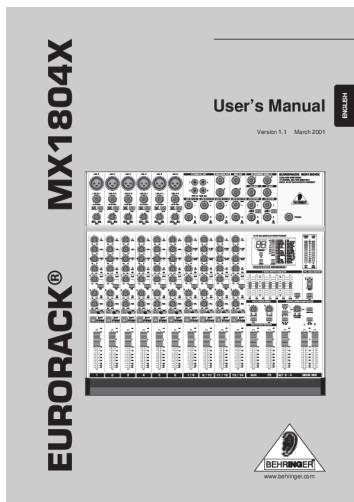

[\[pdf\]](#) User Manual Instructions


DATA MANFULL MX1804X ENG Rev D p65 derks Version 1 March 2001 Synth Manuals synthmanuals 7
EURORACK INTRODUCTION Congratulations In purchasing our you have acquired a mixer whose small
size belies its incredible versatility and audio performance I would like to thank the following people help
on Project has made it all possible Δ The existing users of BEHRINGER equipment mx1804x p0064 m
en home httpd data media 4 manuals behringer user manual c3 zzounds

468fef64d1e7888b3caaf20def2d821b Behringer User Manual |||

EURORACK MX1804X ENGLISH User s Manual Version 1.1 March 2001

www.behringer.com EURORACK MX1804X ... ich facilitate the work with your
MX1804X. Later we will see how adding the BEHRINGER ULTRALINK PRO **MX882**
to your system can inexpensively expand the capacity and flexibility of you mixing
power even ...

 lang:en **score:29** filesize: 1.46 M page_count: 27 document date: 2001-03-12

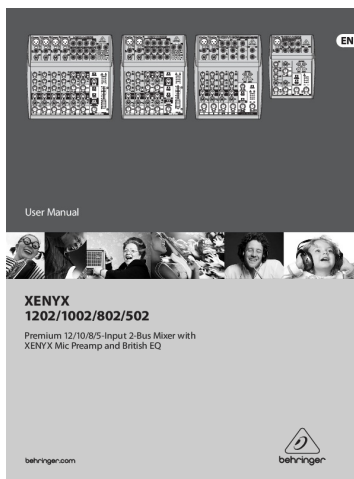

[\[pdf\]](#) User Manual Instructions Warranty

BEHRINGER XENYX 802 02 MANUAL Manual Hub drive google file d 1XRINhFmrqQeOQHI
fPSRqXysVUaPU05A preview |||

User Manual XENYX 1202/1002/802/502 Premium 12/10/8/5-Input 2-Bus Mixer with
XENYX Mic Preamp and Br ... be used as a standard stereo line input, so the output
of a second XENYX or BEHRINGER ULTRALINK PRO **MX882** can be connected.
Alternatively the line or tape output of a hi-fi amplifier with source selec...

lang:en **score:29** filesize: 3.12 M page_count: 12 document date: 2023-09-11