

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MATRIX](#) /

› [MATRIX MR800 Tuner Metronome Instruction Manual](#)

MATRIX MR800

MATRIX MR800 Tuner Metronome Instruction Manual

Brand: MATRIX

Model: MR800

INTRODUCTION

The MATRIX MR800 is a versatile LED accent metronome designed to assist musicians with timing and rhythm practice. This manual provides essential information for setting up, operating, and maintaining your device.



Figure 1: Front view of the MATRIX MR800 Tuner Metronome.

Key Features:

- 8 LED for pendulum simulation
- Fully adjustable tempo
- Earphone output

SETUP

Battery Installation

The MATRIX MR800 operates on alkaline batteries. To install or replace batteries, locate the battery compartment on the back of the unit. Insert the batteries according to the polarity indicators. Ensure the compartment cover is securely closed.

Power On/Off

To power on the device, locate the power button, typically on the side of the unit. Press and hold for a few seconds until the display activates. To power off, press and hold the same button.

OPERATING

Tempo Adjustment

Adjust the tempo using the central dial. Rotate the dial clockwise to increase the beats per minute (BPM) and counter-clockwise to decrease it. The tempo range is fully adjustable to suit various musical needs.

Beat and Rhythm Selection

The metronome offers different beat and rhythm patterns. Use the designated buttons or switches to cycle through available options, such as different time signatures or rhythmic subdivisions.

Sound and Visual Indicators

The MR800 provides an audible click to mark the tempo. It also features 8 LEDs that simulate a pendulum, offering a visual cue for the beat. The volume can be adjusted using the volume control on the side of the unit. For private practice, connect headphones to the earphone output jack.

Using the Kickstand

The device includes a built-in kickstand for convenient tabletop use. Extend the kickstand from the back of the unit to prop it up at an optimal viewing angle. Fold it back in for portability.

MAINTENANCE

Cleaning

Wipe the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.

Storage

When not in use for extended periods, remove the batteries to prevent leakage and store the metronome in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

No Sound or Irregular Beat

- Check battery levels and replace if necessary.
- Ensure the volume is not set to minimum or muted.
- Verify that the tempo is set to an audible range.

Volume Too Loud

The MATRIX MR800 is known for its loud output. Use the volume control slider on the side to adjust the sound level. If using headphones, adjust the volume to a comfortable level to protect your hearing.

SPECIFICATIONS

Product Details:

- **Item Weight:** 5.6 ounces
- **Product Dimensions:** 8 x 5.5 x 1.9 inches
- **Item model number:** MR800
- **Battery type:** Alkaline
- **Color:** Black
- **Connectivity Technology:** 3.5 mm Jack (for earphone output)



Figure 2: Dimensions of the MATRIX MR800 Tuner Metronome.

WARRANTY & SUPPORT

Warranty Information

For warranty details and support, please refer to the documentation included with your purchase or contact MATRIX customer service directly.