

## Siku 0801

# Siku 0801 Excavator Toy Instruction Manual

Model: 0801

## 1. PRODUCT OVERVIEW

---

The Siku 0801 Excavator is a detailed die-cast model designed for play and collecting. This toy features a realistic yellow and black design, constructed from durable metal with plastic components. It includes a movable excavator arm and a cabin that can rotate, offering interactive play.

### Key Features:

- Robust metal and plastic construction.
- Rotating cabin for dynamic play.
- Movable excavator arm for realistic operation.

**Safety Warning: Choking Hazard - Small parts. Not for children under 3 years.**



Image 1.1: Front-side view of the Siku 0801 Excavator, showcasing its yellow body and black movable arm.

## 2. SETUP

The Siku 0801 Excavator requires no assembly. It is ready for use directly out of the packaging.

1. Carefully remove the excavator from its packaging.
2. Inspect the toy for any visible damage or loose parts.
3. Ensure all packaging materials are safely discarded, especially away from small children.



Image 2.1: The Siku 0801 Excavator held in a hand, illustrating its compact size (approximately 1.5 inches or 3 cm tall).

## 3. OPERATING INSTRUCTIONS

This model operates manually, allowing for direct interaction with its movable parts.

- **Movable Excavator Arm:** Gently articulate the excavator arm at its hinge points to raise, lower, and extend the bucket. Avoid excessive force to prevent damage.
- **Rotating Cabin:** The cabin is designed to rotate 360 degrees. Hold the base of the excavator and carefully turn the cabin to the desired position.



Image 3.1: The Siku 0801 Excavator with its arm fully extended, demonstrating its movable functionality.

## 4. MAINTENANCE

---

Proper care will ensure the longevity of your Siku 0801 Excavator.

- **Cleaning:** Wipe the toy with a soft, dry cloth to remove dust and dirt. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Do not immerse in water.
- **Storage:** Store the excavator in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check for any loose parts or signs of wear.

## 5. TROUBLESHOOTING

---

For a simple mechanical toy, troubleshooting is generally straightforward.

- **Stiff Moving Parts:** If the excavator arm or cabin becomes stiff, check for any trapped debris or dust in the joints. Gently remove any obstructions. Avoid applying lubricants, as this may attract more dirt.
- **Damaged Parts:** If any part of the toy is broken or damaged, discontinue use, especially if small pieces have detached, posing a choking hazard. Contact customer support for assistance.

## 6. SPECIFICATIONS

---

Feature	Detail
Brand	Siku
Model Name	0801
Material	Metal / Plastic
Dimensions (L x W x H)	2.68 x 1.26 x 1.85 inches (6.8 x 3.2 x 4.7 cm)
Item Weight	43 Grams
Scale	1:50 Scale
Operation Mode	Manual
Recommended Minimum Age	36 Months (3 Years)
Assembly Required	No
Batteries Required	No
Color	Yellow / Black

## 7. WARRANTY AND SUPPORT

Specific warranty information for the Siku 0801 Excavator is not provided in this manual. For details regarding warranty coverage or to obtain support, please contact the manufacturer directly.

**Manufacturer:** Sieper GmbH

For further assistance, please visit the official Siku website or contact their customer service department.