

Manuals.plus /

› Tefal /

› Tefal FF 1000 Maxifry Electric Deep Fryer User Manual

Tefal FF 1000

Tefal FF 1000 Maxifry Electric Deep Fryer User Manual

Model: FF 1000

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Tefal FF 1000 Maxifry electric deep fryer. Please read all instructions carefully before first use and retain this manual for future reference. Proper use and maintenance will ensure optimal performance and longevity of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the deep fryer.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Ensure the oil level is between the MIN and MAX marks to prevent overflow or insufficient heating.
- Never mix different types of oil or fat.
- Always ensure the lid is properly closed during operation to prevent oil splatters.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal FF 1000 Maxifry deep fryer.



Figure 1: Front view of the Tefal FF 1000 Maxifry electric deep fryer with the lid closed. This image shows the main body, the temperature control dial, the power indicator light, and the lid release button.



Figure 2: Top-down view of the Tefal FF 1000 Maxifry electric deep fryer with the lid open, revealing the removable frying basket and the oil tank. The basket is shown containing food, illustrating its capacity and design for easy lifting.

Key Components:

- **Lid:** Covers the frying compartment, often with a viewing window and filter.
- **Frying Basket:** Used to hold food for frying and to lift it out of the oil.
- **Removable Oil Tank:** Contains the cooking oil and is designed for easy cleaning.
- **Heating Element:** Located beneath the oil tank to heat the oil.
- **Temperature Control Dial:** Adjusts the desired cooking temperature.
- **Power Indicator Light:** Illuminates when the fryer is powered on.
- **Ready Indicator Light:** Illuminates when the set temperature is reached.
- **Lid Release Button:** For safely opening the lid.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and stickers from the appliance. Retain packaging for storage if desired.
2. **Initial Cleaning:** Before first use, wash the removable oil tank and frying basket with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the fryer with a damp cloth.
3. **Placement:** Place the deep fryer on a stable, heat-resistant, and dry surface, away from walls and flammable materials. Ensure adequate ventilation around the appliance.
4. **Fill with Oil:** Pour cooking oil or solid fat into the removable oil tank. Ensure the oil level is between the MIN and MAX fill lines indicated inside the tank. Do not overfill or underfill. The maximum oil capacity is approximately 2.2 kilograms.
5. **Insert Basket:** Place the frying basket into the oil tank.
6. **Close Lid:** Ensure the lid is securely closed.

5. OPERATING INSTRUCTIONS

1. **Connect Power:** Plug the power cord into a suitable grounded electrical outlet (220V). The power indicator light will illuminate.
2. **Set Temperature:** Turn the temperature control dial to the desired cooking temperature. Refer to cooking charts for recommended temperatures for various foods.
3. **Preheating:** Allow the fryer to preheat. The ready indicator light will turn off when the oil has reached the set temperature. This may take several minutes.
4. **Prepare Food:** While the oil is heating, prepare your food. Ensure food is dry to minimize splattering. Do not overload the basket; the maximum food capacity is 1 kilogram.
5. **Lower Food:** Once the oil is at temperature, carefully lower the frying basket containing the food into the hot oil. Use the handle to avoid direct contact with hot oil.
6. **Frying:** Close the lid and fry for the recommended time. Monitor the cooking process through the viewing window if available.
7. **Remove Food:** When cooking is complete, carefully lift the frying basket out of the oil and hook it onto the side of the fryer to allow excess oil to drain.
8. **Serve:** Transfer the fried food to a serving dish lined with paper towels to absorb any remaining oil.
9. **Turn Off:** After use, turn the temperature control dial to the "OFF" position and unplug the appliance from the wall outlet.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will extend the life of your deep fryer.

1. **Cool Down:** Always allow the fryer and oil to cool completely before cleaning. This may take several hours.
2. **Drain Oil:** Once cooled, carefully remove the oil tank and pour the used oil into a suitable container for disposal or storage.
3. **Wash Components:** The removable oil tank and frying basket can be washed in warm, soapy water or placed in a dishwasher if specified by the manufacturer (check product specific instructions). Rinse thoroughly and dry completely.
4. **Clean Exterior:** Wipe the exterior of the fryer body with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Filter Replacement:** If your model has a replaceable filter, follow the manufacturer's instructions for replacement.
6. **Storage:** Store the clean and dry fryer in a cool, dry place.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Fryer does not turn on.	Not plugged in; power outlet malfunction; thermal cut-out activated.	Ensure plug is securely inserted. Test outlet with another appliance. Allow fryer to cool completely and reset if applicable (check manual for specific reset instructions).
Oil not heating.	Temperature dial not set; heating element malfunction.	Ensure temperature dial is set to a desired temperature. If problem persists, contact customer support.
Oil overflowing during frying.	Oil tank overfilled; food contains too much moisture; too much food in basket.	Ensure oil is filled between MIN/MAX lines. Pat food dry before frying. Do not exceed maximum food capacity (1 kg).
Food not cooking evenly or browning.	Oil temperature too low; too much food in basket; old oil.	Allow oil to reach set temperature. Fry in smaller batches. Replace old oil.

8. SPECIFICATIONS

Detailed technical specifications for the Tefal FF 1000 Maxify.

Model: FF 1000

Brand: Tefal

Power: 1900 Watts

Voltage: 220V

Oil Capacity: Approximately 2.2 Kilograms

Food Capacity: Approximately 1 Kilogram

Material: Metal Aluminium

Color: White

Product Dimensions (L x W x H): 35 x 35 x 26 cm

Item Weight: 3.19 Kilograms

Features: Removable oil tank

Spare Parts Availability: 2 Years

9. WARRANTY AND SUPPORT

Tefal products are designed for durability and performance. This appliance comes with a manufacturer's warranty, the terms of which are detailed in the warranty card included with your purchase. Please retain your proof of purchase for any warranty claims.

For technical assistance, spare parts, or further information, please visit the official [Tefal website](#) or contact their customer service department. Spare parts are generally available for a period of 2 years from the date of purchase.