

Tupperware Mixed Food Storage Container

Tupperware Mixed Food Storage Container User Manual

Model: Mixed Food Storage Container

INTRODUCTION

This manual provides essential instructions for the proper use and care of your Tupperware Mixed Food Storage Container. Designed for versatility and durability, this container is suitable for storing various food items, including baked goods like cake. Please read these instructions carefully before first use to ensure optimal performance and longevity of your product.

SETUP AND FIRST USE

- 1. **Unpacking:** Carefully remove the container from its packaging. Inspect for any signs of damage.
- 2. **Initial Cleaning:** Before first use, wash the container and lid thoroughly with warm, soapy water. Rinse completely and allow to air dry, or dry with a clean cloth. This removes any manufacturing residues.



Image: An assortment of Tupperware food storage containers, demonstrating various shapes and sizes, including the type with a flip-top lid. These containers are designed for efficient food storage.

OPERATING INSTRUCTIONS

Food Storage

- **Filling:** Place food items into the container. Ensure there is adequate space between the food and the lid to allow for proper sealing.

- **Sealing:** To close, align the lid with the container and press down firmly around the edges until the lid is securely sealed. For flip-top lids, ensure the flip mechanism is closed.
- **Opening:** To open, lift the edge of the lid or open the flip-top mechanism.

Microwave Use

This container is microwaveable. When using in a microwave:

- **Ventilation:** Always open the flip-top or slightly lift one corner of the lid to vent steam during microwaving. This prevents pressure buildup.
- **Heating Time:** Heat food for short intervals, stirring if necessary, to ensure even heating. Avoid prolonged heating, which can damage the container.
- **Staining:** Certain foods, such as tomato-based sauces or curries, may cause staining. This does not affect the container's performance.

Note: The container is designed for reheating, not cooking. Do not use in conventional ovens, under a grill, or on a stovetop.

CARE AND MAINTENANCE

- **Hand Wash Only:** Wash the container and lid by hand using warm water and mild dish soap. Use a soft sponge or cloth to prevent scratching.
- **Rinsing:** Rinse thoroughly to remove all soap residue.
- **Drying:** Allow to air dry completely or dry with a clean, lint-free cloth before storing to prevent odors and bacterial growth.
- **Stain Removal:** For stubborn stains, create a paste of baking soda and water, apply to the stain, let it sit for a few hours, then wash as usual.
- **Odor Removal:** To remove odors, place a crumpled piece of newspaper or a small amount of baking soda inside the container and seal it overnight. Wash thoroughly afterward.

Important: This item is not dishwasher safe. Dishwasher use may cause warping or damage to the plastic.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not seal properly.	Food overfilled; lid not aligned; lid or container warped.	Reduce food quantity; realign lid and press firmly; if warped, replace the item.
Container retains odors.	Strong-smelling food stored for extended periods.	Refer to "Odor Removal" in the Care and Maintenance section.
Staining from food.	Contact with highly pigmented foods (e.g., tomato sauce, turmeric).	Refer to "Stain Removal" in the Care and Maintenance section. Staining does not affect functionality.

SPECIFICATIONS

- **Brand:** Tupperware
- **Model:** Mixed Food Storage Container

- **Material:** Plastic
- **Material Feature:** Reusable
- **Closure Type:** Flip Top
- **Recommended Use:** Food storage, particularly for items like cake
- **Microwaveable:** Yes (with lid vented)
- **Dishwasher Safe:** No (Hand Wash Only)
- **Care Instructions:** Hand Wash Only
- **Container Shape:** Rectangular (typical for this type)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0002L8R4I>

More documents and user manuals: <https://manuals.plus/>