

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Scotch](#) /

> [Scotch Desktop Tape Dispenser, Silvertech Two-Tone \(C60-ST\) User Manual](#)

Scotch C60-ST

Scotch Desktop Tape Dispenser, Silvertech Two-Tone (C60-ST) User Manual

1. PRODUCT OVERVIEW

The Scotch Desktop Tape Dispenser, Model C60-ST, is designed for convenient, one-handed tape dispensing in office or home environments. It features a durable construction with a weighted, non-skid base to ensure stability during use. The dispenser accommodates standard 1-inch core tape rolls, up to 3/4 inch wide and 36 yards long. Its two-tone silver and black design offers a sleek aesthetic suitable for various desk decors.



Figure 1: Scotch Desktop Tape Dispenser, Silvertech Two-Tone (C60-ST)

2. SETUP INSTRUCTIONS

2.1 Loading Tape

Follow these steps to load a new roll of tape into your dispenser:

1. Gently pull up the tape hub (the central part where the tape roll sits) from the dispenser base.
2. Place a new roll of tape onto the hub, ensuring the adhesive side of the tape is facing down and will unroll from the back of the dispenser.
3. Push the tape hub back down into the dispenser until it securely snaps into place.
4. Pull the leading edge of the tape forward and across the cutting blade.



Figure 2: Tape dispenser with tape correctly loaded

3. OPERATING INSTRUCTIONS

3.1 Dispensing Tape

To use the tape dispenser:

1. Hold the dispenser firmly on a flat surface. The weighted base and non-skid pads will help keep it stable.
2. Pull the desired length of tape forward from the roll.
3. Once the desired length is achieved, press the tape down against the cutting blade with a swift, downward motion to cleanly cut the tape.

1 Dispenser & 1 Roll of Tape

Includes 3/4 Inch Tape



Figure 3: Dispensing tape from the unit

4. MAINTENANCE

4.1 Cleaning

To maintain optimal performance, periodically clean your tape dispenser:

- Wipe the exterior of the dispenser with a soft, damp cloth. Avoid abrasive cleaners.
- Remove any adhesive residue or small pieces of tape that may accumulate around the cutting blade or tape path. Use a non-sharp tool for this to prevent damage.

4.2 Blade Care

The dispenser is equipped with a high-quality cutting blade designed for longevity. If the blade's effectiveness diminishes over time, ensure it is free from tape residue. The blade is not user-replaceable.

5. TROUBLESHOOTING

Issue	Possible Cause	Solution
-------	----------------	----------

Issue	Possible Cause	Solution
Tape does not cut cleanly.	Residue on blade; dull blade.	Clean the cutting blade. Ensure tape is pulled firmly against the blade.
Dispenser slides during use.	Surface is too smooth; non-skid base is dirty.	Ensure the surface is clean and dry. Clean the non-skid pads on the base.
Tape roll falls out of place.	Tape hub not properly seated.	Ensure the tape hub is pushed down until it snaps securely into the dispenser base.

6. SPECIFICATIONS

Feature	Detail
Model Number	C60-ST
Dimensions (L x W x H)	3 x 2.25 x 6.25 inches
Item Weight	15.8 ounces
Color	Black/Silver
Material Type	Plastic
Core Size	1 inch
Max Tape Width	3/4 inch
Max Tape Length	36 yards



Figure 4: Side view of the tape dispenser, highlighting its compact design

7. WARRANTY AND SUPPORT

For information regarding product warranty or technical support, please refer to the official Scotch brand

website or contact their customer service directly. Keep your purchase receipt for any warranty claims.

Contact Information:

- **Website:** www.scotchbrand.com
- **Customer Service:** Refer to the website for regional contact details.