

Panasonic CR-123APA/1B

Panasonic CR-123 Photo Battery 3V Lithium User Manual

INTRODUCTION

The Panasonic CR-123 Photo Battery is a high-performance 3-volt lithium battery designed for various electronic devices, including 35mm cameras, digital cameras, and other compatible equipment. This manual provides essential information for the safe and effective use of your battery.

SETUP

Battery Installation

To install the Panasonic CR-123 battery:

1. Locate the battery compartment on your device. Refer to your device's instruction manual for specific details.
2. Open the battery compartment cover.
3. Insert the CR-123 battery, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can damage the device or battery.
4. Close the battery compartment cover securely.



Image of the Panasonic CR-123 Photo Battery, a compact 3V lithium battery. Ensure correct polarity when inserting.

OPERATING

General Use

Once installed, the Panasonic CR-123 battery provides reliable power to your compatible device. These batteries are known for their high voltage and long shelf life, ensuring your device is ready when needed. For cameras, they contribute to quicker recovery times between flashes, allowing for more rapid photo capture.

Always ensure your device is turned off before installing or removing batteries to prevent potential damage.

MAINTENANCE

Storage

- Store batteries in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep batteries in their original packaging until ready for use to prevent short-circuiting.

- Do not store batteries with metal objects like coins or keys.

Disposal

Dispose of used batteries according to local regulations. Do not dispose of batteries in household waste or by incineration. Many retailers and local municipalities offer battery recycling programs.

TROUBLESHOOTING

Device Not Powering On

- **Check Battery Insertion:** Ensure the battery is inserted with the correct polarity (+/-).
- **Verify Battery Charge:** If the battery is old or has been stored for a long time, it may be depleted. Replace with a new battery.
- **Inspect Contacts:** Ensure the battery contacts in the device are clean and free from corrosion.

Short Battery Life

- **Environmental Factors:** Extreme cold can reduce battery performance.
- **Device Usage:** High-drain devices or frequent use of power-intensive features (like flash) will consume battery power more quickly.
- **Battery Age:** Even unused batteries have a shelf life. Replace with a fresh battery if it's nearing its expiration date.

SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model Number	CR-123APA/1B
Battery Cell Composition	Lithium
Voltage	3 Volts
Battery Capacity	1400 Milliamp Hours
Item Weight	0.8 ounces
Product Dimensions	1 x 3.5 x 3.5 inches
Recommended Uses	Camera

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Panasonic CR-123 Photo Battery, please refer to the documentation provided with your purchase or visit the official Panasonic website. Contact details for customer service are typically available on the product packaging or the manufacturer's support pages.

