Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Logitech /
- > Logitech Cordless Desktop LX 700 User Manual

Logitech LX 700

Logitech Cordless Desktop LX 700 User Manual

Model: LX 700 | Part Number: 967418-0403

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Logitech Cordless Desktop LX 700. This system combines a wireless keyboard and a rechargeable optical mouse, designed for enhanced productivity and comfort.

The Logitech Cordless Desktop LX 700 offers a state-of-the-art wireless computing experience with flexible navigation, premium media controls, and an ergonomic design. The keyboard features an ultra-flat profile with Zero-Degree Tilt for comfortable typing, while the optical mouse includes Tilt Wheel Plus Zoom functionality for efficient scrolling and navigation.



Image 1.1: The Logitech Cordless Desktop LX 700, featuring the ergonomic keyboard and rechargeable optical mouse.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product packaging:

- · Logitech Cordless LX 700 Keyboard
- · Logitech Cordless Click! Plus Rechargeable Optical Mouse
- · Receiver/charging base
- AC power supply
- USB to PS/2 adaptor
- 2 AA NiMH rechargeable batteries (for mouse)
- 2 AA alkaline batteries (for keyboard)
- · Quick-Start Guide
- CD with software, comfort guidelines, and Help Center



Image 2.1: Front view of the product packaging, showing the keyboard and mouse.

3. SETUP INSTRUCTIONS

1. Install Batteries:

- For the keyboard, insert the 2 AA alkaline batteries into the battery compartment located on the underside. Ensure correct polarity.
- For the mouse, insert the 2 AA NiMH rechargeable batteries into the battery compartment. These batteries are designed for recharging.

2. Connect the Receiver/Charging Base:

Plug the receiver's USB connector into an available USB port on your computer. If your computer only has PS/2 ports, use the provided USB to PS/2 adapter for the keyboard and mouse connections.

3. Charge the Mouse:

Place the mouse onto the receiver/charging base. Connect the AC power supply to the charging base and plug it into a wall outlet. Allow the mouse to charge fully before initial use. An indicator light on the base will confirm charging status.

4. Install Software:

Insert the included CD into your computer's CD-ROM drive. Follow the on-screen instructions to install the Logitech SetPoint software and MediaLife software. SetPoint allows for customization of keyboard and mouse functions, while MediaLife provides quick access to digital media.

 Compatibility: This system is compatible with Windows 98 SE, Me, 2000, and XP operating systems.

5. Establish Wireless Connection:

After software installation, press the "Connect" button on the receiver and then the "Connect" button on the underside of the keyboard and mouse. This synchronizes the devices with the receiver. Ensure the devices are within range of the receiver.

4. OPERATING INSTRUCTIONS

4.1 Keyboard Features

- **Ultra-flat Profile with Zero-Degree Tilt:** Designed for ergonomic comfort, reducing wrist strain during extended use.
- **Media Controls:** Dedicated buttons for playback, volume, and launching media applications. These controls provide quick access to your digital entertainment.
- Programmable Keys: Utilize the Logitech SetPoint software to customize function keys and other special keys for launching applications, opening files, or performing specific commands.
- **F-Mode Key:** Toggles between standard F-key functions and enhanced F-key functions (e.g., media controls, application shortcuts).

4.2 Mouse Features

- Cordless Optical Mouse: Provides precise tracking and freedom of movement without cables.
- **Tilt Wheel Plus Zoom:** The scroll wheel allows for both vertical and horizontal scrolling. Pressing the wheel enables zoom functionality in compatible applications.
- **Rechargeable Convenience:** The mouse uses NiMH rechargeable batteries and charges when placed on its receiver/charging base, eliminating the need for frequent battery replacement.

4.3 Wireless Connection

The Cordless Desktop LX 700 uses a secure, high-performance wireless connection. Maintain a clear line of sight between the receiver and the keyboard/mouse for optimal performance. Avoid placing the receiver near other wireless devices or large metal objects that may cause interference.

5. MAINTENANCE

5.1 Battery Management

- **Mouse Charging:** Regularly place the mouse on its charging base when not in use to ensure it remains charged. A full charge provides extended usage time.
- Keyboard Batteries: Replace the 2 AA alkaline batteries in the keyboard when the low battery indicator illuminates or performance degrades.
- **Battery Type:** Only use NiMH rechargeable batteries for the mouse. Do not attempt to charge alkaline batteries in the charging base.

5.2 Cleaning

- **Keyboard:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution. Avoid excessive moisture. Do not spray cleaners directly onto the keyboard.
- Mouse: Clean the optical sensor area on the underside of the mouse with a dry, soft cloth to ensure
 accurate tracking. Wipe the mouse surface with a damp cloth as needed.
- Receiver/Charging Base: Keep the charging contacts on the base and mouse clean and free of debris
 for efficient charging.

6. TROUBLESHOOTING

• No Response from Keyboard or Mouse:

- Ensure batteries are correctly installed and charged (mouse) or fresh (keyboard).
- Verify the receiver is securely plugged into a USB port.
- Re-establish the wireless connection by pressing the "Connect" buttons on the receiver and both devices.
- Move the receiver closer to the keyboard and mouse, and away from potential sources of interference (e.g., speakers, monitors, other wireless devices).

· SetPoint Software Issues (e.g., not detecting devices):

- Ensure the devices are connected and functioning before launching SetPoint.
- If using with a laptop, the software may sometimes have difficulty detecting external devices if the built-in keyboard/mouse are primary. Try connecting the receiver directly to a different USB port or temporarily disabling built-in input devices if possible.
- Reinstall the SetPoint software from the provided CD or Logitech's official website.

Mouse Not Charging:

- Check that the AC power supply is properly connected to the charging base and a working wall outlet.
- Ensure the mouse is correctly seated on the charging base and the charging contacts are clean.
- Confirm that NiMH rechargeable batteries are installed in the mouse.

Keyboard Keys Not Responding or Disconnecting:

- · Replace keyboard batteries.
- Re-synchronize the keyboard with the receiver.
- Ensure no objects are blocking the wireless signal between the keyboard and receiver.

7. SPECIFICATIONS

Feature	Detail
Brand	Logitech
Model Number	967418-0403
Connectivity Technology	USB (Wireless)
Compatible Devices	Personal Computer
Operating System Compatibility	Windows 98 SE, Me, 2000, XP
Color	Black
Special Features	Ergonomic, Rechargeable Mouse
Keyboard Batteries	2 AA Alkaline (included)
Mouse Batteries	2 AA NiMH Rechargeable (included)

Feature	Detail
Product Dimensions	20.5 x 10.5 x 5 inches
Item Weight	5.3 pounds
Date First Available	July 2, 2004

8. WARRANTY INFORMATION

Logitech products are covered by a limited hardware warranty. For specific details regarding the warranty period and terms for your Logitech Cordless Desktop LX 700, please refer to the warranty card included in your product packaging or visit the official Logitech support website.

Warranty coverage typically includes defects in materials and workmanship under normal use. Proof of purchase may be required for warranty claims.

9. SUPPORT

For further assistance, technical support, or to download the latest software and drivers, please visit the official Logitech support website:

Logitech Support Website

You may also find helpful information in the Help Center section of the software CD included with your product.

© 2023 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners.

Related Documents - LX 700



Logitech V200 Cordless Notebook Mouse: Installation and User Guide

A guide to installing and using the Logitech V200 Cordless Notebook Mouse, covering setup, features, troubleshooting, and important safety information.




Logitech M535 Bluetooth Mouse: Features, Setup, and Compatibility Guide

Discover the Logitech M535 Bluetooth Mouse. This guide covers its features, Bluetooth connection steps, customization with Logitech Options software, and compatibility with Windows, Mac OS, Chrome OS, and Android devices.





Logitech Marathon Mouse M705: Getting Started Guide & Features

Comprehensive guide to setting up and using the Logitech Marathon Mouse M705, including features, troubleshooting, and Unifying receiver setup.

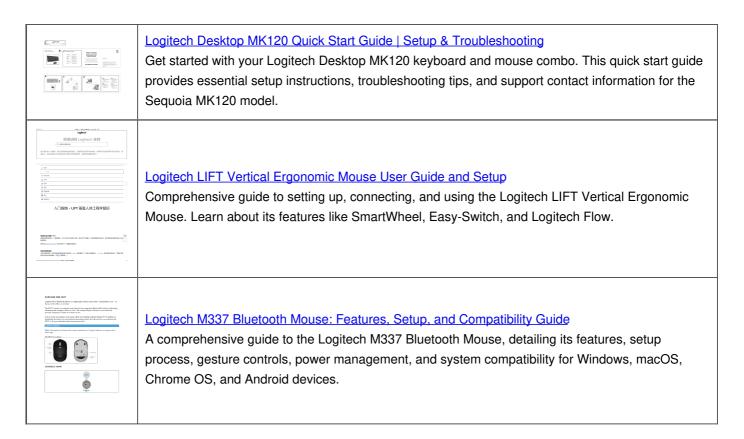


Documents - Logitech - LX 700

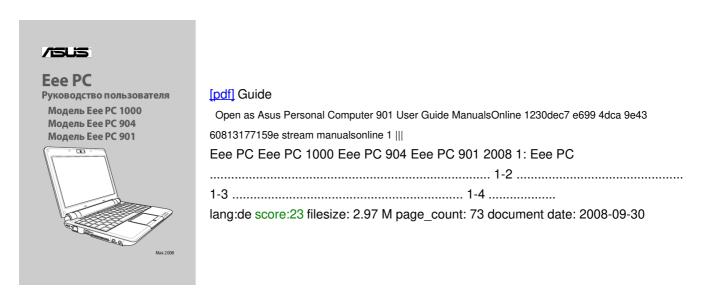

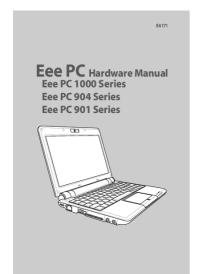


[pdf] User Manual

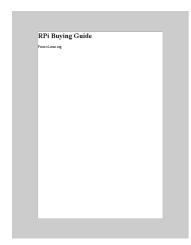

Raspberry Pi Buying Guide: Distributors and Resellers

A comprehensive guide to purchasing a Raspberry Pi, detailing authorized distributors, subsidiaries, sister companies, and resellers worldwide. Includes information on product availability, pricing, and accessories.

lang:en score:18 filesize: 5.04 M page count: 404 document date: 0000-00-00

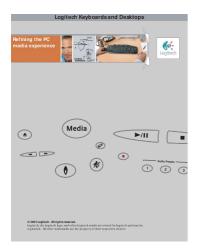

[pdf]

untitled media white paper logitech fr 80 lang Comfort enu at it

Logitech Keyboards and Desktops Refining the PC media experience 2004 Logitech. All rights reserved ... nignntohvaetiPonCinmtheeddiaeseigxnpoef rcioemnfocret Connoisseur capabilities The Cordless Desktop **LX 700** takes the driving concept behind the media desktop to its logical conclusion. The most obviou...

lang:en score:18 filesize: 207.38 K page_count: 4 document date: 2004-07-05



[pdf]

logtch65255 ai steven tucker 100012854749 ec1 images amazon 80 G 01 00 10 12 85 47 g 20 USD With the purchase of a Logitech Cordless Desktop **LX 700** Cordless Desktop **LX 700** Part #967418-0403 Offer valid from 09/01/2005 to 12/31/2005 To receive your rebate: 1. Purchase a Logitech Cordless Desktop **LX 700** Part #967418-0403 at participating resellers. 2. Purchase must be madLeasbt...

lang:en score:13 filesize: 100.92 K page_count: 1 document date: 2005-08-26



[pdf]

Sivakumar Jaswant Windows 8 and 10 support for Logitech mice BEFORE the release The product isn 39 t supported on or AFTER Check s Support page Downloads tab current software TIP For newer check packaging web pages Mice that work with 81AQgZ5MU8S images-eu ssl-images-amazon images I Windows 8 and Windows 10 support for Logitech mice and keyboards If you purchased your product befor ... 00 Y-RR53, MRAJ88A Yes Yes Cordless Desktop LX 501 Y-RR53, MRAJ88A Yes Yes Cordless Desktop LX 700 Y-RR54, MRAK89B Yes Yes Y-RBA78, Y- Cordless Desktop LX 710 Laser RAP78, M- Yes Yes R... lang:en score:13 filesize: 390.13 K page_count: 10 document date: 2020-04-28



[pdf]

093003 Z 340 \$10 AI OLRS00447 LX 700 20USD logitech co uk 80 lang rebates

•••

lang:en score:12 filesize: 76.75 K page_count: 1 document date: 2005-01-28



[pdf] Troubleshooting Guide

std adp static6 arrow aro conversion 209d1803af1b3c739ee88ac473ac08c7db654147 $\mid\mid\mid$

Answer Page 1 of 3 Support Troubleshooting Search by Keyword Login Search Back to Previous Doc ... ech Cordless Desktop MXTM for 967301- Y-RAB81 Yes 21 Bluetooth 0403 Logitech Cordless Desktop **LX 700** 967418- Y-RR54 Yes 27 0403 Logitech Cordless Desktop LX 500 967420- Y-RR53 Yes 31 04...

lang:en score:11 filesize: 47.11 K page_count: 3 document date: 2022-03-24