

Wls B0002N6ONC

Romantic Violin Audio CD User Manual

Model: B0002N6ONC

Brand: Wls

INTRODUCTION

This manual provides essential information for the proper use and care of your Romantic Violin Audio CD. This Audio CD features beautiful romantic violin pieces by various artists, including works by Locatelli, Beethoven, Tchaikovsky, Saint-Saëns, and Bach. Please read this manual carefully to ensure optimal enjoyment and longevity of your product.

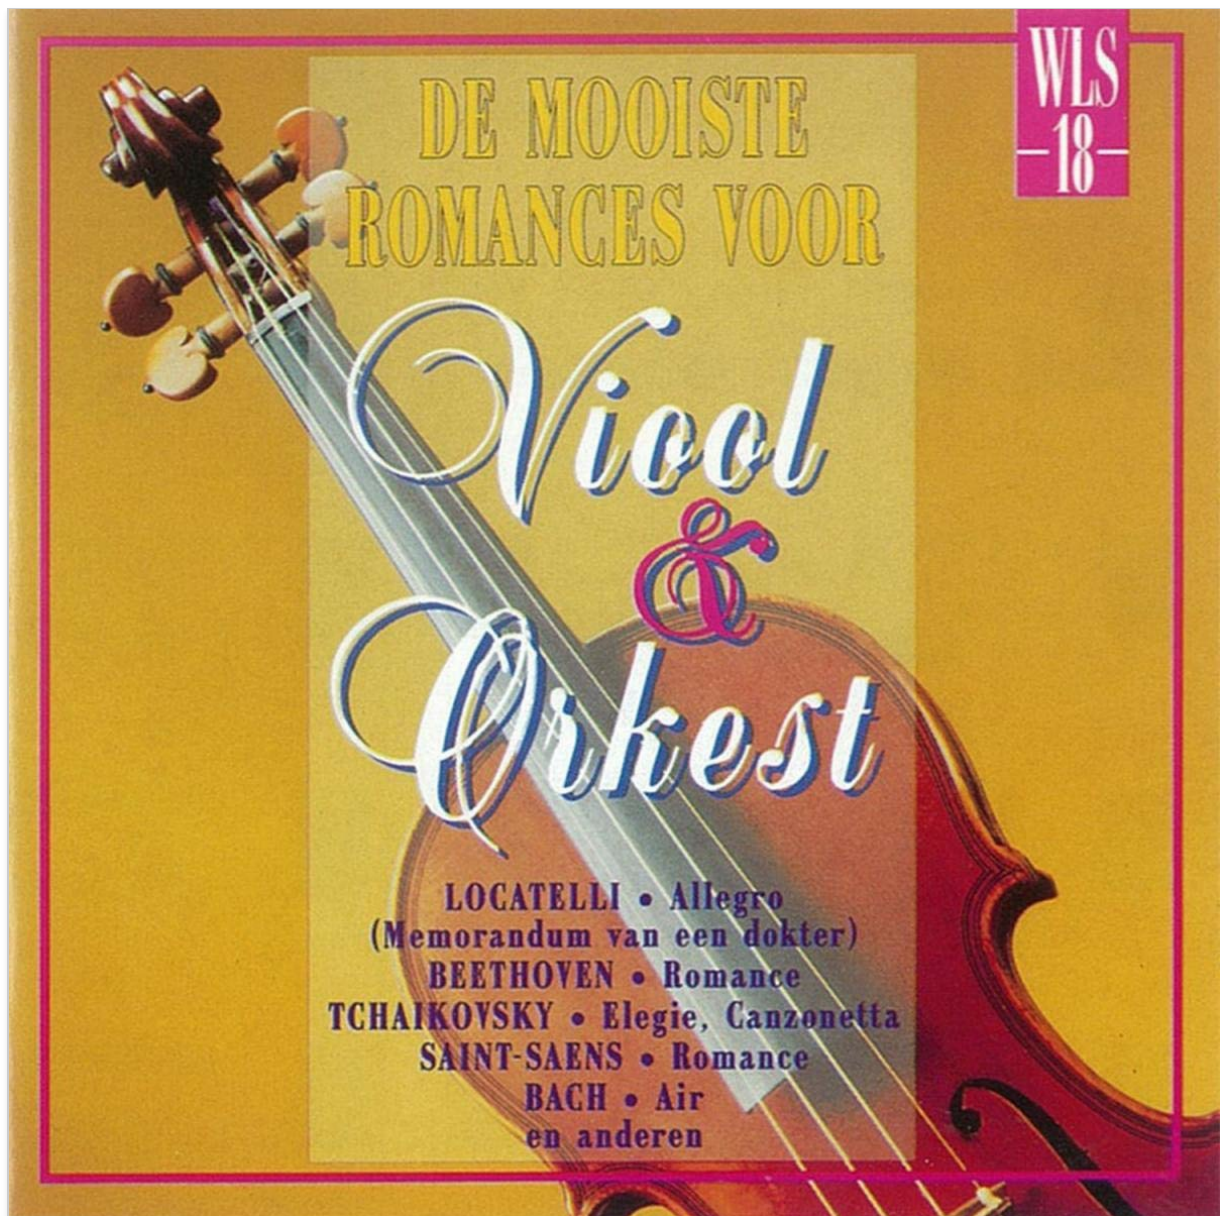


Image: The album cover for the Romantic Violin Audio CD. It displays a classical violin prominently with the title "De Mooiste Romances Voor Viool & Orkest" (The Most Beautiful Romances for Violin & Orchestra) and lists composers such as Locatelli, Beethoven, Tchaikovsky, Saint-Saëns, and Bach. The Wls brand logo is visible in the top right corner.

SETUP

Unpacking

Carefully remove the Audio CD from its packaging. Ensure the disc is free from any visible damage or debris before handling.

Handling

Always hold the Audio CD by its edges or by placing a finger through the center hole. **Avoid touching the playing surface** (the shiny side) to prevent fingerprints, smudges, and scratches, which can affect playback quality.

OPERATING INSTRUCTIONS

Inserting the CD

Open the disc tray of your compatible CD player, computer drive, or car stereo. Place the Audio CD onto the tray

with the label side facing up. Gently close the disc tray or insert the disc into the slot.

Playback

Once inserted, your player should automatically recognize the disc. Press the 'Play' button to begin listening. Use the 'Next Track' and 'Previous Track' buttons to navigate between songs, and the 'Stop' button to end playback.

Track List

- Locatelli: Allegro (Memorandum van een dokter)
- Beethoven: Romance
- Tchaikovsky: Elegie, Canzonetta
- Saint-Saëns: Romance
- Bach: Air
- And other romantic violin pieces.

CARE AND MAINTENANCE

Cleaning the CD

If the CD surface becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) designed for optical discs. Always wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive materials, paper towels, or harsh chemical cleaners, as these can scratch the surface.

Storage

Store the Audio CD in its original jewel case or a high-quality protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures (both hot and cold), and high humidity, as these conditions can warp the disc or damage the data layer.

TROUBLESHOOTING

CD Not Playing

- Ensure the CD is inserted correctly into the player with the label side facing up.
- Check if the disc surface is clean and free of visible scratches or smudges. Clean if necessary.
- Verify that your CD player is functioning correctly and is compatible with standard Audio CDs. Try playing another known good CD.
- Ensure the player's lens is clean. Refer to your CD player's manual for cleaning instructions.

Skipping or Stuttering

- Clean the disc surface as described in the "Cleaning the CD" section. Many playback issues are due to dirt or fingerprints.
- Carefully inspect the playing surface for deep scratches or damage. Significant damage may prevent proper playback.
- Ensure the CD player is on a stable, vibration-free surface. Vibrations can cause the laser to skip.
- If playing on a computer, ensure your CD/DVD drive's firmware is up to date.

PRODUCT SPECIFICATIONS

Feature	Detail
ASIN	B0002N6ONC
Format	Audio CD
Number of Discs	1
Label	WIs
Manufacturer	WIs
First Available Date	August 7, 2012
Package Dimensions	5.67 x 4.96 x 0.47 inches
Item Weight	3.53 ounces

WARRANTY INFORMATION

This Audio CD is covered by standard consumer rights regarding defects at the time of purchase. For specific warranty details, such as return periods or conditions for replacement, please refer to the retailer's return policy where the product was purchased or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, inquiries, or technical support regarding your Romantic Violin Audio CD, please contact your point of purchase. You may also visit the official website of the manufacturer, WIs, if available, for additional resources or contact information.

[Seller Information \(M + L\)](#)