

[manuals.plus](#) /

› [Salton](#) /

› [Salton Cordless Warming Tray \(4-Plate\) - Instruction Manual](#)

Salton TWT-40

Salton Cordless Warming Tray (4-Plate)

MODEL: TWT-40

Introduction

Thank you for choosing the Salton Cordless Warming Tray. This appliance is designed to keep your food warm for extended periods, making it ideal for family gatherings, parties, or daily use. Please read this manual thoroughly before operating your warming tray to ensure safe and efficient use.



Image: The Salton Cordless Warming Tray, a sleek, rectangular appliance with a stainless steel surface and black handles, shown on a kitchen counter.

Important Safety Information

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The appliance features cool-touch handles for safe handling.
- Automatic temperature control prevents overheating.

Product Features

- **Large Warming Surface:** Measures 23-3/4" x 11-3/4" to accommodate multiple dishes.
- **Cordless Operation:** Heats up in 8 minutes and provides up to 60 minutes of cordless warmth.
- **Indicator Lights:** Features a Red Power Light and a Green Ready Light for easy monitoring.
- **Stay-Cool Handles:** Designed for safe and easy transport even when hot.
- **Automatic Temperature Control:** Prevents overheating for safe operation.
- **Durable Construction:** Stainless steel surface is easy to clean and built to last.



A safe, *easy-to-use* appliance!



Stay cool handles.



Automatic temperature control protects against overheating.



Easy to clean stainless steel surface.



Sleek and beautiful design looks great on any table.





POWER & READY INDICATOR LIGHTS.

Image: A close-up view of the Salton Cordless Warming Tray, showing the cool-touch handles, power and ready indicator lights, and the sleek stainless steel surface. Dishes with food are placed on top.

Setup

1. Unpack the warming tray and all its components.
2. Before first use, wipe the surface of the Warming Tray with a damp cloth; dry thoroughly.
3. Place the warming tray on a stable, heat-resistant surface.
4. Ensure the charging cable is securely attached to the appliance and then plug it into a standard 120V electrical outlet.

Operating Instructions

1. **Preheating:** Plug the warming tray into a 120V electrical outlet. The Red Power Light will illuminate, indicating the unit is heating.
2. Allow the tray to preheat for approximately 8 minutes. The Green Ready Light will illuminate when the tray has reached its optimal temperature.
3. **Cordless Use:** Once the Green Ready Light is on, you can detach the power cord. The warming tray will continue to keep food warm for up to 60 minutes.
4. **Continuous Use:** For longer warming periods, the tray can remain plugged in. The automatic temperature control will cycle the heating element on and off to maintain a consistent warm temperature.
5. Place heat-safe dishes containing cooked food directly onto the stainless steel surface. Ensure dishes have flat bottoms for optimal heat transfer.

Your browser does not support the video tag.

Video: A demonstration of the Salton Electric Warming Tray in use, showing how to plug it in, place dishes on it, and its overall functionality for keeping food warm.

Cleaning and Maintenance

1. Always unplug the warming tray and allow it to cool completely before cleaning.
2. Wipe the stainless steel surface with a damp cloth and mild detergent.
3. Dry thoroughly with a soft cloth.
4. Do not use abrasive cleaners or scouring pads, as these may scratch the surface.
5. Do not immerse the warming tray in water or any other liquid.
6. Store the appliance in a dry place when not in use.

Troubleshooting

- **Appliance does not heat:** Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. Check if the Red Power Light is on.
- **Food not staying warm:** Ensure the tray was preheated for the full 8 minutes until the Green Ready Light appeared. For optimal warmth, use dishes with flat bottoms that make full contact with the warming surface.
- **Uneven heating:** This appliance is designed for even heat distribution. Ensure dishes are placed centrally and have good contact with the surface.

Specifications

- **Model Number:** TWT-40
- **Color:** Stainless
- **Material:** Stainless Steel
- **Product Dimensions:** 12"D x 26"W x 2.5"H
- **Warming Surface:** 23-3/4" x 11-3/4"
- **Wattage:** 1000 watts
- **Voltage:** 120 Volts
- **Item Weight:** 8.5 Pounds
- **Included Components:** Warming tray, charging cable



Image: The Salton Cordless Warming Tray with its dimensions clearly marked, showing the large warming surface area.

Warranty and Support

The Salton Cordless Warming Tray comes with a **2-year limited warranty**. For warranty claims, technical

support, or any inquiries, please contact Salton customer service. Keep your proof of purchase for warranty validation.

© 2024 Salton. All rights reserved.