

Coby CT-P730

Coby CT-P730 Speakerphone User Manual

Model: CT-P730

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Coby CT-P730 Speakerphone. The CT-P730 is a versatile telephone designed for ease of use, featuring a two-way speakerphone and a 13-number speed dial memory. Please read this manual thoroughly to ensure proper use and to maximize the functionality of your device.



Figure 1: Coby CT-P730 Speakerphone. This image displays the white telephone unit, including the handset, coiled cord, numeric keypad, speaker grille, and various function buttons such as HOLD, SPEAKERPHONE, REDIAL, and speed dial keys.

2. PRODUCT FEATURES

- Two-way speakerphone with adjustable volume control.
- 13-number speed dial memory: 3 one-touch emergency dials (M1, M2, M3) and 10 regular speed dials.
- Last number redial function.
- Flash button for call waiting or transferring calls.
- Hold button with LED indicator.
- Receiver volume control.

- Ringer on/off switch.
- Electronic bell ringer.
- Hearing aid compatible.
- Fully modular two-piece design.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Coby CT-P730 Telephone Unit (Base and Handset)
- Telephone Line Cord

4. SETUP

1. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the jack on the left side of the telephone base.
2. **Connect to Telephone Line:** Plug one end of the telephone line cord into the jack labeled "LINE" on the back of the telephone base. Plug the other end into a standard telephone wall jack.
3. **Power:** This telephone operates without external power. It draws power directly from the telephone line.
4. **Ringer Setting:** Locate the Ringer ON/OFF switch, usually on the side or back of the unit. Set it to "ON" for the phone to ring.

5. OPERATING INSTRUCTIONS

5.1 Making a Call

1. Lift the handset or press the **SPEAKERPHONE** button.
2. Listen for a dial tone.
3. Dial the desired telephone number using the numeric keypad.
4. To end the call, replace the handset or press the **SPEAKERPHONE** button again.

5.2 Receiving a Call

When the phone rings, lift the handset or press the **SPEAKERPHONE** button to answer.

5.3 Speakerphone Function

- To activate the speakerphone during a call, press the **SPEAKERPHONE** button. You can then place the handset back on the cradle.
- To switch back to the handset, simply lift the handset.
- To adjust speakerphone volume, use the volume control buttons (if present, or a slider on the side).

5.4 Speed Dialing (M1, M2, M3, and 0-9)

Programming Speed Dial Numbers:

1. Lift the handset or press **SPEAKERPHONE**.
2. Press the **STORE** button.
3. Dial the telephone number you wish to store (up to 16 digits).
4. Press the **STORE** button again.

5. Press the desired memory location button (**M1**, **M2**, **M3** for one-touch, or a numeric key **0-9** for regular speed dial).
6. Replace the handset or press **SPEAKERPHONE** to exit programming mode.

Using Speed Dial Numbers:

1. Lift the handset or press **SPEAKERPHONE**.
2. For one-touch speed dial, press the desired memory button (**M1**, **M2**, or **M3**). The number will dial automatically.
3. For regular speed dial, press the **AUTO** button, then press the desired numeric key (**0-9**). The number will dial automatically.

5.5 Last Number Redial

To redial the last number called:

1. Lift the handset or press **SPEAKERPHONE**.
2. Press the **REDIAL** button. The last dialed number will be automatically redialed.

5.6 Hold Function

To place a call on hold:

1. During an active call, press the **HOLD** button. The LED indicator next to the HOLD button will illuminate.
2. To resume the call, press the **HOLD** button again or lift the handset.

5.7 Flash Button

The **FLASH** button is used to access network services such as call waiting or call transfer, depending on your telephone service provider. Press **FLASH** briefly during a call to activate these services.

5.8 Volume Control

- **Receiver Volume:** Adjust the volume of the handset receiver using the slider or button located on the side of the handset or base unit.
- **Speakerphone Volume:** Adjust the speakerphone volume using the dedicated volume control (if available) or by pressing the volume buttons during a speakerphone call.

5.9 Ringer On/Off Switch

To silence the telephone ringer, locate the Ringer ON/OFF switch (typically on the side or back of the unit) and slide it to the "OFF" position. Slide it to "ON" to enable the ringer.

6. MAINTENANCE

- **Cleaning:** Wipe the telephone with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Avoid Liquids:** Keep the telephone away from water and other liquids.
- **Placement:** Place the telephone on a stable surface, away from direct sunlight, heat sources, and excessive dust.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No dial tone.	Telephone line cord is disconnected or faulty.	Ensure the telephone line cord is securely plugged into both the phone and the wall jack. Test with another phone if possible.
Phone does not ring.	Ringer switch is set to OFF.	Locate the Ringer ON/OFF switch and set it to "ON".
Cannot hear caller or caller cannot hear me.	Volume is too low or microphone is obstructed.	Adjust receiver or speakerphone volume. Ensure nothing is blocking the microphone on the base unit.
Speed dial not working.	Number not programmed correctly or not stored.	Re-program the speed dial number following the instructions in Section 5.4.

8. SPECIFICATIONS






Model Number	CT-P730
Brand	Coby
Color	White
Product Dimensions (L x W x H)	7 x 9 x 3 inches
Item Weight	1.75 pounds
Conference Call Capability	2-way (Speakerphone)
ASIN	B0002QKJDK
UPC	716829507384

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Coby website.

Manufacturer: Coby

Related Documents - CT-P730

 <p>Coby DVD209 The bottom portion of the DVD player Replacement</p> <p>This guide will show you how to safely remove the bottom portion of the DVD player to replace the bottom portion of the DVD player.</p> <p>Written By: iFixit</p>	<p>Coby DVD209 DVD Player Bottom Portion Replacement Guide</p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
 <p>COBY®</p> <p>MP201</p>	<p>Coby MP201 USB MP3 Player Instruction Manual</p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
 <p>iFixit</p> <p>Coby Digital Photo Frame Alarm Clock Teardown</p> <p>This guide will show you how to safely remove the bottom portion of the clock to replace the bottom portion of the clock.</p> <p>Written By: iFixit</p>	<p>Coby Digital Photo Frame Alarm Clock Teardown Guide</p> <p>A detailed teardown guide of the Coby Digital Photo Frame Alarm Clock (Model DP356) by iFixit, exploring its internal components and reparability.</p>
 <p>COBY®</p> <p>WIRELESS HEADPHONES</p> <p>Instruction Manual CHBT590</p> <p>MODEL#: CHBT590</p>	<p>Coby CHBT590 Wireless Headphones Instruction Manual</p> <p>Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.</p>
 <p>COBY®</p> <p>CETW645</p> <p>Active Noise Cancelling TWS Earbuds With Hi-Res LCD Touchscreen Case</p> <p>User Manual Manual De Usuario</p> <p>Bluetooth®</p>	<p>CETW645 Active Noise Cancelling TWS Earbuds User Manual</p> <p>User manual for the CETW645 Active Noise Cancelling TWS Earbuds with Hi-Res LCD Touchscreen Case. Learn about powering on/off, pairing, controls, troubleshooting, and specifications.</p>
 <p>COBY®</p> <p>MP-610</p> <p>MP3 & Video Player with FM Radio</p> <p>QUICK SETUP GUIDE</p>	<p>Coby MP-610 MP3 & Video Player Quick Setup Guide</p> <p>Quick setup guide for the Coby MP-610 MP3 & Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>