

WEIPAI PCD268

ALBA PCD268 Personal CD Player User Manual

Model: PCD268

1. INTRODUCTION

Thank you for purchasing the ALBA PCD268 Personal CD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- **Power Source:** Use only the specified power adapter or batteries.
- **Moisture:** Do not expose the unit to rain, moisture, or excessive humidity.
- **Heat:** Keep away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Clean only with a dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Hearing Protection:** Avoid listening at high volume levels for extended periods to prevent hearing damage.

3. PRODUCT OVERVIEW

The ALBA PCD268 is a portable compact disc player designed for personal audio enjoyment. It features a compact design and simple controls for ease of use.



Figure 1: Top view of the ALBA PCD268 Personal CD Player. The image shows the silver-colored circular device with "ALBA" branding and "PORTABLE COMPACT DISC PLAYER" text. It also highlights the "SUPER BASS BOOST SYSTEM" and "PROGRAMMABLE MEMORIES" features.

Package Contents:

- ALBA PCD268 Personal CD Player
- Stereo Earphones (may vary)
- User Manual (this document)

Controls and Features:

Familiarize yourself with the various buttons and ports on your CD player:

- **PLAY/PAUSE Button:** Starts or pauses playback.
- **STOP Button:** Stops playback.
- **SKIP/SEARCH Buttons (<< / >>):** Skips tracks or fast-forwards/rewinds within a track.
- **PROGRAM Button:** Used for programming track order.
- **MODE Button:** Selects playback modes (e.g., repeat, random).
- **VOLUME Control:** Adjusts the audio output level.
- **DC IN Jack:** For connecting an optional AC power adapter.
- **HEADPHONE Jack:** For connecting stereo headphones.
- **BATTERY Compartment:** Holds batteries for portable use.

4. SETUP

4.1 Powering the Unit

The ALBA PCD268 can be powered by batteries or an optional AC power adapter.

Using Batteries:

1. Open the battery compartment cover on the bottom of the unit.
2. Insert 2 x AA batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.

3. Close the battery compartment cover securely.

Note: Battery life is approximately 12 hours with good quality alkaline batteries.

Using AC Power (Optional):

1. Connect a compatible DC 4.5V AC power adapter (not included) to the DC IN jack on the side of the unit.
2. Plug the AC adapter into a standard wall outlet.

4.2 Connecting Headphones

Insert the stereo headphone plug into the HEADPHONE jack on the side of the unit. Ensure the plug is fully inserted for proper audio output.

5. OPERATING INSTRUCTIONS

5.1 Loading a CD

1. Gently press the OPEN button (if present) or lift the lid of the CD player.
2. Place a CD onto the center spindle with the label side facing up.
3. Gently press down on the center of the CD until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

5.2 Basic Playback

1. Press the **PLAY/PAUSE** button to start playback. The track number and elapsed time will be displayed (if applicable).
2. Adjust the **VOLUME** control to your desired listening level.
3. To pause playback, press the **PLAY/PAUSE** button again. Press it once more to resume.
4. To stop playback, press the **STOP** button.

5.3 Skipping Tracks

- To skip to the next track, press the >> (Skip Forward) button.
- To skip to the beginning of the current track, press the << (Skip Backward) button once.
- To skip to the previous track, press the << (Skip Backward) button twice quickly.

5.4 Searching Within a Track

- During playback, press and hold the >> button to fast-forward. Release to resume normal playback.
- During playback, press and hold the << button to fast-rewind. Release to resume normal playback.

5.5 Programming Tracks (Programmable Memories)

You can program up to 20 tracks to play in a specific order.

1. With the CD stopped, press the **PROGRAM** button. "PROG" will flash on the display.
2. Use the << or >> buttons to select the first track you wish to program.
3. Press the **PROGRAM** button again to confirm the selection.
4. Repeat steps 2 and 3 for each additional track you want to program.
5. After programming all desired tracks, press the **PLAY/PAUSE** button to start playback of the

programmed sequence.

6. To clear the program, open the CD compartment or press the **STOP** button twice.

5.6 Playback Modes (MODE Button)

Press the **MODE** button repeatedly to cycle through available playback modes:

- **Repeat 1:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the CD.
- **Random:** Plays tracks in a random order.
- **Intro:** Plays the first few seconds of each track (if available).
- **Normal Play:** Resumes standard playback.

5.7 Bass Boost System

The ALBA PCD268 features a Super Bass Boost System (3.3S) to enhance low-frequency audio. This feature is typically activated by a switch or button labeled "BASS BOOST" or "3.3S". Refer to the unit's physical controls for its exact location and operation.

6. MAINTENANCE

6.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- For the CD lens, use a specialized CD lens cleaner disc or a soft, lint-free cloth specifically designed for optical lenses. Avoid touching the lens directly.

6.2 Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.

7. TROUBLESHOOTING

If you experience problems with your CD player, refer to the following table for common issues and solutions:

Problem	Possible Cause	Solution
No power	Batteries are dead or inserted incorrectly. AC adapter not connected or faulty.	Replace batteries, check polarity. Ensure AC adapter is securely connected and functional.
No sound	Headphones not connected properly. Volume too low. CD is dirty or scratched.	Ensure headphones are fully plugged in. Increase volume. Clean or replace CD.
CD skips or stops	CD is dirty, scratched, or warped. Unit is subject to excessive vibration.	Clean CD with a soft cloth. Use a clean, unscratched CD. Place the unit on a stable surface.

Problem	Possible Cause	Solution
Buttons not responding	Unit may be frozen.	Remove batteries or disconnect AC power for a few minutes, then reconnect.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Model:	PCD268
Power Source:	DC 3V (2 x AA batteries) or DC 4.5V AC adapter (optional)
Supported Disc Format:	CD, CD-R, CD-RW
Audio Output:	3.5mm Stereo Headphone Jack
Dimensions (approx.):	130mm (Width) x 130mm (Depth) x 25mm (Height)
Weight (approx.):	340.2 g
Special Features:	Super Bass Boost System (3.3S), Programmable Memories

9. WARRANTY AND SUPPORT

9.1 Limited Warranty

This product is covered by a limited warranty against defects in materials and workmanship for a period of *[Insert Warranty Period, e.g., one year]* from the original date of purchase. This warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact WEIPAI customer support:

- **Website:** www.weipai.com (Placeholder, as no actual website is provided)
- **Email:** support@weipai.com (Placeholder)
- **Phone:** *[Insert Phone Number]* (Placeholder)

Please note that contact information is illustrative and should be replaced with actual details provided by the manufacturer.