

[Manuals.plus](#) /

> [Nickelodeon](#) /

> The Adventures of Jimmy Neutron - Attack of the Twonkies DVD User Manual

Nickelodeon B0002WZTKW

The Adventures of Jimmy Neutron - Attack of the Twonkies DVD User Manual

Model: B0002WZTKW

PRODUCT OVERVIEW

This manual provides instructions for the proper use and care of *The Adventures of Jimmy Neutron - Attack of the Twonkies* DVD. This animated feature film, produced by Nickelodeon, offers an engaging viewing experience.

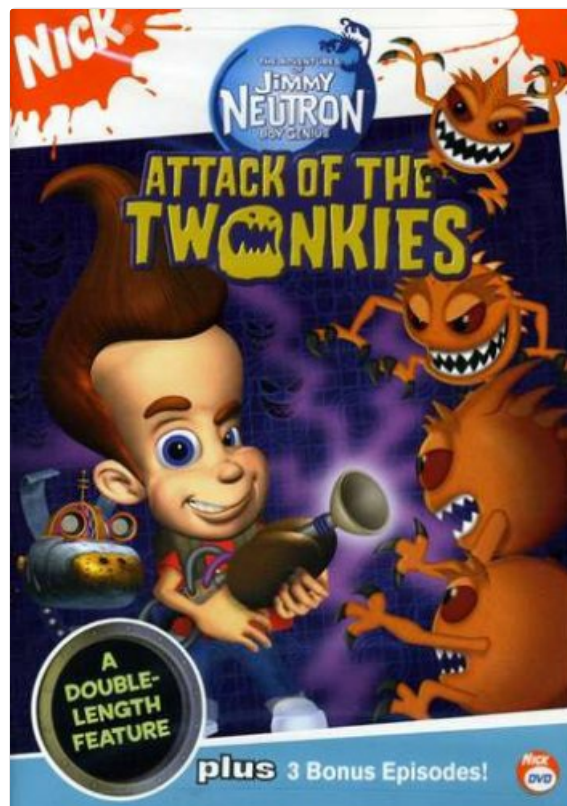


Image: Front cover of *The Adventures of Jimmy Neutron - Attack of the Twonkies* DVD. It features the main character, Jimmy Neutron, alongside several small, colorful, furry creatures known as Twonkies.

SETUP

To begin watching your DVD, follow these steps:

1. **Unpack:** Carefully remove the DVD from its packaging.
2. **Inspect:** Check the disc surface for any visible scratches or smudges. If present, gently clean the disc as described in the Maintenance section.
3. **Insert:** Place the DVD into the disc tray of a compatible DVD player, Blu-ray player, or computer DVD drive with the label side facing up.
4. **Close Tray:** Close the disc tray. The player should automatically detect the disc.

OPERATING INSTRUCTIONS

Once the DVD is loaded, follow these general operating procedures:

1. **Main Menu:** After loading, the DVD will typically display a main menu. Use your player's remote control or computer interface to navigate.
2. **Play Feature:** Select "Play Movie" or a similar option to start the main feature, *Attack of the Twonkies*.
3. **Episode Selection:** This DVD may include additional episodes. Navigate to the "Episodes" or "Bonus Features" section to select and play them.
4. **Audio/Subtitles:** If available, use the audio and subtitle options on the main menu or your player's remote to select preferred language tracks (e.g., English) or display subtitles.
5. **Playback Controls:** Use standard playback controls (Play, Pause, Stop, Fast Forward, Rewind, Skip) on your remote or player.

The total run time for the main feature and additional content is approximately 1 hour and 44 minutes.

MAINTENANCE AND CARE

Proper care ensures the longevity and optimal performance of your DVD:

- **Handling:** Always hold the DVD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface.
- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards. Do not use abrasive materials or harsh chemicals.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity. Keep it in a vertical position to prevent warping.
- **Avoid Scratches:** Do not place the disc on rough surfaces or expose it to objects that could scratch it.

TROUBLESHOOTING

If you encounter issues during playback, consider the following:

- **Disc Not Playing:**
 - Ensure the disc is inserted correctly (label side up).
 - Clean the disc surface for smudges or fingerprints.
 - Try playing the disc in another compatible DVD player or drive to rule out player issues.
- **Skipping or Freezing:**
 - Clean the disc thoroughly. Minor scratches can sometimes cause skipping.
 - Ensure your DVD player's lens is clean. Refer to your player's manual for cleaning instructions.

- **No Audio/Video:**

- Check all cable connections between your DVD player and TV/audio system.
- Verify that your TV/monitor input is set to the correct source for your DVD player.
- Ensure the audio track is selected correctly from the DVD menu or player settings.

SPECIFICATIONS

Product Title	The Adventures of Jimmy Neutron - Attack of the Twonkies
Model Number (ASIN)	B0002WZTKW
Brand/Studio	Nickelodeon
Media Format	Animated, Color, Dolby, Full Screen, NTSC
Run Time	1 hour and 44 minutes
Number of Discs	1
Language	English
MPAA Rating	Unrated (Not Rated)
Package Dimensions	7.5 x 5.2 x 0.6 inches; 4 ounces

WARRANTY AND SUPPORT

For information regarding warranty or customer support for this product, please refer to the original packaging or contact the retailer from whom the DVD was purchased. Specific warranty details are not provided within this manual.