

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Shark](#) /

> [Shark Cordless Mini Hand Sweeper V1705 Instruction Manual](#)

## Shark V1705

# Shark Cordless Mini Hand Sweeper V1705 Instruction Manual

Model: V1705

## 1. PRODUCT OVERVIEW

The Shark Cordless Mini Hand Sweeper V1705 is designed for efficient cleaning of various surfaces, including carpets, sofas, and hard floors. Its lightweight and cordless design offers portability and ease of use for quick clean-ups.



Image 1.1: Shark Cordless Mini Hand Sweeper V1705. This image displays the compact, handheld design of the sweeper, highlighting its main body and brushroll area.

### Key Features:

- Effective cleaning on carpets and hard floors.

- Powerful brushroll action for debris collection.
- Easy steering swivel head for enhanced maneuverability.
- 5-inch cleaning path for efficient coverage.
- Bagless design with an easy-empty dirt tray.
- Cordless operation with extended running time per charge.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using an electrical appliance, basic precautions should always be followed, including the following:

1. Read all instructions before using the sweeper.
2. To reduce the risk of electric shock, do not immerse the charging stand or sweeper in water or other liquids.
3. Do not allow the sweeper to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
13. Do not use without dirt cup and/or filters in place.
14. Use extra care when cleaning on stairs.
15. Store the appliance indoors. Put away after use to prevent accidents.
16. This appliance is intended for household use only.

## 3. PACKAGE CONTENTS

---

Verify that all components are present in your package:

- Shark Cordless Mini Hand Sweeper Unit
- Rechargeable Battery (integrated)
- Charging Stand
- Brushroll (pre-installed or separate, as indicated by "Included Components: Brush")
- Instruction Manual (this document)

If any parts are missing or damaged, please contact Shark customer support.

## 4. SETUP AND CHARGING

---

## 4.1 Initial Charging

Before first use, fully charge the Shark Cordless Mini Hand Sweeper. This typically takes several hours. The sweeper can operate for up to 90 minutes on a full charge.

1. Place the charging stand on a flat, stable surface near a power outlet.
2. Plug the charging stand's power adapter into a standard electrical outlet.
3. Place the sweeper onto the charging stand, ensuring it is properly seated. A charging indicator light (if present) will illuminate to confirm charging has begun.
4. Allow the unit to charge completely before its first use.

## 4.2 Assembly (if required)

The brushroll is typically pre-installed. If it needs to be attached or re-attached:

1. Ensure the sweeper is turned off and disconnected from the charging stand.
2. Locate the brushroll compartment on the underside of the sweeper.
3. Align the brushroll with its designated slots and gently push until it clicks into place. Refer to diagrams in the full manual for specific brushroll installation instructions if needed.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Turning On/Off

- To turn on the sweeper, locate the power switch (usually on the handle or main body) and slide it to the "ON" position.
- To turn off the sweeper, slide the power switch to the "OFF" position.

### 5.2 Sweeping

The sweeper is designed for quick clean-ups on various floor types.

1. Ensure the sweeper is fully charged.
2. Turn on the sweeper.
3. Gently push the sweeper across the surface to be cleaned. The brushroll will rotate to pick up debris.
4. The swivel head allows for easy navigation around furniture and obstacles.
5. For optimal performance, move the sweeper in a steady, controlled motion.

### 5.3 Emptying the Dirt Tray

Empty the dirt tray regularly to maintain optimal suction and cleaning performance.

1. Turn off the sweeper.
2. Locate the dirt tray release button or latch, typically on the front or side of the sweeper.
3. Press the release and carefully remove the dirt tray from the main unit.
4. Hold the dirt tray over a waste bin and open its lid or flap to empty the collected debris.
5. Close the dirt tray lid and reattach the tray to the sweeper until it clicks securely into place.

## 6. MAINTENANCE

---

### 6.1 Cleaning the Brushroll

Hair and debris can become entangled in the brushroll, reducing cleaning effectiveness. Clean the

brushroll regularly.

1. Ensure the sweeper is turned off and disconnected from the charging stand.
2. Remove the brushroll from the sweeper (refer to Section 4.2 for removal if needed).
3. Carefully cut away any tangled hair, string, or debris using scissors. Be careful not to damage the bristles.
4. Wipe the brushroll with a damp cloth if necessary, and allow it to air dry completely before reinserting.
5. Reinstall the clean brushroll into the sweeper.

## 6.2 Cleaning the Dirt Tray and Exterior

- After emptying, the dirt tray can be rinsed with water if needed. Ensure it is completely dry before reattaching to the sweeper.
- Wipe the exterior of the sweeper with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Sweeper does not turn on.	Battery is not charged. Power switch is off.	Place sweeper on charging stand and allow to fully charge. Ensure power switch is in the "ON" position.
Sweeper is not picking up debris effectively.	Dirt tray is full. Brushroll is clogged with hair/debris. Brushroll is not properly installed.	Empty the dirt tray. Clean the brushroll (refer to Section 6.1). Reinstall the brushroll securely.
Sweeper stops during operation.	Battery is depleted. Obstruction in brushroll.	Recharge the battery. Turn off the sweeper and clear any obstructions from the brushroll.
Charging indicator light is not on.	Charging stand not plugged in. Sweeper not properly seated on stand. Faulty outlet.	Ensure charging stand is securely plugged into a working outlet. Adjust sweeper position on the stand. Try a different electrical outlet.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	V1705
Manufacturer	SharkNinja
Form Factor	Handheld
Item Weight	2.5 pounds

Feature	Detail
Package Dimensions	11.2 x 8.2 x 4.7 inches
Batteries Required	Yes (integrated rechargeable)
Included Components	Brush

## 9. WARRANTY AND SUPPORT

### 9.1 Warranty Information

This Shark Cordless Mini Hand Sweeper V1705 comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in material and workmanship under normal household use. It does not cover damage resulting from misuse, abuse, neglect, commercial use, or unauthorized repair.

Please retain your proof of purchase for warranty claims.

### 9.2 Customer Support

For technical assistance, warranty service, or to order replacement parts, please contact Shark customer support. Refer to the official Shark website or your product registration card for current contact information.

You can often find additional support resources, FAQs, and product registration at the official Shark website: [www.sharkclean.com](http://www.sharkclean.com)