

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [OXO](#) /

› [OXO Good Grips Mini Chopper Instruction Manual](#)

OXO 1060620

OXO Good Grips Mini Chopper Instruction Manual

Brand: OXO | Model: 1060620

1. PRODUCT OVERVIEW

The OXO Good Grips Mini Chopper is designed to efficiently chop and mince small foods such as garlic, nuts, and herbs. Its compact design and simple operation make food preparation quicker and easier.

Key Features:

- Quickly and easily chops or minces 4-5 cloves of garlic while keeping hands clean.
- Chop in the enclosed cup or remove the foot to chop directly on a cutting board.
- Clear cup features measurement markings and a storage lid.
- Wiper blade prevents food from accumulating on cup walls.
- Removable blade cartridge is dishwasher safe for easy cleaning.
- Knob locks down for compact storage.
- Also great for shallots, nuts, herbs, and more.

2. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash:** Before first use, wash all parts in warm, soapy water, rinse thoroughly, and dry. The blade cartridge is dishwasher safe.
3. **Assemble:** Place the clear measuring cup onto a flat surface. Align the chopper unit with the cup and twist clockwise until it locks securely into place. Ensure the blade cartridge is properly seated within the chopper unit.



Figure 1: Components of the OXO Good Grips Mini Chopper, including the main chopping unit, the clear measuring cup with a non-slip base, and a small spatula for scraping.

3. OPERATING INSTRUCTIONS

- 1. Prepare Food:** Cut larger food items into smaller, manageable pieces that will fit comfortably within the chopper cup.
- 2. Load Chopper:** Place the prepared food into the clear measuring cup. Do not overfill the cup; ensure there is enough space for the blades to move freely.
- 3. Attach Chopper Unit:** Align the chopper unit with the cup and twist clockwise until it securely locks into place. Alternatively, remove the cup and place the chopper unit directly onto a cutting board with the food.
- 4. Chop:** Place your hand firmly on the top knob of the chopper unit. Press down rapidly and repeatedly. The internal blades will rotate with each press, ensuring even chopping. Continue pressing until desired food consistency is achieved.



Figure 2: Demonstrating the chopping action by pressing down on the soft knob of the chopper.

Tips for Best Results:

- For finer chops, press more times.
- Avoid packing the cup too tightly, as this can hinder blade rotation.
- Use the included spatula to scrape down food from the sides of the cup if needed.

4. MAINTENANCE & CLEANING

1. **Disassemble:** Twist the chopper unit counter-clockwise to detach it from the measuring cup. The blade cartridge can be removed from the chopper unit for thorough cleaning.
2. **Clean Blades:** The blade cartridge is removable and dishwasher safe. For hand washing, use warm, soapy water and a brush to clean around the blades. Exercise caution as blades are sharp.
3. **Clean Cup & Unit:** The clear measuring cup and the main chopper unit (excluding the blade cartridge) should be hand washed with warm, soapy water. Rinse thoroughly and dry completely before reassembly or storage.
4. **Storage:** To store compactly, press the knob down and twist to lock it in the lowered position.



Figure 3: The clear measuring cup with visible measurement markings, useful for portion control and storage.

5. TROUBLESHOOTING

- **Food not chopping evenly:** Ensure food pieces are small enough to begin with. Do not overfill the cup. Press down firmly and rapidly to allow the blades to rotate effectively.
- **Chopper getting stuck:** If the chopper mechanism feels stiff or gets stuck, ensure no large pieces of food are obstructing the blades. Disassemble and clean any lodged food particles.
- **Difficulty reassembling:** Ensure all parts are dry and aligned correctly. The chopper unit should twist and lock smoothly onto the cup.

6. SPECIFICATIONS

Brand	OXO
Model Number	1060620

Material	Stainless Steel (Blades)
Color	White/Black
Operation Mode	Manual
Item Weight	6.4 ounces
Product Dimensions	10 x 2 x 5 inches
Included Components	Chopping Blade
Product Care Instructions	Hand Wash Only (main unit), Dishwasher Safe (blade cartridge)

7. WARRANTY & SUPPORT

OXO Better Guarantee: If for any reason you are not satisfied with your OXO product, return it for repair, replacement, or refund. OXO is grateful for the opportunity to learn from your experience and is committed to making it better.

For further assistance or inquiries, please visit the official OXO website or contact their customer support.