

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Singing Machine](#) /
- › [Singing Machine STVG988 Pedestal CDG Karaoke System User Manual](#)

Singing Machine STVG-988

Singing Machine STVG988 Pedestal CDG Karaoke System

MODEL: STVG-988

User Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Singing Machine STVG988 Pedestal CDG Karaoke System. Please read this manual thoroughly before using the unit to ensure proper function and to maximize your enjoyment of the product. Keep this manual for future reference.



Figure 1: The Singing Machine STVG988 Pedestal CDG Karaoke System. This image displays the complete karaoke system, featuring the main unit with a CD+G player, an on-screen lyrics display, control buttons, a built-in video camera, and two microphone inputs. The main unit is mounted on a silver pedestal stand with a stable star-shaped base. Two microphones are shown connected to the unit.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all items listed in the 'What's in the Box' section are present.
2. **Assembly:** Assemble the pedestal stand according to the diagrams provided in the quick start guide (not included in this document). Ensure the main unit is securely attached to the pedestal.
3. **Power Connection:** Connect the AC power adapter to the DC IN jack on the back of the unit, then plug the adapter into a standard wall outlet.
4. **Microphone Connection:** Insert the microphone cables into the MIC 1 and MIC 2 jacks located on the front of the unit.
5. **Audio/Video Output (Optional):** For enhanced sound and video display, connect the RCA audio/video cables (not included) from the A/V OUT jacks on the unit to the corresponding A/V INPUT jacks on your television or external audio system. Ensure the correct input source is selected on your TV/audio system.

OPERATING INSTRUCTIONS

Powering On/Off

- Press the **POWER** button located on the front panel to turn the unit on or off.

CD/CD+G Disc Playback

1. Open the CD compartment door.
2. Place a CD or CD+G disc onto the spindle with the label side facing up.

- Close the CD compartment door.
- Press the **PLAY/PAUSE** button to begin playback. For CD+G discs, lyrics will appear on the built-in screen or connected TV.
- Use the **SKIP** buttons (**<<** / **>>**) to navigate between tracks.

Microphone Usage

- Adjust the **MIC VOLUME** knob to control the microphone's output level.
- Use the **ECHO** knob to add an echo effect to your vocals.

Built-in Video Camera

- The integrated video camera captures your performance. The camera feed will be displayed on the connected TV when the A/V output is in use.

Radio Function

- Press the **FUNCTION** button to select the AM or FM radio mode.
- Use the **TUNING** controls to find your desired radio station.

Master Volume Control

- Adjust the **MASTER VOLUME** knob to control the overall sound output of the system.

MAINTENANCE

- Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior surfaces of the unit. Do not use abrasive cleaners or solvents.
- Disc Care:** Handle discs by their edges. Keep discs clean and free of scratches. Store discs in their cases when not in use.
- Storage:** When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not active.	Ensure power cord is securely plugged into the unit and a working wall outlet.
No sound from unit	Volume too low; incorrect function selected; external audio system not connected or selected.	Increase MASTER VOLUME. Ensure correct function (CD, Radio) is selected. If using external speakers, verify connections and input selection.
No sound from microphone	Microphone not connected; MIC VOLUME too low; microphone switch off.	Ensure microphone is securely plugged in. Increase MIC VOLUME. Check if microphone has an ON/OFF switch and set it to ON.
Disc not playing	Disc inserted incorrectly; disc dirty or scratched; disc format not supported.	Reinsert disc correctly. Clean disc with a soft cloth. Ensure disc is a standard audio CD or CD+G.

Problem	Possible Cause	Solution
No lyrics on screen/TV	Not a CD+G disc; TV not connected or on correct input.	Use a CD+G disc. Verify A/V connections to TV and select the correct input source on your TV.
Distorted or screeching audio	Microphone too close to speaker; volume too high; faulty disc.	Move microphone away from speakers. Reduce MASTER VOLUME or MIC VOLUME. Try a different disc.

SPECIFICATIONS

Feature	Detail
Model Number	STVG-988
Item Weight	23.2 pounds
Product Dimensions	14 x 20 x 25 inches
Compatible Devices	Radio
Power Source	Battery Powered (AC adapter included for primary power)
Included Components	Microphone
Connectivity Technology	Auxiliary
Media Type	CD, CD+G
Date First Available	September 7, 2005

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Singing Machine website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

You can visit the [Singing Machine Store on Amazon](#) for additional product information and accessories.