

Lightning Reaction PP0377

Lightning Reaction Reloaded Shocking Game

Brand: Lightning Reaction | Model: PP0377

INTRODUCTION

The Lightning Reaction Reloaded is an interactive game designed to test reaction times among 2 to 4 players. This manual provides essential information for safe setup, operation, and maintenance of the device.

IMPORTANT SAFETY INFORMATION

WARNING: This is not a toy. Emits an electric shock. Keep out of reach of children. Not suitable for children under 14 years of age. This product emits an electric shock and may interfere with electrical devices such as pacemakers. Do not use if you suffer from epilepsy, a heart condition, or any similar or related illness. Do not use if you are pregnant.

SETUP

1. **Battery Installation:** The Lightning Reaction Reloaded requires 3 AAA batteries (not included). Locate the battery compartment on the underside of the main unit. Open the compartment, insert the batteries according to the polarity indicators, and securely close the cover.
2. **Placement:** Place the main unit on a stable, flat surface. The unit features suction cups on its base to help secure it during play. Ensure all players can comfortably reach a handle.



Figure 1: The Lightning Reaction Reloaded game unit with its four player handles.

SIMPLE SETUP

HOURS OF HILARIOUS ENTERTAINMENT



SUCTION CUP BASE

KEEP THE GAME SECURE TO THE TABLE

Figure 2: The base of the game unit features suction cups for stability during play.

OPERATING INSTRUCTIONS

Game Modes and Intensity

The game offers variable shock control and different game functions. Adjust these settings using the switches on the main unit.

- **Game Function Switch:** Select between 'Normal 1 Shock' (the last player to react gets shocked) or 'Extreme 3 Shock' (the first player to react avoids the shock, while others receive it).
- **Shock Intensity Dial:** Adjust the intensity of the electric shock from Low to High. It is recommended to start at a lower setting, especially for new players.

2 THRILLING GAME MODES

CHOOSE YOUR CHALLENGE!



NORMAL

THE LAST ONE TO PRESS
THE BUTTON IS SHOCKED

EXTREME

THE FIRST ONE TO PRESS THE
BUTTON WON'T GET SHOCKED

Figure 3: The game offers two modes: Normal (last to press is shocked) and Extreme (first to press avoids shock).

How to Play

1. Each player grasps one of the metal handles from the base.
2. Press the large central button labeled "RELOADED" to start the game. The red light will blink, and suspenseful music will play.
3. Wait for the red light to turn green.
4. As soon as the light turns green, press the trigger button on your handle as quickly as possible.
5. The player(s) who react too slowly or too early will receive an electric shock, depending on the selected game mode.

HOW TO PLAY



1 GRAB A HANDLE FROM THE BASE

2 PRESS BUTTON IN THE CENTER

3 SUSPENSEFUL MUSIC PLAYS

4 WHEN THE MUSIC STOPS PRESS HANDLE BUTTON

5 LAST TO PRESS THEIR BUTTON GETS SHOCKED

Figure 4: Visual guide to the game's play sequence, from grabbing handles to reacting to the green light.

Demonstration Video

Your browser does not support the video tag.

Video 1: A demonstration of the Lightning Reaction Reloaded game in action, showing family play and reactions.

MAINTENANCE

- Keep the device clean and dry. Wipe with a soft, dry cloth.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries if the device will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Device Not Turning On:** Check if the batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary.
- **No Shock or Weak Shock:** Ensure the shock intensity dial is set to an appropriate level. Verify that players

are holding the handles firmly and making good contact with the metal surfaces.

- **Game Malfunction:** If the game behaves unexpectedly, turn it off, remove the batteries, wait a few minutes, and then reinsert the batteries and restart the device.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5 x 5 x 5.5 inches
Item Weight	10.6 ounces
Model Number	PP0377
Recommended Age	14 years and up
Batteries Required	3 AAA batteries (not included)
Manufacturer	Squirrel Products

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt for proof of purchase.

© 2025 Lightning Reaction. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question