

[Manuals.plus](#) /

› [TOMY](#) /

› TOMY Transformers Reissue 10 Soundwave Instruction Manual

TOMY 4904880081165

TOMY Transformers Reissue 10 Soundwave

Model: 4904880081165

INTRODUCTION

This manual provides essential instructions for the TOMY Transformers Reissue 10 Soundwave action figure. Soundwave is a highly detailed collectible figure capable of transforming between a robot and a cassette player mode. Please read these instructions carefully to ensure proper handling and enjoyment of your product.

PARTS AND COMPONENTS

Your Soundwave figure comes with several accessories to enhance play and display. Ensure all parts are present upon unboxing.

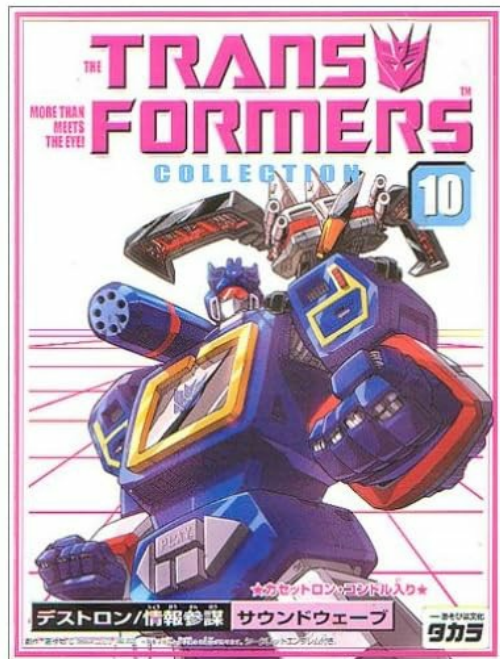


Figure Overview: This image displays the Soundwave figure in both its robot and alternate cassette player modes. The lower left section details the included accessories, while the lower right provides a close-up of the cassette player mode.

- **Soundwave Figure:** The main transforming unit.
- **Concussion Blaster:** A weapon accessory for robot mode.
- **Shoulder Cannon:** An additional weapon that attaches to the robot's shoulder.
- **Cassette Tapes (x3):** Small, transformable cassette figures (e.g., Laserbeak, Ravage, Frenzy/Rumble) that fit into Soundwave's chest compartment.
- **Headphones:** Decorative accessory for cassette player mode.
- **Microphone:** Decorative accessory for cassette player mode.
- **Missiles:** Projectile accessories for the shoulder cannon.

SETUP

The TOMY Transformers Reissue 10 Soundwave is designed for immediate play with no assembly required. It is ready to be enjoyed straight out of the box.

Battery Installation (if applicable)

This product is battery-powered and requires batteries for certain functions. Please refer to the battery compartment, typically located on the back or underside of the figure, for specific battery type and installation instructions. Ensure batteries are inserted with correct polarity.

OPERATING INSTRUCTIONS

Soundwave operates in two primary modes: Robot Mode and Cassette Player Mode. Transformation is a manual process.

Transformation from Robot to Cassette Player Mode

1. Carefully detach all accessories (weapons, cassettes) from the robot figure.
2. Fold the robot's arms inward towards the body.
3. Collapse the legs and feet to form the base of the cassette player.
4. Rotate and position the head to conceal it within the figure's body.
5. Adjust the chest panel to resemble the cassette deck door.
6. Ensure all panels are securely aligned to form the compact cassette player shape.

Transformation from Cassette Player to Robot Mode

1. Begin by extending the hidden head from the figure's body.
2. Unfold the legs and feet from the base.
3. Extend the arms from the sides of the figure.
4. Adjust the chest panel to reveal the robot's torso.
5. Secure all joints and panels to form the stable robot stance.
6. Attach weapons and accessories as desired.

Cassette Playback Feature

The chest compartment of Soundwave in cassette player mode can open to store the included mini-cassette figures. Simply press the designated button or lever to open the compartment and insert or remove the cassettes.

MAINTENANCE

To ensure the longevity of your Soundwave figure, follow these maintenance guidelines:

- **Cleaning:** Wipe the figure with a soft, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the figure in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the figure uses batteries, remove them if the product will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

If you encounter any issues with your Soundwave figure, consider the following:

- **Difficulty Transforming:** Ensure all joints are properly aligned and not forced. Refer to the transformation steps carefully.
- **Loose Joints:** Over time, some joints may become slightly loose. This is normal with repeated use.

- **Electronic Functions Not Working:** Check battery installation and replace batteries if necessary.

SPECIFICATIONS

Attribute	Detail
Brand	TOMY
Model Number	4904880081165
Material Type	Plastic
Age Range Description	Kid (Manufacturer Maximum Age: 144 months)
Item Dimensions (L x W x H)	8.8 x 6.8 x 2.9 inches
Item Weight	1.1 Pounds
Power Source	Battery Powered (Batteries required)
Operation Mode	Manual
Educational Objective	Develop imagination and creativity through role-playing and storytelling
Subject Character	Transformers (Soundwave)

Character Statistics (DESTRON/17 SOUNDWAVE)

- **Strength:** 7.5
- **Intelligence:** 9
- **Speed:** 2
- **Endurance:** 6
- **Stealth:** 5
- **Firepower:** 6
- **Skill:** 10
- **Total:** 53.5

WARRANTY AND SUPPORT

Specific warranty and support information for this product is not provided in the available data. Please refer to the product packaging or the official TOMY website for details regarding warranty coverage and customer support contacts.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0006FQCJW>

More documents and user manuals: <https://manuals.plus/>