

## Cuisinart CSB-77

# Cuisinart CSB-77 Smart Stick Hand Blender Instruction Manual

Model: CSB-77 | Brand: Cuisinart

## INTRODUCTION

The Cuisinart CSB-77 Smart Stick Hand Blender is a versatile kitchen appliance designed for blending, whisking, and chopping. Its compact design and powerful motor make it ideal for a variety of culinary tasks, from preparing smoothies and soups to whipping creams and grinding ingredients. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting.

## IMPORTANT SAFETY INFORMATION

**WARNING: Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.**

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions before using the appliance.
- To protect against electrical shock, do not immerse the motor housing, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by Cuisinart may cause fire, electric shock, or injury.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Keep hands and utensils away from the blending blade while operating to prevent the possibility of severe personal injury and/or damage to the hand blender. A scraper may be used but must be used only when the appliance is not running.
- Blades are sharp. Handle carefully.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
- Do not use the appliance for other than intended use.

## PRODUCT OVERVIEW

---

The Cuisinart CSB-77 Smart Stick Hand Blender comes with several components designed to enhance your blending experience.

- **Motor Body:** The main unit housing the 200-watt motor and controls.
- **Blending Attachment:** A stainless steel shaft with a blade for immersion blending.
- **Whisk Attachment:** For whipping cream, beating eggs, and other whisking tasks.
- **Chopper Attachment:** A separate bowl with blades for chopping and grinding ingredients.
- **16-ounce Mixing/Measuring Beaker:** A clear container for blending and measuring.
- **2-cup Mixing Container:** An additional container for various mixing needs.



Image: The Cuisinart CSB-77 Smart Stick Hand Blender, showcasing the main unit, chopper attachment, and a mango, onion, and lime for scale.



Image: Close-up of the Cuisinart CSB-77 Smart Stick Hand Blender's main unit, highlighting its brushed stainless steel housing and ergonomic design.



Image: The whisk attachment for the Cuisinart CSB-77 Smart Stick Hand Blender, designed for aerating and mixing.



Image: The chopper attachment for the Cuisinart CSB-77 Smart Stick Hand Blender, featuring a clear bowl and sharp blades for chopping ingredients.

## SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash all detachable parts (blending attachment, whisk attachment, chopper bowl, mixing beaker, mixing container) in warm, soapy water or place them in the dishwasher. Wipe the motor body with a damp cloth. Ensure all parts are completely dry before assembly.
3. **Assemble:**
  - To attach the blending shaft or whisk: Align the motor body with the desired attachment and twist until it locks securely into place.

- To use the chopper: Place the chopper blade onto the center post of the chopper bowl. Add ingredients. Place the chopper lid on the bowl, ensuring it's securely seated. Attach the motor body to the chopper lid by aligning and twisting until it locks.

4. **Power:** Plug the hand blender into a standard electrical outlet.

## OPERATING INSTRUCTIONS

---

### General Operation:

- Ensure the appliance is properly assembled and plugged in.
- Immerse the blending attachment into the ingredients before pressing the power button to prevent splashing.
- Press and hold the power button for continuous operation. Release to stop.
- For pulse action, press and release the power button repeatedly.

### Using the Blending Attachment:

1. Attach the blending shaft to the motor body.
2. Place ingredients in the 16-ounce mixing/measuring beaker, 2-cup mixing container, or any suitable tall container.
3. Submerge the blending shaft into the ingredients.
4. Press and hold the power button. Move the blender up and down gently to ensure even blending.
5. Blend until desired consistency is achieved.
6. Release the power button before removing the blending shaft from the ingredients.





Image: The Cuisinart CSB-77 Smart Stick Hand Blender in use, blending berries and cream in a measuring beaker.

### **Using the Chopper Attachment:**

1. Place the chopper blade onto the center post of the chopper bowl.
2. Add ingredients to the chopper bowl. Do not overfill.
3. Place the chopper lid on the bowl and attach the motor body.
4. Press and hold the power button for short bursts to chop ingredients to your desired consistency.
5. Release the power button and wait for the blades to stop completely before removing the motor body and lid.





Image: The Cuisinart CSB-77 Smart Stick Hand Blender with the chopper attachment, actively chopping cheese.

### Using the Whisk Attachment:

1. Attach the whisk attachment to the motor body.
2. Place ingredients in a suitable mixing bowl.
3. Submerge the whisk into the ingredients.
4. Press and hold the power button. Move the whisk around the bowl to incorporate air and mix ingredients.
5. Whisk until desired consistency is achieved.
6. Release the power button before removing the whisk from the ingredients.

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Cuisinart Smart Stick Hand Blender.

- **Motor Body:** Wipe the motor body with a damp cloth. Do not immerse the motor body in water or any other liquid.
- **Attachments and Containers:** The blending shaft, whisk attachment, chopper bowl, chopper blade, mixing beaker, and mixing container are all dishwasher-safe (top rack recommended) or can be washed by hand in warm, soapy water.
- **Blades:** Handle the blades with extreme care as they are very sharp.
- **Storage:** Store the hand blender and its attachments in a dry place. The compact design allows for easy storage in a drawer or cabinet.

## TROUBLESHOOTING

If you encounter any issues with your Cuisinart Smart Stick Hand Blender, refer to the following common solutions:

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; power outage; attachment not securely connected.	Ensure the unit is plugged into a working outlet. Check circuit breaker. Re-attach the blending shaft or chopper securely until it clicks.
Motor runs, but blades do not move.	Attachment not properly engaged with the motor body.	Detach and re-attach the blending shaft or chopper securely.
Splashing during blending.	Blender not fully immersed; container too wide.	Ensure the blending shaft is fully submerged before starting. Use a taller, narrower container.
Difficulty blending hard ingredients.	Ingredients are too large or too hard for continuous blending.	Cut ingredients into smaller pieces. Use pulse action for hard ingredients. Do not attempt to crush ice with the blending attachment.

## SPECIFICATIONS

- **Model:** CSB-77
- **Power:** 200 Watts
- **Control Type:** Push Button
- **Material:** Brushed Stainless Steel housing, Plastic containers, Stainless Steel blades
- **Dimensions:** 3.35 x 2.17 x 5.12 inches (Product Dimensions)
- **Item Weight:** 5 pounds
- **Included Components:** Whisk Attachment, Chopper Attachment, 16-ounce mixing/measuring beaker, 2-cup mixing container
- **Special Features:** Detachable Attachment, Lightweight

## WARRANTY AND SUPPORT

---

The Cuisinart CSB-77 Smart Stick Hand Blender comes with a limited 3-year warranty. For warranty claims, product support, or additional information, please refer to the contact details provided in your product's original packaging or visit the official Cuisinart website.

## PRODUCT VIDEO

---

Your browser does not support the video tag.

Video: An official Cuisinart video demonstrating the features and use of the CSB-77 Smart Stick Hand Blender with its various attachments.