

[Manuals.plus](#) /

› [Nintendo](#) /

› Nintendo Pokémon FireRed Version Game Boy Advance Instruction Manual

Nintendo 45496734930

Nintendo Pokémon FireRed Version Game Boy Advance Instruction Manual

Brand: Nintendo | Model: 45496734930

INTRODUCTION

This manual provides essential information for playing Pokémon FireRed Version on the Game Boy Advance system. Pokémon FireRed Version allows players to battle, trade, and collect Pokémon. The game supports connectivity with other Game Boy Advance systems and compatible Pokémon titles, including Pokémon LeafGreen, Pokémon Ruby, Pokémon Sapphire, and Pokémon Colosseum, using a Game Boy Advance Wireless Adapter (sold separately).



SETUP

To begin playing Pokémon FireRed Version, follow these steps:

1. **Insert the Game Pak:** Ensure your Game Boy Advance system is powered off. Gently slide the Pokémon FireRed Version Game Pak into the cartridge slot on your Game Boy Advance system until it clicks into place. The label side of the cartridge should face upwards.
2. **Power On:** Turn on your Game Boy Advance system using the power switch. The Nintendo logo and Game Boy Advance logo should appear, followed by the game's title screen.
3. **Wireless Adapter (Optional):** If you plan to use the wireless features, connect the Game Boy Advance Wireless Adapter to your Game Boy Advance system's extension port. Refer to the Wireless Adapter's instruction manual for detailed setup.



Image: The Pokémon FireRed Version Game Pak (red cartridge) shown alongside a Game Boy Advance Wireless Adapter. The cartridge is ready to be inserted into a compatible Game Boy Advance system.

OPERATING INSTRUCTIONS

Basic Controls

- **Directional Pad (D-Pad):** Move your character, navigate menus, and select options.
- **A Button:** Confirm selections, interact with people and objects, and select attacks in battle.
- **B Button:** Cancel selections, run (when held), and return to previous screens.
- **Start Button:** Open the main menu.
- **Select Button:** Access registered items or special functions.

- **L/R Buttons:** Scroll through menus or access specific functions depending on the context.

Saving Your Game

To save your progress, open the main menu using the Start button and select the 'SAVE' option. It is recommended to save frequently to avoid losing game data.

Wireless Communication

With the Game Boy Advance Wireless Adapter, you can:

- Join up to 39 other wireless Trainers in the Union Room for various activities.
- Connect with two or three other players in the Direct Corner for battles or trades.
- Exchange game information and battle strategies using the chat function.

GAME FEATURES

- Join up to 39 other wireless Trainers in the Union Room for a free-for-all, or connect with just two or three in the Direct Corner.
- Prove yourself in the region's Pokémon League while single-handedly bringing down Team Rocket - then open up all-new storylines with unexpected twists.
- Bring the Pokémon you capture in FireRed to the worlds of LeafGreen, Pokémon Ruby and Sapphire, or Pokémon Colosseum for more challenge.

MAINTENANCE

Proper care of your Pokémon FireRed Version Game Pak ensures longevity and optimal performance:

- **Storage:** Store the Game Pak in its original case or a protective cartridge holder when not in use to prevent dust and physical damage. Avoid exposing it to extreme temperatures or direct sunlight.
- **Cleaning Contacts:** If the game fails to start or experiences glitches, the gold connector pins on the bottom of the cartridge may be dirty. Gently clean them with a cotton swab lightly dampened with isopropyl alcohol. Allow to dry completely before reinserting.
- **Handling:** Avoid touching the gold connector pins directly with your fingers, as oils and dirt can transfer and cause connectivity issues.

TROUBLESHOOTING

If you encounter issues while playing Pokémon FireRed Version, consider the following:

- **Game Not Starting:** Ensure the Game Pak is fully inserted into the Game Boy Advance system. Try removing and reinserting it. Clean the cartridge's connector pins as described in the Maintenance section. Verify that your Game Boy Advance system has sufficient battery power.
- **Save Data Corruption:** If you receive a message about corrupted save data, it may indicate an issue with the game cartridge's internal battery or memory. While some systems may attempt to retrieve a previous save, consistent corruption suggests a potential hardware fault with the cartridge. Ensure you are saving your game correctly and frequently.
- **Connectivity Issues (Wireless Adapter):** If you experience problems connecting with other players, ensure all Game Boy Advance Wireless Adapters are properly connected and within range. Check for any obstructions that might interfere with the wireless signal.

- **Unexpected Freezes or Glitches:** These can sometimes be resolved by turning the system off and on again. If persistent, try cleaning the cartridge contacts.

SPECIFICATIONS

Number of Players	4 (via Game Boy Advance Wireless Adapter)
Platform	Game Boy Advance
Release Date	June 27, 2005
Product Dimensions	5 x 5 x 1 inches
Item Weight	3.17 ounces
Language	English
Rated	Everyone
Model Number	45496734930

WARRANTY AND SUPPORT

For information regarding product warranty, repairs, or technical support, please refer to the documentation included with your Game Boy Advance system or contact Nintendo's official customer support. You can typically find contact details on the official Nintendo website for your region.

Please retain your purchase receipt as proof of purchase may be required for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question