

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [De'Longhi](#) /

› [De'Longhi 5025102900 Removable Power Cord Instruction Manual](#)

De'Longhi 5025102900

De'Longhi 5025102900 Removable Power Cord Instruction Manual

Model: 5025102900

INTRODUCTION

This manual provides instructions for the safe and proper use of the De'Longhi 5025102900 Removable Power Cord. This power cord is designed as a replacement or spare part for specific De'Longhi appliance models. Please read this manual thoroughly before use to ensure correct application and to prevent damage or injury.



Image showing the De'Longhi 5025102900 Removable Power Cord, a black cord with a magnetic connector on one end and a standard plug on the other.

SETUP AND COMPATIBILITY

The De'Longhi 5025102900 Removable Power Cord is specifically designed for use with select De'Longhi appliance models. It is crucial to verify compatibility before attempting to connect the cord to any appliance.

Compatible Models:

- D455DZ
- D612UX
- D650UX

- D660UX
- D665UX
- D670UX
- D675UX
- D690UX
- D685UX
- D895UX
- D896UX
- D689UX
- D14427DZ
- D14522DZ
- D14527DZ
- D406DZ
- D408DZ

Installation Steps:

1. Ensure the appliance is turned off and unplugged from the wall outlet.
2. Locate the power cord receptacle on your De'Longhi appliance.
3. Align the magnetic connector end of the 5025102900 power cord with the receptacle on the appliance. The magnetic connection will guide it into place.
4. Gently push until the connector is securely seated. Do not force the connection.
5. Plug the other end of the power cord into a suitable wall outlet.

Important: Only use this power cord with the specified compatible De'Longhi models. Using it with incompatible devices may result in damage to the appliance or the cord, and could pose a safety risk.

OPERATING INSTRUCTIONS

Once the power cord is securely connected to your compatible De'Longhi appliance and plugged into a wall outlet, the appliance is ready for operation according to its own specific instruction manual. This power cord acts as the conduit for electrical power to the appliance.

- Always ensure the cord is fully inserted into both the appliance and the wall outlet before operating the appliance.
- Do not operate the appliance if the power cord appears damaged or frayed.
- Avoid placing the cord in high-traffic areas where it could be tripped over or damaged.
- Do not use extension cords unless absolutely necessary, and ensure any extension cord used is rated for the appliance's power requirements.

CARE AND MAINTENANCE

Proper care and maintenance will extend the life of your power cord and ensure safe operation.

- **Cleaning:** Disconnect the power cord from both the appliance and the wall outlet before cleaning. Wipe the cord with a soft, damp cloth. Do not use abrasive cleaners or immerse the cord in water.
- **Storage:** When not in use, coil the power cord loosely. Avoid tight coiling or bending, which can

damage the internal wires. Store the cord in a dry, cool place, away from direct sunlight and heat sources.

- **Inspection:** Regularly inspect the power cord for any signs of damage, such as cuts, fraying, exposed wires, or discoloration. Check the connectors for bends or corrosion. If any damage is observed, discontinue use immediately and replace the cord.
- **Handling:** Always grasp the plug when disconnecting the cord from the wall outlet or appliance. Do not pull on the cord itself.

TROUBLESHOOTING

If you experience issues with your De'Longhi 5025102900 Removable Power Cord, consider the following:

- **Appliance not powering on:**
 - Ensure the power cord is fully and securely connected to both the appliance and the wall outlet.
 - Check if the wall outlet is functional by plugging in another device.
 - Inspect the power cord for any visible damage. If damaged, replace it.
 - Verify that your appliance model is listed as compatible with this power cord.
- **Loose connection:**
 - The magnetic connector is designed to detach easily for safety. If it frequently disconnects during normal use, ensure the appliance is on a stable surface and not being moved excessively.
 - Check the magnetic contacts on both the cord and the appliance for debris or damage. Clean gently if necessary.

If problems persist after performing these checks, consult the instruction manual for your specific De'Longhi appliance or contact De'Longhi customer support.

PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	5025102900
Brand	De'Longhi
Manufacturer	Delonghi
Color	Black
Item Weight	3.98 ounces
Package Dimensions	7.4 x 5 x 0.9 inches
Connector Gender	Male-to-Female
Plug Format	Type F
UL Listed	No

WARRANTY INFORMATION

Specific warranty details for the De'Longhi 5025102900 Removable Power Cord may vary. Please refer to the warranty documentation provided with your original De'Longhi appliance or visit the official De'Longhi website for the most current warranty information applicable to replacement parts. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about compatible models not listed, please contact De'Longhi customer service.

You can typically find contact information on the official De'Longhi website or within the original appliance's user manual.

When contacting support, please have your power cord model number (5025102900) and your appliance model number readily available.