

## Barbie B00079FGSK

# Barbie: Fairytopia DVD Instruction Manual

Model: B00079FGSK

## 1. INTRODUCTION

---

This instruction manual provides essential information for the proper use and care of your **Barbie: Fairytopia** DVD. Please read this manual thoroughly to ensure optimal viewing experience and to prolong the life of your disc.

The *Barbie Fairytopia* movie introduces Elina, a wingless flower fairy residing in Fairytopia. When her home and the surrounding flower fields become afflicted, Elina, accompanied by her friend Bibble, embarks on a journey to Fairytown to seek solutions. Her adventures lead her to new friendships and challenges, ultimately enabling her to thwart Laverna's scheme to control Fairytopia and liberate the imprisoned rulers, thereby saving her land. For her bravery, Elina is bestowed with magnificent wings. The DVD includes bonus features such as a 'Boogie with Bibble Game', interactive menus with Barbie voice-over, family-friendly widescreen (1.78:1) presentation, 5.1 Dolby Digital audio, and a trailer gallery.



Image 1.1: Front cover of the Barbie: Fairytopia DVD. The cover features Barbie as Elina, a fairy with pink wings, alongside her companion Bibble, set against a vibrant, magical landscape.

## 2. SETUP

To begin watching your **Barbie: Fairytopia** DVD, follow these steps:

1. **Connect your DVD Player:** Ensure your DVD player is correctly connected to your television or display device according to its manufacturer's instructions. Typically, this involves connecting video

(HDMI, component, or composite) and audio cables.

2. **Power On:** Turn on your television and select the correct input source (e.g., HDMI 1, AV) for your DVD player. Power on your DVD player.
3. **Insert the DVD:** Gently open the DVD player's disc tray. Hold the **Barbie: Fairytopia** DVD by its edges to avoid touching the playback surface. Place the disc label-side up into the tray.
4. **Close Tray:** Close the disc tray. The DVD player will typically begin reading the disc automatically.

### 3. OPERATING INSTRUCTIONS

---

Once the DVD is loaded, you will typically see the main menu. Use your DVD player's remote control to navigate.

- **Main Menu:** From the main menu, you can usually select options such as 'Play Movie', 'Scene Selection', 'Languages', 'Subtitles', and 'Special Features'.
- **Play Movie:** Select 'Play Movie' to start the film from the beginning.
- **Scene Selection:** This option allows you to jump to specific chapters or scenes within the movie.
- **Languages/Audio:** The DVD supports English audio. It also features dubbed audio in Dutch, French, and German. Select your preferred audio track from this menu.
- **Subtitles:** English subtitles are available. Select this option to turn subtitles on or off.
- **Special Features:** Access bonus content such as the 'Boogie with Bibble Game' and a trailer gallery.
- **Navigation:** Use the arrow keys on your remote to highlight options and the 'Enter' or 'OK' button to select.

### 4. MAINTENANCE AND CARE

---

Proper care of your DVD will ensure its longevity and consistent playback quality.

- **Handling:** Always hold the DVD by its outer edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth (e.g., a microfiber cloth) from the center outwards. Do not use abrasive materials, solvents, or harsh chemicals. For stubborn smudges, a slightly dampened cloth with water can be used, followed by immediate drying with a clean, dry cloth.
- **Storage:** Store the DVD in its original case, away from direct sunlight, extreme temperatures, and high humidity. Laying discs flat or stacking them without cases can lead to warping or damage.
- **Avoid Bending:** Do not bend or flex the disc, as this can cause irreparable damage.

### 5. TROUBLESHOOTING

---

If you encounter issues while playing your **Barbie: Fairytopia** DVD, consider the following:

- **Disc Not Playing/Loading:**
  - Ensure the disc is inserted correctly (label side up).
  - Check if the disc is clean and free of smudges or scratches. Clean if necessary (refer to Section 4).
  - Verify your DVD player is powered on and connected to the correct input on your TV.

- Try playing another DVD to determine if the issue is with the player or the disc.
- **Skipping or Freezing:**
  - This is often caused by dirt, dust, or scratches on the disc. Clean the disc thoroughly.
  - Ensure the DVD player is on a stable surface to prevent vibrations.
- **No Audio or Video:**
  - Check all audio and video cable connections between the DVD player and your TV.
  - Ensure your TV is on the correct input source.
  - Verify that the audio track is selected correctly in the DVD menu (refer to Section 3).
- **Region Code:** This DVD is formatted for PAL region. Ensure your DVD player is compatible with PAL format discs.

## 6. SPECIFICATIONS

<b>Aspect Ratio</b>	1.78:1
<b>Product Dimensions</b>	0.63 x 7.48 x 5.35 inches; 2.82 ounces
<b>Audio Description</b>	None
<b>Item Model Number</b>	2724295664249
<b>Media Format</b>	PAL
<b>Run Time</b>	1 hour and 10 minutes
<b>Release Date</b>	March 14, 2005
<b>Dubbed Languages</b>	Dutch, French, German
<b>Subtitles</b>	English
<b>Studio</b>	Universal Pictures UK
<b>ASIN</b>	B00079FGSK
<b>Number of Discs</b>	1
<b>Genre</b>	Mystery & Thrillers (Note: This genre classification may vary by region/retailer, but the content is a children's animated fantasy.)
<b>Format</b>	PAL
<b>Language</b>	English
<b>Color</b>	Color

## 7. WARRANTY AND SUPPORT

---

DVD media typically does not come with an explicit manufacturer's warranty beyond ensuring the disc is free from manufacturing defects upon purchase. If you experience issues with the disc that are not resolved by troubleshooting (Section 5) and are not due to physical damage caused by mishandling, please contact the retailer where the DVD was purchased within their return policy period.

For general inquiries regarding the film content or production, you may refer to the official website of the studio, Universal Pictures UK, or relevant Barbie media channels.

This manual is for informational purposes only. All product names, logos, and brands are property of their respective owners.