

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Escali](#) /

› [Escali Primo Digital Food Scale Instruction Manual](#)

Escali P115

Escali Primo Digital Food Scale Instruction Manual

Model: P115 | Brand: Escali

INTRODUCTION

The Escali Primo Digital Food Scale is a versatile and user-friendly kitchen tool designed for precise weight measurement and portion control. Its robust construction, sealed control panel, and intuitive two-button operation make it an essential appliance for baking, cooking, and general kitchen use. This manual provides detailed instructions to help you get the most out of your Escali Primo scale.



Figure 1: Escali Primo Digital Food Scale (Chrome)

1. SETUP

1.1 Battery Installation

Your Escali Primo Digital Food Scale requires two (2) AA batteries, which are included. To install or replace batteries:

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

1.2 Initial Placement

Place the scale on a hard, flat, and stable surface. Avoid placing it on soft or uneven surfaces, as this may affect accuracy.



Figure 2: Top view of the Escali Primo Digital Food Scale, showing its compact design.

2. OPERATING INSTRUCTIONS

2.1 Power On/Off

Press the **On/Tare/Off** button to turn the scale on. The display will show '0' when ready for use. To turn the scale off, press and hold the **On/Tare/Off** button for a few seconds until the display turns off. The scale also features an automatic shut-off after four minutes of inactivity to conserve battery life.

2.2 Unit Selection

To switch between measurement units (ounces, pounds:ounces, and grams), press the **g/oz** button. The current unit will be displayed on the screen.

2.3 Tare Feature

The tare feature allows you to reset the scale to zero weight, enabling you to measure multiple ingredients in the same container or subtract the weight of a container. Place the container on the scale, then press the **On/Tare/Off** button. The display will reset to '0', and you can then add your ingredients.



Figure 3: The scale in use, demonstrating the tare feature with a bowl of flour.



DURABLE DESIGN

The lightweight rounded design improves durability.

ACCURATE & CAPABLE

Measure up to 11 lb (5,000 g) in 0.1 oz (1 g) increments.

TARE FEATURE

The lightweight rounded design improves durability.



Figure 4: Key features of the Escali Primo Digital Food Scale, including easy-to-read display, unit selection, and spill guard.

Your browser does not support the video tag.

Video 1: Official product spotlight demonstrating the Escali Primo Digital Food Scale's features and ease of use.

3. MAINTENANCE

3.1 Cleaning

The Escali Primo scale features a sealed control panel and rounded design, making it easy to clean. Wipe the scale with a damp cloth and mild detergent. Do not immerse the scale in water or use abrasive cleaners.

3.2 Storage

Store the scale in a dry place at room temperature. Avoid extreme temperatures or high humidity, which can affect performance and battery life.

4. TROUBLESHOOTING

If you encounter any issues with your Escali Primo Digital Food Scale, please refer to the following common troubleshooting tips:

- **Inaccurate Readings:** Ensure the scale is placed on a hard, flat, and stable surface. Avoid placing it near vibrating appliances or in direct sunlight. Check that the tare function has been properly used if a container is on the scale.
- **Display Not Turning On/Off:** Verify that the batteries are correctly installed and are not depleted. Replace batteries if necessary.
- **Overload Indication:** If the display shows an error message indicating overload, remove items from the scale immediately. The scale has a maximum capacity of 11 lb (5,000 g).
- **Slow Response:** Ensure the scale is clean and free from debris that might interfere with the weighing mechanism.

For further assistance, please contact Escali customer support.

5. SPECIFICATIONS

Model Number	P115
Product Dimensions	8.5 x 6 x 1.5 inches
Item Weight	15.2 ounces
Capacity	11 lb (5,000 g)
Increments	0.05 oz (1 g)
Units of Measure	oz, lb:oz, g
Batteries	2 AA batteries (included)
Display Type	LCD
Special Features	Sealed Control Panel, Auto Shut Off, Tare Function, Programmable
Country of Origin	China

6. WARRANTY & SUPPORT

6.1 Lifetime Warranty

The Escali Primo Digital Food Scale comes with a lifetime warranty, ensuring long-term reliability and customer satisfaction. Please retain your proof of purchase for warranty claims.

6.2 Customer Support

For any questions, technical support, or warranty inquiries, please visit the official Escali website or contact their customer service department. Contact details can typically be found on the product packaging or the manufacturer's website.