

[Manuals.plus](#) /

› [Nordic Ware](#) /

› Nordic Ware Microwave Egg Boiler Model 64802 Instruction Manual

Nordic Ware 64802

Nordic Ware Microwave Egg Boiler Model 64802 Instruction Manual

Model: 64802 | Brand: Nordic Ware

1. INTRODUCTION

The Nordic Ware Microwave Egg Boiler is designed to cook up to four hard-boiled or soft-boiled eggs quickly and efficiently using your microwave oven. This product simplifies the egg boiling process, eliminating the need for stovetop boiling and providing consistent results. It features a BPA and Melamine-free plastic construction with an aluminum insert.



2. SETUP AND ASSEMBLY

1. **Disassemble:** Separate the top lid from the base and remove the metal egg tray from the base.
2. **Add Water:** Fill the plastic base with 1 1/2 cups of water. Ensure the water level does not exceed the indicated fill line.
3. **Place Eggs:** Carefully place the metal egg tray back into the base. Position up to four eggs into the designated spots on the metal tray. Piercing the eggs is not required.
4. **Secure Lid:** Snap the top lid onto the base, ensuring it is securely closed.



Image: The egg boiler open, showing the metal tray and four white eggs placed inside.

3. OPERATING INSTRUCTIONS

Cooking times vary based on microwave oven wattage. Use the following guidelines for desired egg hardness:

Egg Hardness	1000 Watts	800 Watts	600 Watts
Soft	5 minutes	6 minutes	7 minutes
Medium	6 minutes	7 minutes	8 minutes

Egg Hardness	1000 Watts	800 Watts	600 Watts
Hard	8 minutes	9 minutes	10 minutes

Post-Cooking Steps:

1. Allow the boiler to cool for 2 minutes before carefully removing the lid.**Beware of hot steam.**
2. Immediately run cold water over the cooked eggs to stop further cooking and facilitate easier peeling.



Image: The egg boiler with brown eggs, one revealing a perfectly soft yolk after cooking.

Your browser does not support the video tag.

Video: An official Nordic Ware video demonstrating various egg preparations, including the use of the egg boiler for quick breakfast meals.

4. CARE AND MAINTENANCE

- **Initial Use:** Before first use, hand wash the egg boiler with warm, soapy water.
- **Subsequent Uses:** After each use, hand wash with warm, soapy water.
- **Dishwasher Use:** Dishwasher use is not recommended as it may discolor or warp the product.
- **Microwave Use Only:** This cookware is designed exclusively for microwave use. Do not use in conventional ovens or on stovetops.

5. TROUBLESHOOTING

- **Eggs not cooked to desired hardness:** Microwave wattage varies. Adjust cooking times by 30-60 seconds until desired doneness is achieved. For example, if eggs are too soft, increase cooking time slightly for the next batch.
- **Difficulty removing lid or excessive steam:** Always allow the boiler to cool for 2 minutes after microwaving before attempting to remove the lid. Use oven mitts or a cloth to protect hands from hot steam.
- **Eggs cracking during cooking:** Ensure the lid is securely snapped onto the base to maintain proper steaming conditions. While piercing is not required, some users find it helpful for very fresh eggs.

6. SPECIFICATIONS

- **Model Number:** 64802
- **Brand:** Nordic Ware
- **Capacity:** 4 eggs
- **Material:** BPA and Melamine-free plastic, aluminum insert
- **Color:** White
- **Item Weight:** 5.6 ounces
- **Exterior Dimensions (L x W x H):** 8.38 x 4.63 x 5.38 inches
- **Item Diameter:** 5.35 inches
- **Product Care:** Hand Wash Only

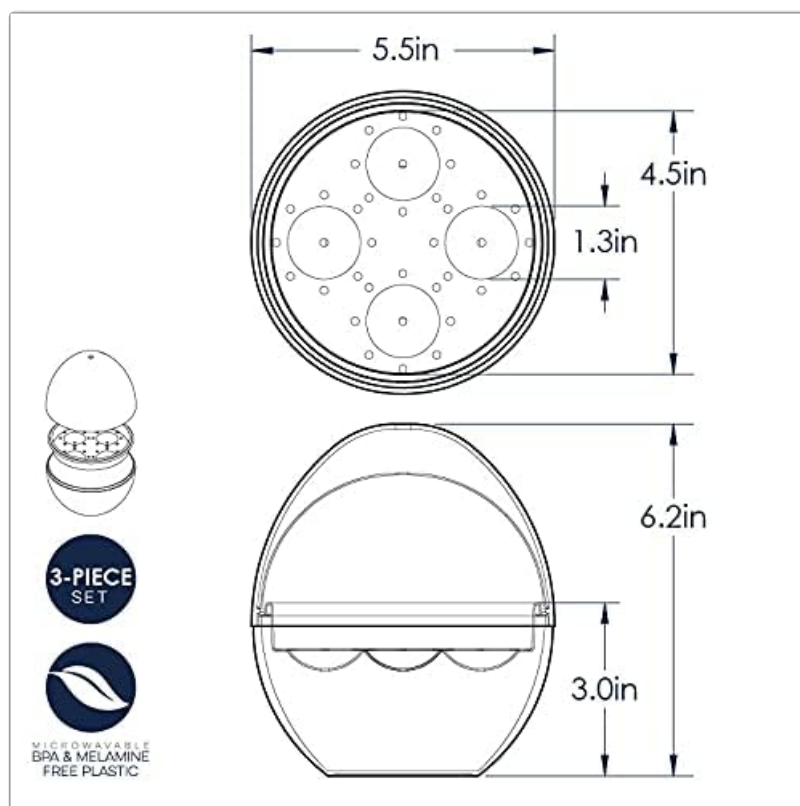


Image: Technical drawing illustrating the dimensions of the egg boiler.

7. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact Nordic Ware customer service

directly. Contact details can typically be found on the manufacturer's official website or product documentation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question