



Manuals.plus /

› Bloc Party /

› Bloc Party Silent Alarm Audio CD User Manual

## Bloc Party 2015639

# Bloc Party Silent Alarm Audio CD User Manual

Model: 2015639

## 1. INTRODUCTION

This manual provides essential information for the proper handling, playback, and care of your Bloc Party Silent Alarm Audio CD. This product is an audio recording designed for playback on standard compact disc players.

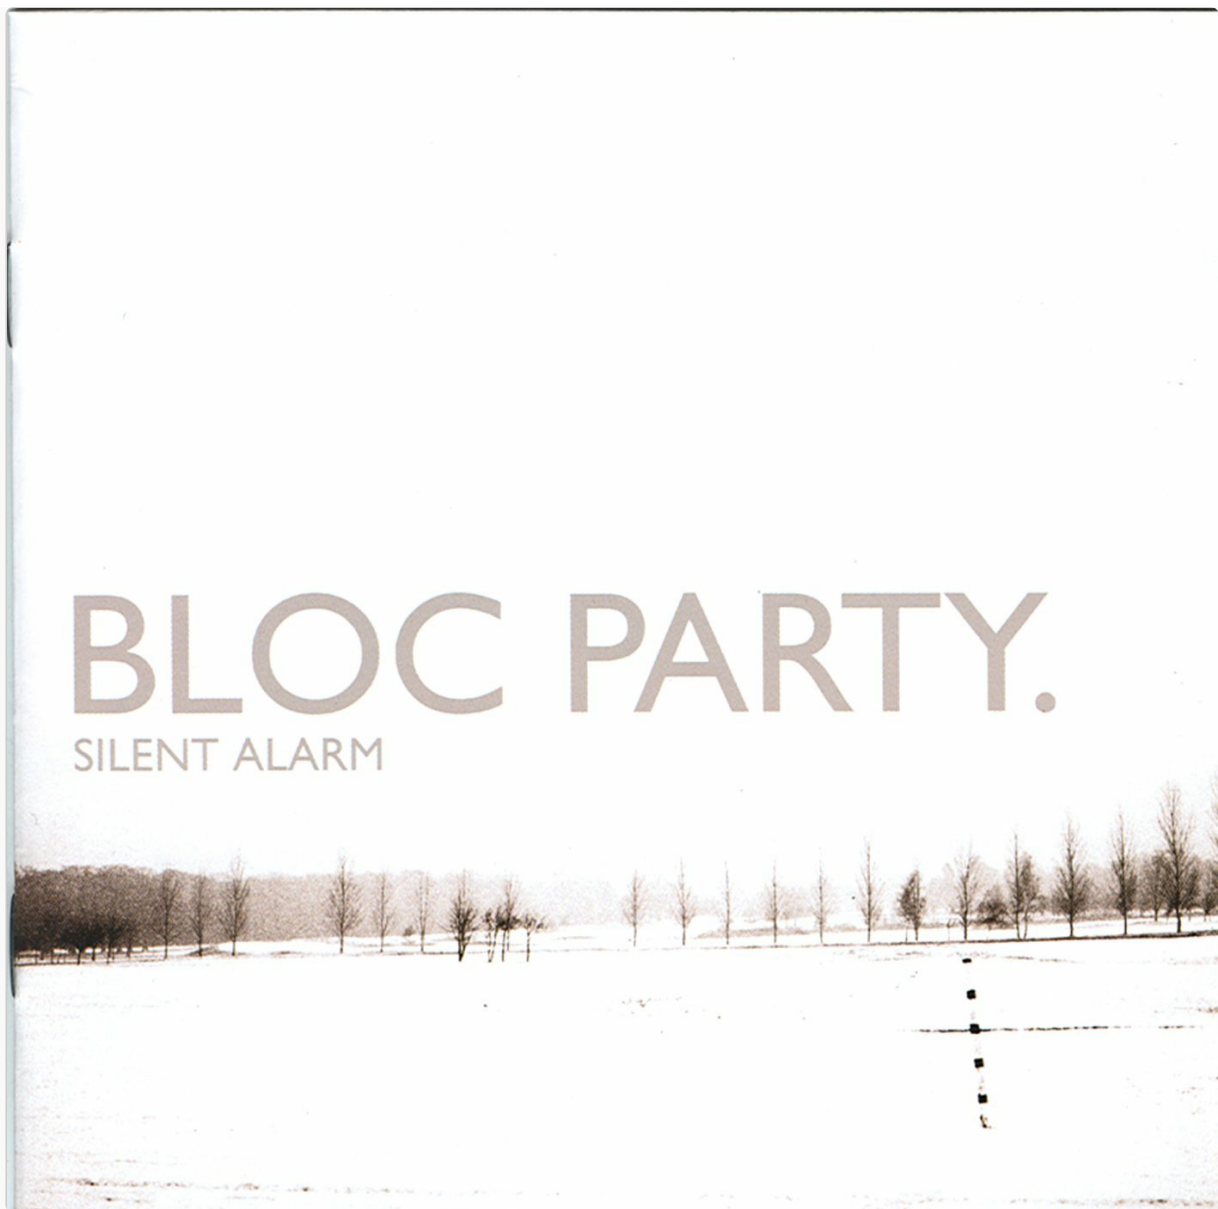


Image 1.1: Front cover of the Bloc Party Silent Alarm Audio CD. This image displays the album artwork.

## 2. SETUP: INSERTING THE AUDIO CD

---

1. **Prepare your CD player:** Ensure your audio CD player (e.g., home stereo, car CD player, computer drive) is powered on and ready to accept a disc.
2. **Open the disc tray/slot:** Depending on your player, either press the 'Open/Eject' button to open the disc tray or locate the disc insertion slot.
3. **Insert the CD:** Carefully place the Silent Alarm Audio CD into the disc tray or slot with the label side facing upwards. Ensure it is seated correctly in the tray's center or fully inserted into the slot.
4. **Close the disc tray/slot:** If using a tray, gently push it closed or press the 'Open/Eject' button again. For slot-loading players, the CD will be pulled in automatically once correctly positioned.
5. **Player recognition:** The CD player will typically display "Loading" or similar text as it reads the disc's contents. Once recognized, the total number of tracks and playback time may be displayed.

## 3. OPERATING: PLAYING THE AUDIO CD

---

Once the CD is loaded and recognized by your player, you can begin playback.

- **Play:** Press the **PLAY** button to start playback from the beginning of the first track or from where it was

last paused.

- **Pause:** Press the **PAUSE** button to temporarily stop playback. Press it again to resume.
- **Stop:** Press the **STOP** button to end playback and reset the disc to the beginning.
- **Skip Track:** Use the **SKIP FORWARD** ( ) or **SKIP BACKWARD** ( ) buttons to navigate between tracks.
- **Fast Forward/Rewind:** Hold down the **FAST FORWARD** or **REWIND** buttons to scan through a track.

## 4. MAINTENANCE: CARE AND STORAGE

Proper care ensures the longevity and optimal performance of your Audio CD.

- **Handling:** Always hold the CD by its edges or by placing a finger through the center hole. Avoid touching the shiny playback surface to prevent fingerprints and scratches.
- **Cleaning:** If the CD becomes dirty, gently wipe the playback surface with a soft, lint-free cloth. Wipe from the center outwards in straight lines, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Bending:** Do not bend the CD, as this can cause irreparable damage.

## 5. TROUBLESHOOTING: COMMON PLAYBACK ISSUES

Issue	Possible Cause	Solution
CD skips or stutters during playback.	Dust, fingerprints, or minor scratches on the playback surface.	Clean the CD carefully as described in the Maintenance section. Ensure the CD player is on a stable surface.
CD is not recognized by the player.	CD inserted incorrectly, dirty disc, or player malfunction.	Re-insert the CD with the label side up. Clean the disc. Try the CD in another player to rule out player issues.
No sound during playback.	Volume too low, incorrect input selected on receiver, or faulty cables.	Check the volume level on your player and amplifier. Ensure the correct audio input is selected. Verify all audio cables are securely connected.

## 6. SPECIFICATIONS

- **Product Title:** Silent Alarm
- **Artist:** Bloc Party
- **Format:** Audio CD
- **Model Number:** 2015639
- **Manufacturer:** VICE RECORDS
- **Number of Discs:** 1
- **Product Dimensions:** 5.65 x 0.4 x 5.04 inches
- **Item Weight:** 3.2 ounces

- **Language:** English
- **ASIN:** B0007NFMDK
- **First Available Date:** January 29, 2007

## 7. WARRANTY AND SUPPORT

---

For information regarding warranty coverage or customer support for this Audio CD, please refer to the documentation provided at the time of purchase or contact the retailer/manufacturer directly. Specific warranty terms may vary based on your region and point of purchase.

Manufacturer: **VICE RECORDS**

For general inquiries about Bloc Party, you may visit their official website or fan communities.[Bloc Party Official Website](#)