

Aiphone LEF-5

Aiphone LEF-5 Open Voice Selective Call Master Intercom User Manual

INTRODUCTION

Welcome to the Aiphone LEF-5 Open Voice Selective Call Master Intercom user manual. This document provides detailed instructions for the proper installation, operation, and maintenance of your intercom system. Please read this manual thoroughly before using the product to ensure optimal performance and safety.

What's in the Box?

- Aiphone LEF-5 Master Intercom Unit
- Mounting Hardware
- Instruction Manual (this document)

PRODUCT OVERVIEW

The Aiphone LEF-5 is a master intercom unit designed for selective calling and communication within a building, capable of connecting with up to five other intercoms (door, sub-master, or master units). It features a door-release button for remote access control.



Image 1: Front view of the Aiphone LEF-5 Master Intercom. The unit features a large speaker grille at the top. Below the speaker, there are five numbered call buttons (L1, L2, 3, 4, 5) with an 'OFF' indicator. A volume slider labeled 'VOL' is located on the left side of the control panel. An 'OCCUPIED' indicator is centrally located. On the right, there are three push buttons: 'LOCK' for door release, 'PRIV' for privacy, and 'TALK' for communication, with a 'CALL' indicator above the 'PRIV' button.

SETUP

Mounting

The LEF-5 master intercom can be mounted on a desktop or wall. Use the provided mounting hardware to secure the unit in your desired location. Ensure the mounting surface is stable and allows for proper cable routing.

Wiring Connections

The LEF-5 requires hardwired connections to other intercom units and a power supply. Each intercom in the system must be connected to an Aiphone RY-PA relay (sold separately) to enable door access control (e.g., electric strike) and integration with other devices like CCTV cameras or lights.

- **Intercom Connections:** Connect the LEF-5 to Aiphone LAF and LEF Series master intercoms or LA,

LE, and LS Series door and sub-master intercoms. Refer to the wiring diagrams provided with your specific system components for correct connections.

- **Door Strike Connection:** An Aiphone RY-PA relay (sold separately) is required to connect an electric strike (sold separately) for remote door access control.

Power Supply

The system is powered by a 12V power supply. An Aiphone PS-1225UL 12V power supply (sold separately) is recommended. Ensure the power supply is correctly connected according to the wiring instructions before operation.

OPERATING INSTRUCTIONS

Making a Call

1. Identify the desired intercom unit (door, sub-master, or master) you wish to call.
2. Press the corresponding numbered button (L1, L2, 3, 4, or 5) on the LEF-5 unit. An LED indicator above the button will illuminate.
3. Press and hold the **TALK** button to speak. Release the **TALK** button to listen for a response.

Receiving a Call

When a call is received from a sub-master intercom, a momentary chime will sound, and the corresponding LED indicator above the selectable call button will illuminate for approximately 20 seconds.

1. To respond, press and hold the **TALK** button.
2. Release the **TALK** button to listen to the other party.

Two-Way Communication

The LEF-5 operates on a push-to-talk, release-to-listen principle. Depressing the **TALK** button allows you to transmit audio, and releasing it allows you to receive audio from the connected intercom.

Door Release Function

To remotely unlock a door connected to the system (requires Aiphone RY-PA relay and electric strike), press the **LOCK** button during a conversation with the door intercom.

Privacy Function

Press the **PRIV** (Privacy) button to prevent other intercom users within the system from overhearing your conversation with another intercom unit.

Listening Function

At any time, you can listen to audio transmissions from a specified door or sub-master intercom. Select the desired intercom using its numbered button, then activate the listening feature (specific activation method may vary, refer to system wiring for details).

Volume Adjustment

Adjust the audio volume using the **VOL** slider control located on the front panel.

Chime Off

To silence the master intercom's chime alerts for incoming calls, slide the 'OFF' switch to the 'OFF' position.

MAINTENANCE

To ensure the longevity and proper functioning of your Aiphone LEF-5 intercom, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Environment:** Keep the unit in a dry environment, away from direct sunlight, extreme temperatures, and excessive dust.
- **Inspections:** Periodically check all wiring connections to ensure they are secure and free from damage.

TROUBLESHOOTING

If you encounter issues with your Aiphone LEF-5 intercom, refer to the following common problems and solutions:

- **No Power:**
Symptom: The unit does not power on, and no indicators light up.
Solution: Verify that the 12V power supply is correctly connected and functioning. Check all power wiring for secure connections.
- **No Audio / Poor Audio Quality:**
Symptom: Cannot hear or be heard, or audio is distorted.
Solution: Check the **VOL** slider to ensure it is not set to minimum. Inspect all communication wiring for proper connection and integrity. Ensure the correct intercom unit is selected.
- **Door Release Not Functioning:**
Symptom: Pressing the **LOCK** button does not unlock the door.
Solution: Confirm that an Aiphone RY-PA relay and an electric strike are correctly installed and wired to the system. Check the wiring between the LEF-5, the RY-PA relay, and the electric strike.
- **Intermittent Communication:**
Symptom: Communication cuts in and out.
Solution: Inspect all wiring connections for looseness or damage. Ensure proper wire gauge is used for the distance (e.g., 22 AWG for up to 650 ft, 18 AWG for up to 1,600 ft).
- **Call LED Not Illuminating:**
Symptom: No LED indication when a call is received or initiated.
Solution: Check the connection to the calling intercom unit. Ensure the 'OFF' switch is not engaged if expecting a chime.

If these troubleshooting steps do not resolve the issue, please contact Aiphone customer support or a qualified technician.

SPECIFICATIONS

Model Number	LEF-5
Overall Dimensions (H x W x D)	8-1/8 x 7-1/2 x 2-3/16 inches
Communication Output (Reception)	800mW at 20 ohms




Communication Output (Transmission)	500mW at 20 ohms
Maximum Distance (Door/Sub to Master)	650 ft (using 22 AWG wire) 1,600 ft (using 18 AWG wire)
Door Strike Connection	Requires Aiphone RY-PA relay (sold separately)
Power Requirements	Aiphone PS-1225UL 12V power supply (sold separately)




WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the official Aiphone website or contact Aiphone customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.


Aiphone North American Headquarters: Bellevue, WA

Related Documents - LEF-5

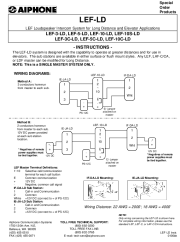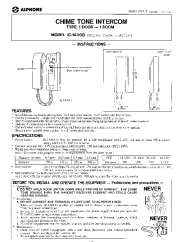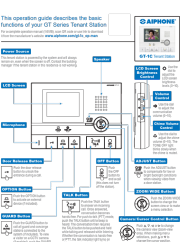	Aiphone LEF-LD Loudspeaker Intercom System: Instructions and Wiring Detailed instructions and wiring diagrams for the Aiphone LEF-LD Long Distance Loudspeaker Intercom System, covering models LEF-3-LD, LEF-5-LD, LEF-10-LD, LEF-10S-LD, LEF-3C-LD, LEF-5C-LD, and LEF-10C-LD.
	Aiphone IC-1AD(U) Chime Tone Intercom System: Installation and Operation Guide Comprehensive guide for the Aiphone IC-1AD(U) 1-door, 1-room chime tone intercom system, covering features, specifications, installation, wiring, operation, and warranty.
	Aiphone GT-1C Tenant Station Operation Guide Comprehensive operation guide for the Aiphone GT-1C Tenant Station. Learn about its power source, LCD screen, speaker, microphone, and the functions of buttons like Door Release, Option, Guard, Talk, and Off, along with side controls for brightness, volume, and zoom.

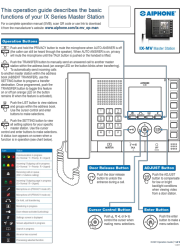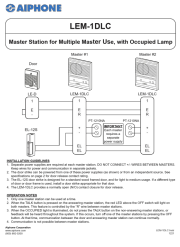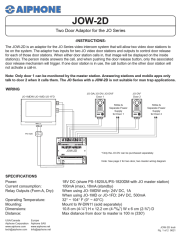	Aiphone IX Series Master Station Operation Guide A comprehensive operation guide for the Aiphone IX Series Master Station, detailing basic functions, button operations, and status indicators.
	Aiphone LEM-1DLC Master Station Installation and Operation Guide Detailed installation and operation guide for the Aiphone LEM-1DLC master station, designed for multiple master use with occupied lamp functionality, including wiring diagrams and specifications.
	Aiphone JOW-2D Two Door Adaptor for JO Series Video Intercom System - Installation Guide Detailed instructions and specifications for the Aiphone JOW-2D adaptor, enabling two door stations for the JO Series video intercom system. Learn about wiring, power, and operational features for intercom installations.

 Documents - Aiphone – LEF-5

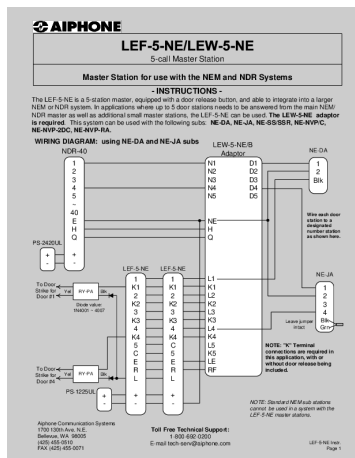


[pdf] Instructions Diagram

Visio LEF 5 NE Type B new vsd jasend LEW 36 KB NEM Instructions Aiphone aiphone 2024 11 |||

5-call Master Station Master Station for use with the NEM and NDR Systems -

INSTRUCTIONS - The **LEF-5-NE** is a 5-station master, equipped with a door release button, and able to integrate into a larger NEM or NDR system. In applications where up to 5 door stations needs to be answered from the main ...

 lang:en score:42 filesize: 35.91 K page_count: 5 document date: 2008-06-04

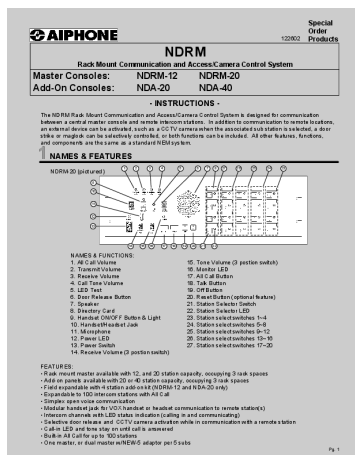

[pdf] Instructions

Visio NDRM Instructions vsd JoyS AIPHONE Residential Commercial Telephone Intercom Entry Access System Installation Manuals AAARemotes Instr aiphone Files Prod Lit SOP Instal |||

 
 
 
 
122602 NDRM Rack Mount Communication and Access/Camera Control System

Master Consoles: NDRM-12 N Connection is the same for NDA add-on selectors.

Pg. 6 3 WIRING DIAGRAMS 3D. SYSTEM USED WITH **LEF-5-NE** MASTERS

WIRING DIAGRAM: Mother Board CP-543A Intercom CP-544A #1 A - A- PS-24E B...

lang:en score:41 filesize: 197.17 K page_count: 9 document date: 2002-12-26

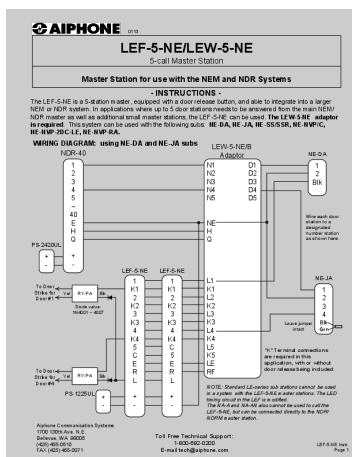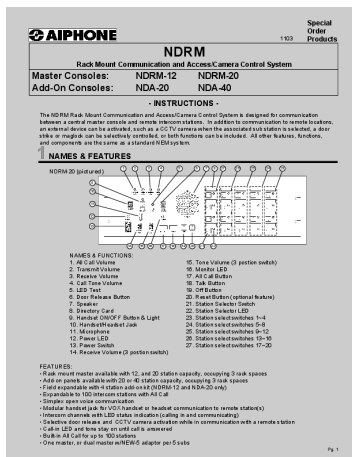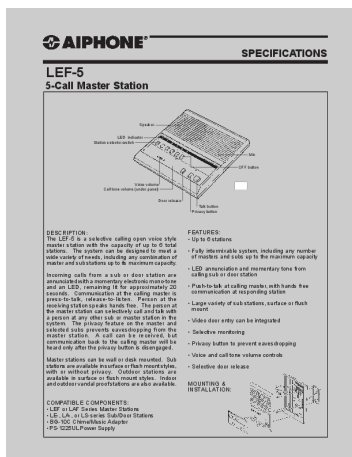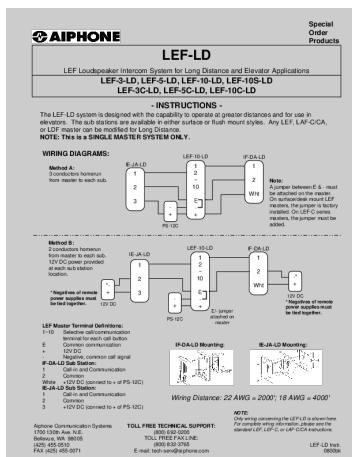

[\[pdf\]](#) User Manual Instructions Diagram

Visio LEF LD Unknown Long Distance Loudspeaker Intercom Instructions Aiphone Installation Manual

Literature AIPHONE Residential Commercial Telephone Entry Access System Manuals AAARemotes

Instr aiphone Files Prod Lit SOP Instal |||

LEF-LD Special Order Products LEF Loudspeaker Intercom System for Long

Distance and Elevator Applications LEF-3-LD, **LEF-5-LD**, LEF-10-LD, LEF-10S-LDLEF-3C-LD, **LEF-5C-LD**, LEF-10C-LD - INSTRUCTIONS - The LEF-LD system is

designed with the capability to operate at greater distances and for use in el...

lang:en score:40 filesize: 22.67 K page_count: 1 document date: 0000-00-00

[\[pdf\]](#) User Manual Specifications

AIPHONE LEF 5 Intercom Specification Manual Aiphone lef ss amazinggates 80 Do It Yourself Manuals

LEF-5 5-Call Master Station SPECIFICATIONS Speaker LED indicator Station

selector switch Voice volume Call tone volume under panel Door release Talk button

Privacy button Mic OFF button DESCRIPTION: The **LEF-5** is a selective calling open

voice style master station with the capacity of up to 6...

lang:en score:39 filesize: 104.01 K page count: 2 document date: 2005-05-19

[\[pdf\]](#) User Manual Instructions Specifications

Visio NDRM Instructions vsd joys Rack Mount System With Access and Door Control Instruction Manual

place designated in writing by Aiphone will not be responsible for any costs incurred involving on site

service calls SPECIFICATIONS Subject to change without notice Power Source 24V DC at master Use

PS 2420UL 2 pin connector red brown wire used add panels only wedophones Manuals res fault codes

Electronics ICs ALPHONE

1103 NDRM Rack Mount Communication and Access/Camera Control System Master

Consoles: NDRM-12 NDR Connection is the same for NDA add-on selectors. Pg.

6.3 WIRING DIAGRAMS 3D. SYSTEM USED WITH LEF-5-NE MASTERS WIRING

DIAGRAM: Mother Board CP-543A Intercom CP-544A #1 A - A- PS-2420U...

lang:en score:39 filesize: 209 K page count: 9 document date: 2004-04-19

[\[pdf\]](#) Instructions Diagram

Visio LEF 5 NE Type B new vsd paulh Instructions aiphonepty au 2015 04

 
0113 **LEF-5-NE/LEW-5-NE** 5-call Master Station Master Station for use with the NEM

and NDR Systems - INSTRUCTIONS - The **LEF-5-NE** is a 5-station master, equipped

with a door release button, and able to integrate into a larger NEM or NDR system. In

applications where up to 5 door stations needs to be ...

lang:en score:37 filesize: 99.09 K page count: 5 document date: 2013-01-31

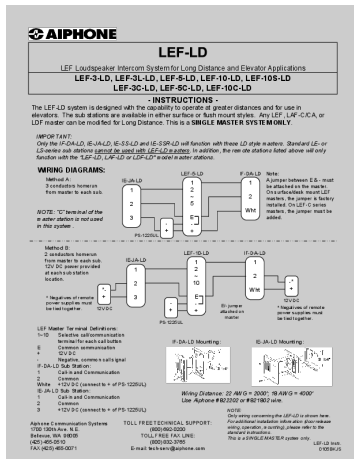


[\[pdf\]](#) Instructions Diagram

Visio LEF LD vsd joys Instr 2005 103 KB Long Distance and LAF Instructions Aiphone Instr2005 aiphone 2025 01 |||

LEF Loudspeaker Intercom System for Long Distance and Elevator Applications LEF-3-LD, LEF-3L-LD, **LEF-5-LD**, LEF-5L-LD, LEF-10S-LD, LEF-10S-LD, LEF-3C-LD, **LEF-5C-LD**, LEF-10C-LD - INSTRUCTIONS - The LEF-LD system is designed with the capability to operate at greater distances and for use in elevators. The sub stati...

 
lang:en **score:33** filesize: 102.7 K page_count: 1 document date: 2005-01-19

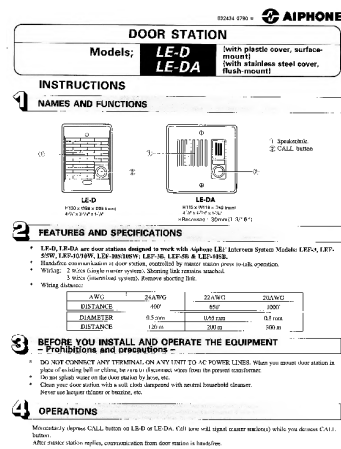

[\[pdf\]](#) User Manual Installation Guide Instructions Specifications

Aiphone Intercom System LE D user manual aiphone intercom systems Install Manuals Archives 184844 text archive org manualsbase id |||

 AIPHONE 832434 0790 DOOR STATION _ Models; M with plastic cover, surfacemount with stainless ... to work with Aiphone LEF Intercom System Models: LEF-3, LEF5/5W, LEF-10/10W, LEF-10S/10SW; LEF-3B, **LEF-5B** LEF-10SB. * Handsfree communication at door station, controlled by master station press-to-... lang:en **score:33** filesize: 248.35 K page_count: 2 document date: 2020-08-11

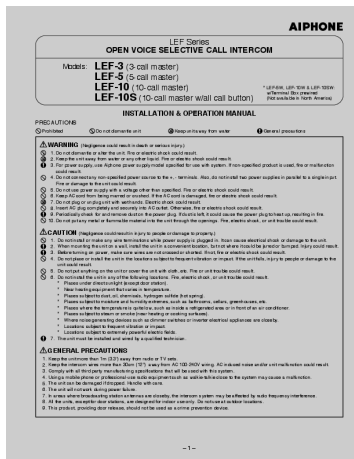

[\[pdf\]](#) User Manual Installation Guide Instructions

Models LEF 3 call master 5 10 10S ccinv AWS 1 Series OPEN VOICE SELECTIVE CALL INTERCOM INSTALLATION OPERATION MANUAL w all button * 5W 10W 10SW Terminal Box prewired Instr mmo 22622178 1525353737 4237 31445 instructions Aiphone Manual1 dwwi9Inoau63q cloudfront net aiphone s eet eu icmedia doorentydirect acrobat inst files d tools Visualizations Approved Documents hooverfence mas assets media

LEF Series OPEN VOICE SELECTIVE CALL INTERCOM Models: LEF-3 3-call master **LEF-5** 5-call master LEF-10 10-call master LEF-10S 10-call master w/all call button * **LEF-5W**, LEF-10W LEF-10SW: w/Terminal Box prewired Not available in North America PRECAUTIONS Prohibited INSTALLATION OPERA...

lang:en **score:33** filesize: 1.2 M page_count: 16 document date: 2016-01-26

**Special Order
Products**

GW-LE8

Selective Call Audio Module for Open Voice Systems

Use with:

C-MILA, LEM-IDLC, LEF, LAF-C, or LDF Masters

- INSTRUCTIONS -

The GW-LE8 is an audio module, used with other components to make up a selective calling audio door station. Panels from two to eight stations can be installed. The entrance panel can selectively call and communicate with open voice master stations. Use any of the above listed master stations.

8 Call Entrance Station

GW-LE8 Terminal Definitions:

- 1- Common communication
- 2- Negative common call signal
- 3- Common call signal
- 4- Negative Selective Call and communication line (+ per button)

*MODULAR ENTRANCE STATIONS

1-LE82 components for each entrance panel:

2 Call Panel	1 Call Panel	4 Call Panel
GW-LE8	GW-LE8	GW-LE8
GW-3P	GW-3P	GW-3P
GW-4P	GW-4P	GW-4P
GW-5P	GW-5P	GW-5P
GW-6P	GW-6P	GW-6P
GW-7P	GW-7P	GW-7P
GW-8P	GW-8P	GW-8P
GW-9P	GW-9P	GW-9P
GW-10P	GW-10P	GW-10P
GW-11P	GW-11P	GW-11P
GW-12P	GW-12P	GW-12P
GW-13P	GW-13P	GW-13P
GW-14P	GW-14P	GW-14P
GW-15P	GW-15P	GW-15P
GW-16P	GW-16P	GW-16P
GW-17P	GW-17P	GW-17P
GW-18P	GW-18P	GW-18P
GW-19P	GW-19P	GW-19P
GW-20P	GW-20P	GW-20P
GW-21P	GW-21P	GW-21P
GW-22P	GW-22P	GW-22P
GW-23P	GW-23P	GW-23P
GW-24P	GW-24P	GW-24P
GW-25P	GW-25P	GW-25P
GW-26P	GW-26P	GW-26P
GW-27P	GW-27P	GW-27P
GW-28P	GW-28P	GW-28P
GW-29P	GW-29P	GW-29P
GW-30P	GW-30P	GW-30P
GW-31P	GW-31P	GW-31P
GW-32P	GW-32P	GW-32P
GW-33P	GW-33P	GW-33P
GW-34P	GW-34P	GW-34P
GW-35P	GW-35P	GW-35P
GW-36P	GW-36P	GW-36P
GW-37P	GW-37P	GW-37P
GW-38P	GW-38P	GW-38P
GW-39P	GW-39P	GW-39P
GW-40P	GW-40P	GW-40P
GW-41P	GW-41P	GW-41P
GW-42P	GW-42P	GW-42P
GW-43P	GW-43P	GW-43P
GW-44P	GW-44P	GW-44P
GW-45P	GW-45P	GW-45P
GW-46P	GW-46P	GW-46P
GW-47P	GW-47P	GW-47P
GW-48P	GW-48P	GW-48P
GW-49P	GW-49P	GW-49P
GW-50P	GW-50P	GW-50P
GW-51P	GW-51P	GW-51P
GW-52P	GW-52P	GW-52P
GW-53P	GW-53P	GW-53P
GW-54P	GW-54P	GW-54P
GW-55P	GW-55P	GW-55P
GW-56P	GW-56P	GW-56P
GW-57P	GW-57P	GW-57P
GW-58P	GW-58P	GW-58P
GW-59P	GW-59P	GW-59P
GW-60P	GW-60P	GW-60P
GW-61P	GW-61P	GW-61P
GW-62P	GW-62P	GW-62P
GW-63P	GW-63P	GW-63P
GW-64P	GW-64P	GW-64P
GW-65P	GW-65P	GW-65P
GW-66P	GW-66P	GW-66P
GW-67P	GW-67P	GW-67P
GW-68P	GW-68P	GW-68P
GW-69P	GW-69P	GW-69P
GW-70P	GW-70P	GW-70P
GW-71P	GW-71P	GW-71P
GW-72P	GW-72P	GW-72P
GW-73P	GW-73P	GW-73P
GW-74P	GW-74P	GW-74P
GW-75P	GW-75P	GW-75P
GW-76P	GW-76P	GW-76P
GW-77P	GW-77P	GW-77P
GW-78P	GW-78P	GW-78P
GW-79P	GW-79P	GW-79P
GW-80P	GW-80P	GW-80P
GW-81P	GW-81P	GW-81P
GW-82P	GW-82P	GW-82P
GW-83P	GW-83P	GW-83P
GW-84P	GW-84P	GW-84P
GW-85P	GW-85P	GW-85P
GW-86P	GW-86P	GW-86P
GW-87P	GW-87P	GW-87P
GW-88P	GW-88P	GW-88P
GW-89P	GW-89P	GW-89P
GW-90P	GW-90P	GW-90P

[illegible][illegible]

[\[pdf\]](#) Instructions

Instr Unknown GW LE8 Audio Module for Open Voice System Instructions common E R plus 1 individual per sub looped or 5 conductors homerun to each master Shielded cable is recommended Use Aiphone 822202 2 conductor 822212 12 max 8 station wiring Door Release wedophones Manuals res fault codes Electronics ICs ALPHONE Index of |||

GW-LE8 Selective Call Audio Module for Open Voice Systems Use with: C-ML/A,
LEM-1DL/C, LEF, LAF-C, o ... plete wiring information, please see the LEM-1DL/C
instructions. GW-LE8 WITH GW-4P GW-2P, USING **LEF-5** MASTER STATIONS
GW-LE8 D DYel Blu Blu Blu Blu **LEF-5** #1 E - - GW-4P 1 PS-12C R ...
lang:en score:33 filesize: 119 K page_count: 6 document date: 0000-00-00

lang:en score:33 filesize: 119 K page_count: 6 document date: 0000-00-00

[\[pdf\]](#) Instructions Diagram


Visio MYW BA M 0700 vsd BradK Positive 18V DC Negative MK DAC* A1 A2 B1 B2 Brn Org 1A1 1A2 U1
U2 MY CU PS 18C MYH Aiphone Wire 851602 Individual Components for System Long Distance Adaptor
Between Monitors Instructions res fault codes Manuals Electronics ICs ALPHONE Index of wedophones |||
MYW-BA-M Special Order Products Long Distance Video Adaptor For MY Monitors -
INSTRUCTIONS - The ... handset for IE-1GD and IE-2AD IE-8MD 2 Door, 6 Room
master handset IE-8HD Sub handset for IE-8MD **LEF-5** 5 call open voice master,
surface or desk mount LEF-10 10 call open voice master, surface or...
lang:en **score:32** filesize: 84.08 K page count: 2 document date: 2002-11-25

lang:en score:32 filesize: 84.08 K page count: 2 document date: 2002-11-25

[Target Distributing: Professional Audio, Video, Conferencing & Security Solutions Catalog](#)

Discover a comprehensive catalog of professional audio, video, conferencing, and security products from leading brands including Sony, Polycom, Panasonic, Fujifilm, and more. Find solutions for businesses and AV professionals.

 lang:en score:32 filesize: 7.43 M page count: 49 document date: 2014-09-26

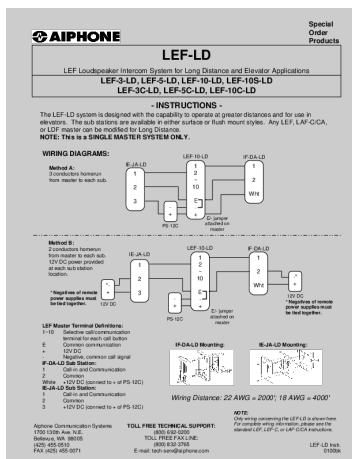


[\[pdf\]](#) Instructions Diagram

Visio LEF LD Unknown Instr 23 KB Long Distance and LAF Instructions Aiphone 1 aiphone 2025 01 |||

LEF-LD Special Order Products LEF Loudspeaker Intercom System for Long Distance and Elevator Applications LEF-3-LD, **LEF-5-LD**, LEF-10-LD, LEF-10S-LD LEF-3C-LD, **LEF-5C-LD**, LEF-10C-LD - INSTRUCTIONS - The LEF-LD system is designed with the capability to operate at greater distances and for use in el...

 lang:en score:32 filesize: 22.55 K page_count: 1 document date: 0000-00-00

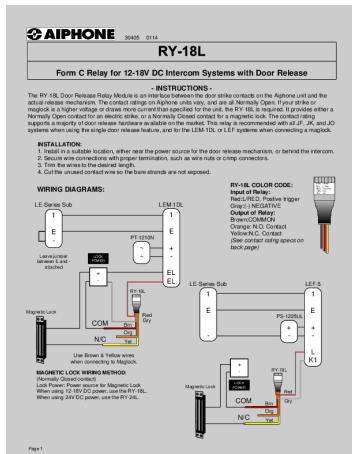

[\[pdf\]](#) Installation Guide Instructions Diagram

 
Visio RY 18L Instr 0114 vsd jasend Form C Relay for 12 18V DC Intercom Systems with Door Release

INSTRUCTIONS WIRING DIAGRAMS Page 1 INSTALLATION Install in a suitable location either near the power source door release mechanism or behind intercom Instructions dvwi9Inoa63q cloudfront net

aiphone instructions au 2015 04 aiphonepty

30405 0114 Form C Relay for 12-18V DC Intercom Systems with Door Release -
INSTRUCTIONS - The RY-18 ... page RED: L/RED BLK: - Neg. BRN: Common ORG:
N.O. YEL: N.C. RY-18L EL EL LE-Series Sub 1 **LEF-5** 1 Magnetic Lock COM N/C
Red Gry Brn Org Yel Use Brown Yellow wires when connecting to Ma...

lang:en score:32 filesize: 33.75 K page_count: 2 document date: 2014-01-30

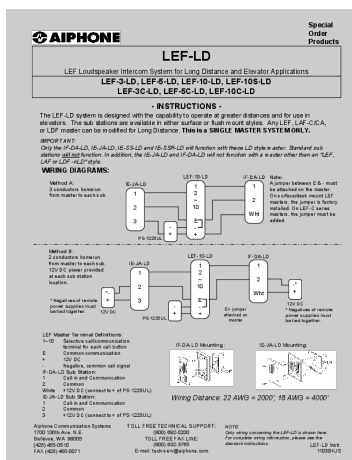


[\[pdf\]](#) Instructions Diagram

Visio LEF LD vsd joys Long Distance Loudspeaker Intercom Instructions must be tied together * 12V DC

Negatives of remote power supplies Aiphone Communication Systems 1700 130th Ave N E Bellevue WA
98005 425 455 0510 FAX 0071 Instr 1103BKJS wedophones Manuals res fault codes Electronics ICs
AIPHONE

LEF-LD Special Order Products LEF Loudspeaker Intercom System for Long Distance and Elevator Applications LEF-3-LD, **LEF-5-LD**, LEF-10-LD, LEF-10S-LD LEF-3C-LD, **LEF-5C-LD**, LEF-10C-LD - INSTRUCTIONS - The LEF-LD system is designed with the capability to operate at greater distances and for use in el...

 lang:en score:32 filesize: 86.37 K page_count: 1 document date: 2003-11-19

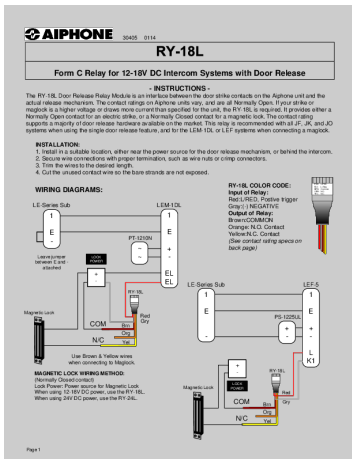


[\[pdf\]](#) Installation Guide Instructions Diagram

Visio RY 18L Instr 0114 vsd jasend ry 18l instructions s3 absupply net amazonaws aiphone |||

30405 0114 Form C Relay for 12-18V DC Intercom Systems with Door Release - INSTRUCTIONS - The RY-18 ... page RED: L/RED BLK: - Neg. BRN: Common ORG: N.O. YEL: N.C. RY-18L EL EL LE-Series Sub 1 **LEF-5** 1 Magnetic Lock COM N/C

 Red Gry Brn Org Yel Use Brown Yellow wires when connecting to Ma... lang:en **score:32** filesize: 36.17 K page_count: 2 document date: 2014-01-30

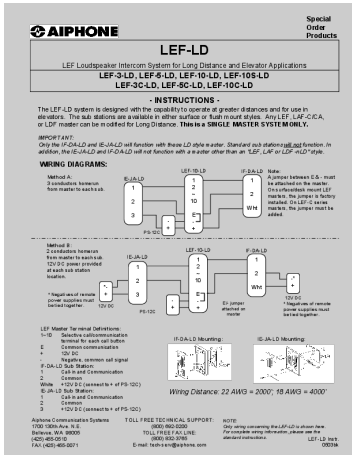

[\[pdf\]](#) Instructions Diagram


Visio LEF LD2 vsd bradk LD Instr 0503 86 KB Long Distance and LAF Instructions Aiphone aiphone 2025

01 |||

LEF-LD Special Order Products LEF Loudspeaker Intercom System for Long Distance and Elevator Applications LEF-3-LD, **LEF-5-LD**, LEF-10-LD, LEF-10S-LD

LEF-3C-LD, **LEF-5C-LD**, LEF-10C-LD - INSTRUCTIONS - The LEF-LD system is designed with the capability to operate at greater distances and for use in el...

 lang:en **score:31** filesize: 85.62 K page_count: 1 document date: 2003-06-04

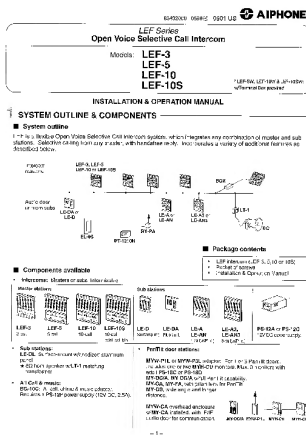

[\[pdf\]](#) User Manual

Aiphone LEF 10S user manual 185370 text archive org manualsbase id

G AIPHONE 83492000 0 6 0501 US INSTALLATION OPERATION MANUAL 1

SYSTEM OUTLINE COMPONENTS- Syst ... reply. Incorporates a variety of additional features as described below. Intercom masters LEF-3, **LEF-5** LEF-10orLEF-10S Audio door or room subs PT-1210N Components available Intercoms: Masters o...

lang:en **score:31** filesize: 1.11 M page_count: 12 document date: 2020-08-11

[pdf] User Manual Installation Guide Instructions

CLICK HERE FOR MANUALAiphone LEF 3L Indoor Station PSS StoreLEF Instructionscdn shopify s files

1 1666 9427 Instructions 8426418792604129510 MANUALUser ManualAiphone StoreAiphone Series 3

Call Master with Selective Door ReleaseLEF InstructionsUpload AJ LEF3L UserManualcdn

8426418792604129510cdn adiglobaldistribution us pim Original 10057 Upload UserManual ManualUser

ReleaseAiphone LEFLEF UserManualUpload LEF10 5 10 User ManualLEF ManualCLICK Manuals S

Security Alarms Inc security alarms burglar cameras arkansasS arkansasAiphone InstrLEF

UserManualLEF Instraiphone home assets uploads documents products instructions Instrcdn

UserManualaiphone 80 Instr |||

 
 
LEF Series OPEN VOICE SELECTIVE CALL INTERCOM Models: LEF-3 3-call

master **LEF-5** 5-call master LEF-10 10-call master LEF-10S 10-call master w/all call

button * **LEF-5W**, LEF-10W LEF-10SW: w/Terminal Box prewired Not available in

North America PRECAUTIONS Prohibited INSTALLATION OPERA...

lang:en score:30 filesize: 1.2 M page_count: 16 document date: 2016-01-26

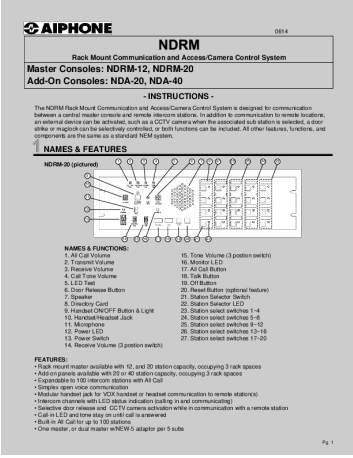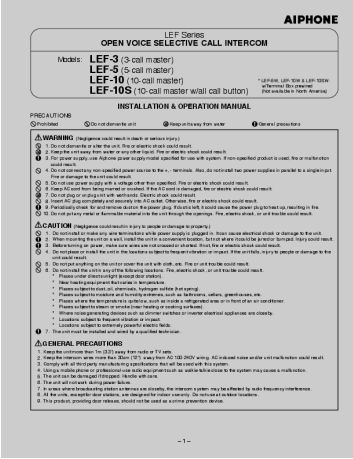

[pdf] Instructions

Visio NDRM Instructions vsd JasenD aiphonepty au 2015 04

0614 Rack Mount Communication and Access/Camera Control System Master

 
Consoles: NDRM-12, NDRM-20 Ad ... ra. Connection is the same for NDA add-on

selectors. Pg. 6 WIRING DIAGRAMS 3D. SYSTEM USED WITH **LEF-5-NE**

MASTERS WIRING DIAGRAM: Mother Board CP-543A Intercom CP-544A #1 A - A-

PS-2420U...

lang:en score:30 filesize: 630.2 K page_count: 9 document date: 2014-06-02

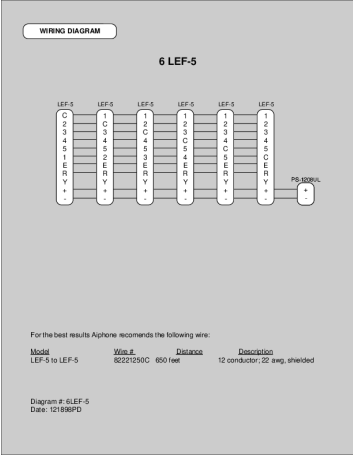

[pdf] Diagram

6 LEF 5 57 KB Aiphone aiphone 2024 11 |||

 
WIRING DIAGRAM 6 **LEF-5** **LEF-5** C 2 3 4 5 1 E R Y - **LEF-5** 1 C 3 4 5 2 E R Y -

LEF-5 1 2 C 4 5 3 E R Y - **LEF-5** 1 2 3 C 5 4 E R Y - **LEF-5** 1 2 3 4 C 5 E R Y - **LEF-5**

1 2 3 4 5 C E R Y - PS-1208UL - For the best results Aiphone recommends the

following wire: Model **LEF-5** to **LEF-5** Wire...

lang:en score:29 filesize: 57.02 K page_count: 1 document date: 2024-11-12

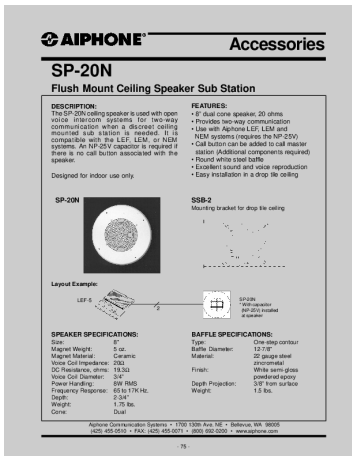


[\[pdf\]](#) User Manual Specifications Accessories

Provided by ManualsAndMore Download User Manual Aiphone SP 20N Specifications SP20N

manualsandmore |||

Accessories SP-20N Flush Mount Ceiling Speaker Sub Station DESCRIPTION: The SP-20N ceiling speaker ... ation in a drop tile ceiling SP-20N SSB-2 Mounting bracket for drop tile ceiling Layout Example: **LEF-5** 2 SP-20N * With capacitor NP-25V installed at speaker SPEAKER SPECIFICATIONS: Size: 8 ...

 lang:en score:29 filesize: 526.02 K page_count: 1 document date: 2019-07-23

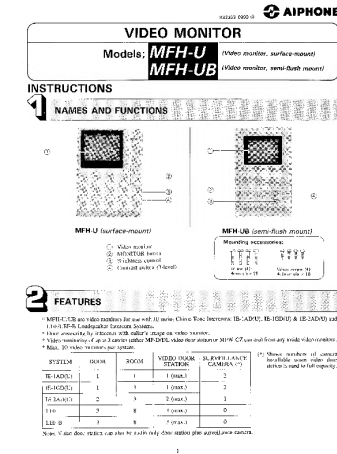

[\[pdf\]](#) User Manual Instructions

Aiphone Car Video System MFH U user manual 50751 text archive org manualsbase id

 
0 AIPHONE 832333 0990 VIDEO MONITOR MFH-U Models; Video monitor, surface-

mount MFH-UB ____J ... rveillance camera: MFW-CZ, supplied by Aiphone. Can be

used with LE-D/DA audio only door station . **LEF-5**, 10, 10S: Master station. MFH-U:

Video monitor, surface-mount. **LEF-5B**, 10SB: Master station, s...

lang:en score:28 filesize: 1.18 M page_count: 6 document date: 2020-06-13

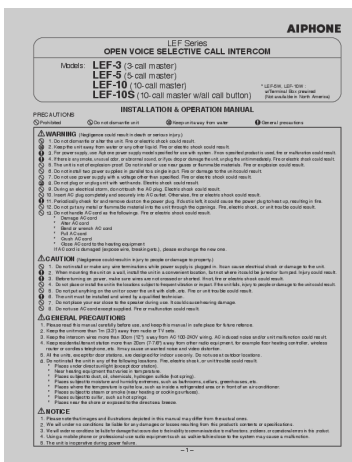

[\[pdf\]](#) User Manual Installation Guide Instructions

LEF 3 5 10 2 70 MB —Aiphone APP nS Instructions gekka no umi 2023 06 |||

 
Models: LEF Series OPEN VOICE SELECTIVE CALL INTERCOM LEF-3 3-call

master **LEF-5** 5-call master LEF-10 10-call master LEF-10S 10-call master w/all call

button * **LEF-5W**, LEF-10W : w/Terminal Box prewired Not available in North America

PRECAUTIONS Prohibited INSTALLATION OPERATION MANUA...

lang:en score:28 filesize: 2.7 M page_count: 16 document date: 2018-01-30

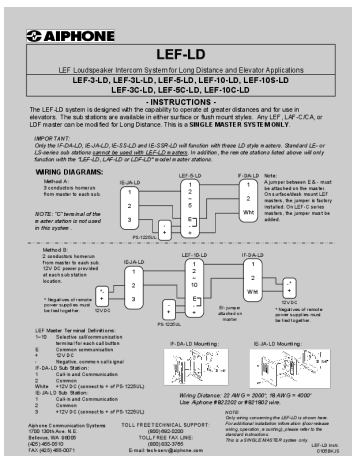

[\[pdf\]](#) Instructions Diagram

Visio LEF LD vsd joys Instr2005 103 KBLong Distance and LAF Instructions Aiphoneaiphone |||

 
LEF Loudspeaker Intercom System for Long Distance and Elevator Applications LEF-

3-LD, LEF-3L-LD, **LEF-5-LD**, LEF-10-LD, LEF-10S-LD LEF-3C-LD, **LEF-5C-LD**, LEF-

10C-LD - INSTRUCTIONS - The LEF-LD system is designed with the capability to

operate at greater distances and for use in elevators. The sub stati...

lang:en score:28 filesize: 102.7 K page_count: 1 document date: 2005-01-19

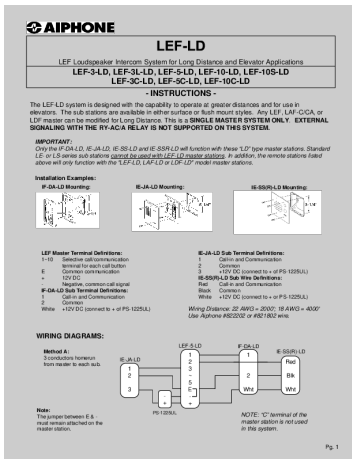

[pdf] Instructions

Visio LEF LD working vsd joys Loudspeaker Intercom System for Long Distance and Aiphone

Communication Systems 1700 130th Ave N E Bellevue WA 98005 425 455 0510 FAX 0071 Page 2 Instr

0207JD TOLL FREE TECHNICAL SUPPORT Instructions centralvacuumstores meta Attachment |||

 
LEF Loudspeaker Intercom System for Long Distance and Elevator Applications LEF-

3-LD, LEF-3L-LD, **LEF-5-LD**, LEF-10-LD, LEF-10S-LD LEF-3C-LD, **LEF-5C-LD**, LEF-

10C-LD - INSTRUCTIONS - The LEF-LD system is designed with the capability to

operate at greater distances and for use in elevators. The sub stati...

lang:en **score:27** filesize: 39.86 K page_count: 2 document date: 2007-03-07

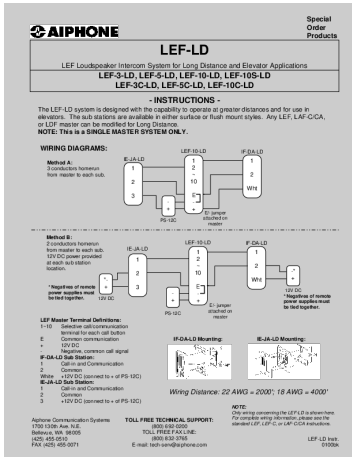


Aiphone LEF-LD Loudspeaker Intercom System: Instructions and Wiring

Detailed instructions and wiring diagrams for the Aiphone LEF-LD Long Distance

Loudspeaker Intercom System, covering models LEF-3-LD, LEF-5-LD, LEF-10-LD,

LEF-10S-LD, LEF-3C-LD, LEF-5C-LD, and LEF-10C-LD.

 lang:en **score:27** filesize: 22.56 K page_count: 1 document date: 2025-07-25

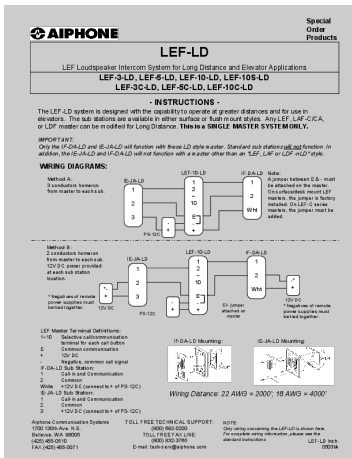

[pdf] Instructions Diagram

Visio LEF LD2 vsd bradk LD Instr 0503 86 KBLong Distance and LAF Instructions Aiphoneaiphone |||

 
LEF-LD Special Order Products LEF Loudspeaker Intercom System for Long

Distance and Elevator Applications LEF-3-LD, **LEF-5-LD**, LEF-10-LD, LEF-10S-LD

LEF-3C-LD, **LEF-5C-LD**, LEF-10C-LD - INSTRUCTIONS - The LEF-LD system is

designed with the capability to operate at greater distances and for use in el...

lang:en **score:26** filesize: 85.62 K page_count: 1 document date: 2003-06-04

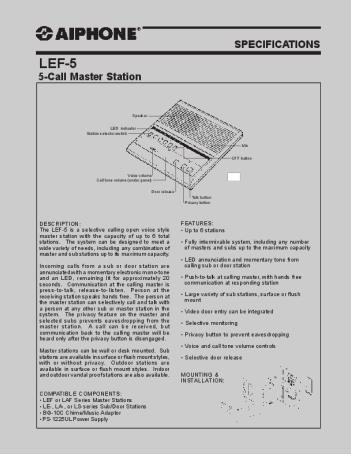


[pdf] Specifications

LEF 5 SS p65 joys pd386209 s3 absupply net amazonaws ClarkSecurity Aiphone |||

LEF-5 5-Call Master Station SPECIFICATIONS Speaker LED indicator Station selector switch Voice volume Call tone volume under panel Door release Talk button Privacy button Mic OFF button DESCRIPTION: The **LEF-5** is a selective calling open voice style master station with the capacity of up to 6...

 lang:en score:26 filesize: 89.09 K page_count: 2 document date: 2014-07-22

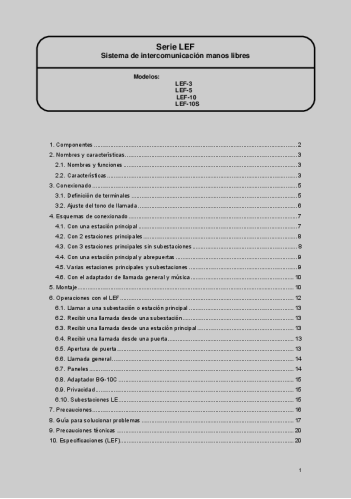

[pdf] User Manual Declaration of Conformity

 
Microsoft Word MANUAL Serie LEF doc cluque Sistema de intercomunicación manos libres Modelos 3 5 10 Aiphone no se hará responsable instalaciones erróneas este producto LEF3 Manual descargas cetronic es

Serie LEF Sistema de intercomunicacin manos libres Modelos: LEF-3 **LEF-5** LEF-10 LEF-10S 1. Componentes

..... 2 2.

Nombres y caracterstics.....

lang:es score:26 filesize: 544.63 K page_count: 20 document date: 2008-12-16

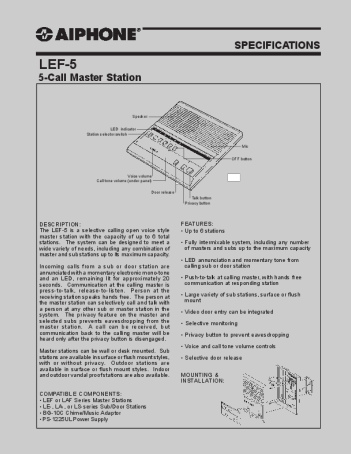


[pdf] Specifications Datasheet Borchure

LEF 5 SS p65 joys Spec Sheet data sheet aiphonepty au 2015 04 doorentydirect acrobat aiphone brochure

LEF-5 5-Call Master Station SPECIFICATIONS Speaker LED indicator Station selector switch Voice volume Call tone volume under panel Door release Talk button Privacy button Mic OFF button DESCRIPTION: The **LEF-5** is a selective calling open voice style master station with the capacity of up to 6...

 lang:en score:25 filesize: 101.14 K page_count: 2 document date: 2004-11-20

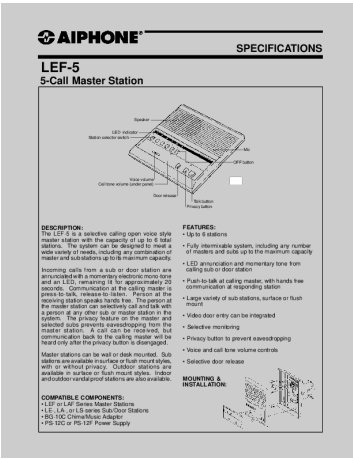


[pdf] Specifications

LEF 5 SS Joyd Call Selective Intercom Spec Sheet New Page 1 lef ss aiphone Files Prod Lit Stock Sheets |||

LEF-5 5-Call Master Station SPECIFICATIONS Speaker LED indicator Station selector switch Voice volume Call tone volume under panel Door release Talk button Privacy button Mic OFF button DESCRIPTION: The **LEF-5** is a selective calling open voice style master station with the capacity of up to 6...

 lang:en score:24 filesize: 37.19 K page_count: 2 document date: 1999-06-09

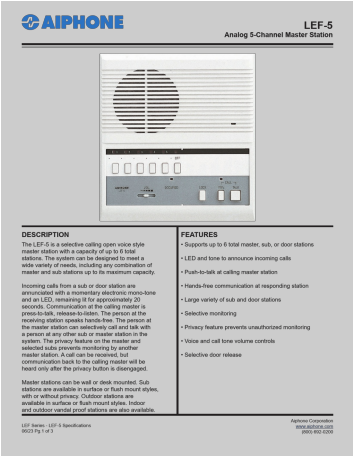


[pdf] Specifications

LEF 5 454 50 KB —Aiphone APP Series 5 Specifications gekka no umi 2023 06 |||

LEF-5 Analog 5-Channel Master Station DESCRIPTION The **LEF-5** is a selective calling open voice style master station with a capacity of up to 6 total stations. The system can be designed to meet a wide variety of needs, including any combination of master and sub stations up to its maximum capacity. ...

 lang:en score:24 filesize: 454.49 K page_count: 3 document date: 2023-06-15

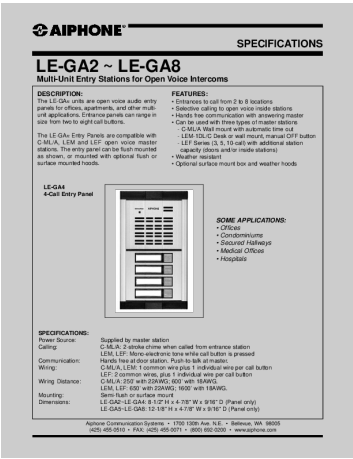

[pdf] User Manual Specifications Dimension Guide

LE B2 4 6 10 joyd GW LE8 Audio Module for Open Voice System Spec Sheet individual door stations and multiple master shall be manufactured by Aiphone NOTE Wiring strike power source not shown Run separate 2 conductor wire from to wedophones Manuals res fault codes Electronics ICs AIPHONE Index of |||

SPECIFICATIONS LE-GA2 - LE-GA8 Multi-Unit Entry Stations for Open Voice Intercoms DESCRIPTION: The ... ce mtg. hood 5-8 buttons STOCK MASTER STATIONS: C-ML/A Master station with automatic time out **LEF-5** 5-call master with selective dr. release LEF-10 10-call master with selective dr. rel. mas...

lang:en score:23 filesize: 46.48 K page_count: 2 document date: 2002-02-11

 


[pdf] User Manual Accessories Catalog

GENERAL LINE CATALOG 2012 Radio Parts The inside station automatically starts recording when a call is received MANUAL Press to talk Release listen To activate press TALK Blinking fast Aiphone General Line Catalogue radioparts au Files

Communication Systems GENERAL LINE CATALOG 2012 Cont COLOR VIDEO ENTRY SECURITY DOOR ROOM 1 2 W ... er station AUDIO INTERCOM SYSTEM LEF-3 3-call master LEF-3L 3-call master w/ door release button **LEF-5** 5-call master **LEF-5W** 5-call master w/terminal box LEF-10 10-call master LEF-10W 10-call maste...

lang:en score:23 filesize: 18.16 M page_count: 120 document date: 2012-01-05

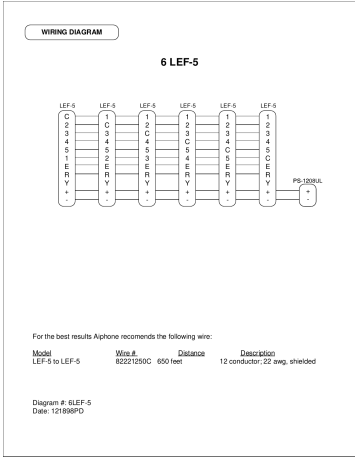


[pdf] Diagram

6 LEF 5 57 KB6 Aiphoneaiphone |||

WIRING DIAGRAM 6 **LEF-5** **LEF-5** C 2 3 4 5 1 E R Y - **LEF-5** 1 C 3 4 5 2 E R Y - **LEF-5** 1 2 C 4 5 3 E R Y - **LEF-5** 1 2 3 C 5 4 E R Y - **LEF-5** 1 2 3 4 C 5 E R Y - **LEF-5** 1 2 3 4 5 C E R Y - PS-1208UL - For the best results Aiphone recomends the following wire: Model **LEF-5** to **LEF-5** Wire...

 lang:en score:23 filesize: 57.02 K page_count: 1 document date: 2024-11-12

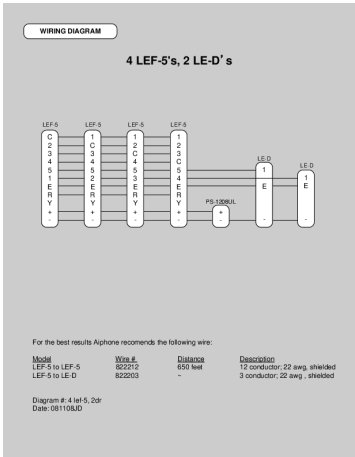


[pdf] Diagram

Paul Luedtke 4 LEF 5 2 LE D 61 KB2 Aiphoneaiphone |||

WIRING DIAGRAM 4 **LEF-5** s, 2 LE-D s **LEF-5** C 2 3 4 5 1 E R Y - **LEF-5** 1 C 3 4 5 2 E R Y - **LEF-5** 1 2 C 4 5 3 E R Y - **LEF-5** 1 2 3 C 5 4 E R Y - PS-1208UL - LE-D 1 E - LE-D 1 E - For the best results Aiphone recomends the following wire: Model **LEF-5** to **LEF-5** **LEF-5** to LE-D Wire # 82221...

 lang:en score:22 filesize: 61.28 K page_count: 1 document date: 2024-11-12

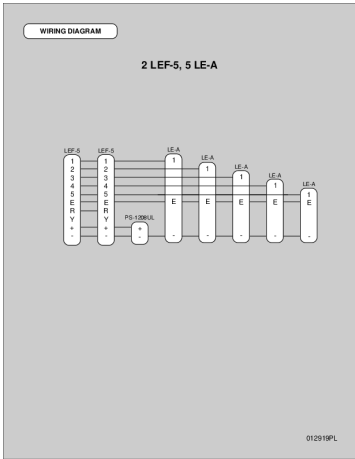


[pdf] Diagram

Paul Luedtke 2 LEF 5 LE A 53 KB Aiphone aiphone 2024 11 |||

WIRING DIAGRAM 2 **LEF-5**, 5 LE-A **LEF-5** 1 2 3 4 5 E R Y - **LEF-5** 1 2 3 4 5 E R Y - PS-1208UL - LE-A 1 E - LE-A 1 E - LE-A 1 E - LE-A 1 E - LE-A 1 E - 012919PL ...

 lang:en score:22 filesize: 53.28 K page_count: 1 document date: 2024-11-12

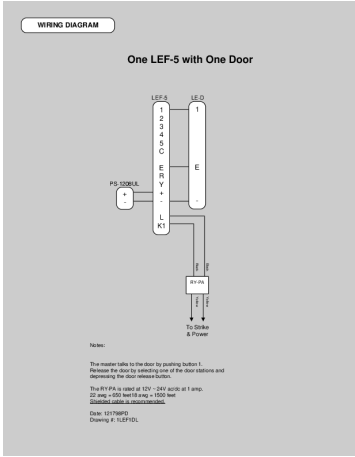


[pdf] Diagram

1 LEF 5 LE D 47 KB Aiphone aiphone 2024 11 |||

WIRING DIAGRAM One **LEF-5** with One Door **LEF-5** 1 2 3 4 5 C E R PS-1208UL Y - - L K1 LE-D 1 E - Black Black RY-PA Yellow Yellow Notes: To Strike Power The master talks to the door by pushing button 1. Release the door by selecting one of the door stations and depressing the door ...

 lang:en score:22 filesize: 46.59 K page_count: 1 document date: 2024-11-12

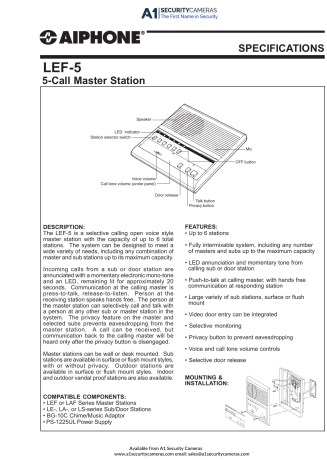


[pdf] Specifications

LEF 5 SS p65 joys Call Master Station A1 Security CamerasDESCRIPTION FEATURES The is a selective calling open voice style Up to 6 stations master station with the capacity of up total stationsaiphone A1a1securitycameras content product documents 7455 aiphone srslltd

AfmBOoQADgphDqXzHzrGrwRu7AqfLvc46GaR0chpSv1ToOaqtdIA6nlg |||

LEF-5 5-Call Master Station SPECIFICATIONS Speaker LED indicator Station selector switch Voice volume Call tone volume under panel Door release Talk button Privacy button Mic OFF button DESCRIPTION: The **LEF-5** is a selective calling open voice style master station with the capacity of up to ...

 lang:en score:22 filesize: 420.63 K page_count: 2 document date: 2016-09-08

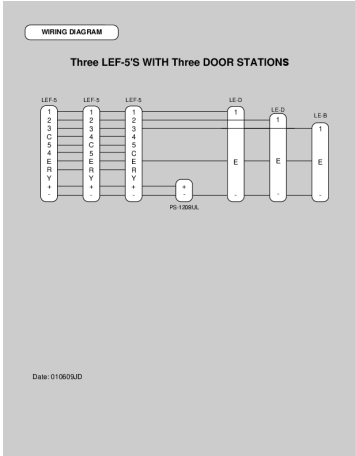


[pdf] Diagram

Brad Granath 3 LEF 5 Doors 86 KB LE D Aiphone aiphone 2024 11 |||

WIRING DIAGRAM Three **LEF-5** S WITH Three DOOR STATIONS **LEF-5** 1 2 3 C 5 4 E R Y - **LEF-5** 1 2 3 4 C 5 E R Y - **LEF-5** 1 2 3 4 5 C E R Y - - PS-1208UL LE-D 1 E - LE-D 1 E - LE-B 1 E - Date: 010609JD ...

 lang:en score:22 filesize: 85.61 K page_count: 1 document date: 2024-11-12

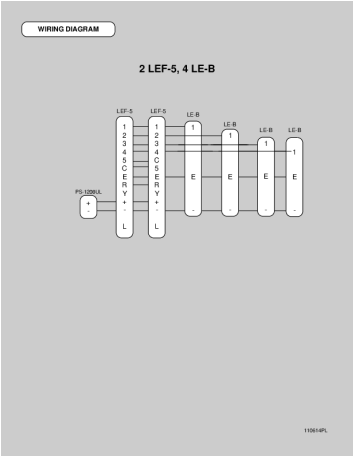


[pdf] Diagram

Paul Luedtke 2 LEF 5 4 LE B 46 KB Iphone iphone 2024 11 |||

WIRING DIAGRAM 2 **LEF-5**, 4 LE-B PS-1208UL - **LEF-5** 1 2 3 4 5 C E R Y - L **LEF-5** 1 2 3 4 C 5 E R Y - L LE-B 1 E - LE-B 1 E - LE-B 1 LE-B 1 E E - - 110614PL ...

 lang:en score:21 filesize: 46.44 K page_count: 1 document date: 2024-11-12

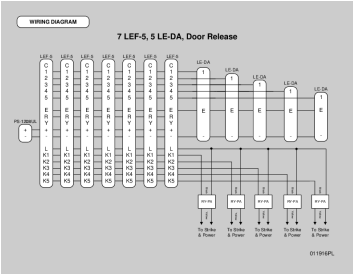

[pdf] Diagram

John Ford 7 LEF 5 LE DA DR 54 KB Door Release Iphone iphone 2024 11 |||

WIRING DIAGRAM 7 **LEF-5**, 5 LE-DA, Door Release **LEF-5** C 1 2 3 4 5 **LEF-5** C 1 2 3 4 5 **LEF-5** C 1 2 3 4 5 E E E R R R PS-1208UL Y Y Y - - - L L L K1 K1 K1 K2 K2 K2 K3 K3 K3 K4 K4 K4 K5 K5 K5 **LEF-5** C 1 2 3 4 5 **LEF-5** C 1 2 3 4 5 **LEF-5** C 1 2 3 4 5 E E E ...

lang:it score:21 filesize: 54.32 K page_count: 1 document date: 2024-11-12