

[Manuals.plus](#) /

› [Philips](#) /

› Philips FC9150/01 Performer Vacuum Cleaner User Manual

## Philips FC9150/01

# Philips FC9150/01 Performer Vacuum Cleaner User Manual

Model: FC9150/01

## PRODUCT OVERVIEW

The Philips FC9150/01 Performer vacuum cleaner is designed for excellent cleaning performance with its powerful 2000 W motor, delivering 425 W of suction power. It features an EPA 11 filter for clean exhaust air and a unique Tri-Active nozzle for efficient cleaning on various surfaces, including corners and around furniture. The large 4-liter S-bag ensures maximum performance and durable dust collection.



Image: The Philips FC9150/01 Performer vacuum cleaner, featuring its blue body, black hose, and silver telescopic tube with the Tri-Active nozzle. The large wheels are visible on the side of the main unit.

## SETUP AND ASSEMBLY

Follow these steps to set up your Philips FC9150/01 vacuum cleaner:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all parts are present: main unit, flexible hose, telescopic tube, Tri-Active nozzle, and additional accessories (furniture nozzle, crevice tool, furniture brush).
2. **Attaching the Hose:** Insert the flexible hose into the suction opening on the main unit until it clicks securely into place.
3. **Assembling the Tube and Nozzle:** Connect the telescopic tube to the handle of the flexible hose. Then, attach the Tri-Active nozzle or desired accessory to the end of the telescopic tube. Ensure all connections are firm.
4. **Power Connection:** Extend the power cord from the main unit and plug it into a suitable electrical outlet.

## OPERATING INSTRUCTIONS

Operating your vacuum cleaner for optimal performance:

- **Power On/Off:** Press the power button located on the main unit to switch the vacuum cleaner on or off.
- **Adjusting Suction Power:** The vacuum cleaner features variable power control. Use the power regulator to adjust the suction strength according to the surface being cleaned. Lower power for delicate fabrics, higher for hard floors or heavily soiled carpets.
- **Using the Tri-Active Nozzle:** The Tri-Active nozzle is designed for efficient cleaning on various surfaces. Its unique 3-in-1 function allows it to pick up larger particles, clean corners with side brushes, and effectively clean carpets and hard floors.
- **Using Accessories:**
  - *Furniture Nozzle:* Ideal for cleaning upholstery and delicate surfaces.
  - *Crevice Tool:* Perfect for reaching narrow spaces, corners, and edges.
  - *Furniture Brush:* Suitable for dusting furniture and other delicate items.
- **Cord Rewind:** After use, unplug the power cord and press the cord rewind button to automatically retract the cord into the unit.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner:

- **Replacing the Dust Bag:** The Philips FC9150/01 uses a 4-liter S-bag. Replace the dust bag when the dust bag full indicator illuminates or when suction power noticeably decreases. Open the dust bag compartment, remove the full bag, and insert a new S-bag, ensuring it is correctly seated.
- **Cleaning/Replacing the EPA 11 Filter:** The EPA 11 filter helps maintain clean exhaust air. Refer to the filter's specific instructions for cleaning or replacement intervals. Typically, these filters can be rinsed under running water and allowed to dry completely before reinsertion, or replaced annually depending on usage.
- **Cleaning the Nozzles and Accessories:** Periodically check the Tri-Active nozzle and other accessories for blockages (e.g., hair, lint). Remove any obstructions to maintain effective suction.
- **Exterior Cleaning:** Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## TROUBLESHOOTING

Common issues and their solutions:

| Problem           | Possible Cause                                                 | Solution                                                                                                    |
|-------------------|----------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| No power          | Not plugged in; power outlet fault; thermal cut-out activated. | Check power cord connection; try another outlet; unplug and allow to cool for 30 minutes before restarting. |
| Low suction power | Dust bag full; filter clogged; hose/nozzle blocked.            | Replace dust bag; clean/replace EPA 11 filter; check and clear any blockages in hose or nozzle.             |
| Unusual noise     | Blockage in hose/nozzle; motor issue.                          | Check for and remove blockages; if noise persists, contact customer support.                                |
| Dust escaping     | Dust bag not installed correctly; filter missing or damaged.   | Ensure dust bag is properly seated; check and replace filters if necessary.                                 |

## SPECIFICATIONS

- Brand: Philips
- Model Number: FC9150/01
- Input Power: 2000 W
- Suction Power: 425 W
- Dust Bag Capacity: 4 Liters (S-bag)
- Filter Type: EPA 11 Filter (HEPA)
- Noise Level: 76 dB
- Special Features: Variable power, Bagged, Tri-Active nozzle
- Recommended Surface: Hard floor (also suitable for carpets with Tri-Active nozzle)
- Product Dimensions: 48.49 x 19.99 x 3 cm (approx. 19.1 x 7.9 x 1.2 inches)
- Item Weight: 548.85 g (approx. 1.21 pounds)

## WARRANTY AND SUPPORT

Specific warranty details for the Philips FC9150/01 vacuum cleaner are not available in the provided product data. For warranty information, product registration, or technical support, please refer to the official Philips website or contact Philips customer service in your region. Keep your purchase receipt as proof of purchase. You can often find additional support and FAQs on the [Philips Store on Amazon](#).

© 2024 Philips. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question