

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [WMF](#) /
- › [WMF Profi Plus Wok Turner \(Model 1874966030\) Instruction Manual](#)

WMF 1874966030

WMF Profi Plus Wok Turner Instruction Manual

Model: 1874966030

INTRODUCTION

This manual provides essential information for the safe and effective use of your WMF Profi Plus Wok Turner, Model 1874966030. Designed for functionality and durability, this turner is suitable for various cooking tasks, particularly with woks and stir-fry pans.







Image: The WMF Profi Plus Wok Turner, featuring a black frosted plastic head and a stainless steel handle.

KEY FEATURES

- **Heat-Resistant:** The turner head is heat-resistant up to 270°C (518°F), making it safe for high-temperature cooking.
- **Durable Material:** Constructed from special plastic for the head and Cromargan stainless steel for the handle, ensuring longevity and performance.
- **Dishwasher-Safe:** Designed for easy cleaning and can be safely washed in a dishwasher.
- **Non-Stick Friendly:** The plastic head is gentle on non-stick surfaces, preventing scratches.
- **Efficient Design:** Features a wide contact face and slots to allow excess fat to drain quickly.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the WMF Profi Plus Wok Turner from its packaging.
2. **Initial Cleaning:** Before first use, wash the turner thoroughly with warm soapy water. Rinse completely and dry with a soft cloth.
3. **Inspection:** Inspect the turner for any signs of damage. Do not use if damaged.

OPERATING INSTRUCTIONS

The WMF Profi Plus Wok Turner is designed for a variety of cooking tasks, including stirring, flipping, and serving. Its broad head is particularly effective for handling larger food items in woks or frying pans.

- **Stir-Frying:** Use the turner to efficiently mix ingredients in a wok, ensuring even cooking.

- **Flipping:** The wide surface allows for easy flipping of pancakes, omelets, fish, or other delicate items without breaking them.
- **Serving:** Ideal for serving portions directly from the pan.
- **Temperature:** Ensure the cooking temperature does not exceed 270°C (518°F) to prevent damage to the plastic head.

CARE AND MAINTENANCE

Proper care will extend the life of your WMF Profi Plus Wok Turner.

- **Cleaning:** The turner is dishwasher-safe. For hand washing, use warm water and mild dish soap. Avoid abrasive cleaners or scouring pads that could scratch the surface.
- **Drying:** Dry thoroughly after washing to prevent water spots on the stainless steel handle.
- **Storage:** Store in a dry place, preferably hanging or in a utensil drawer, to prevent damage.
- **Avoid Harsh Chemicals:** Do not expose the turner to strong acids or bases, as this may damage the materials.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stains on stainless steel handle	Mineral deposits from water or food residue.	Clean with a stainless steel cleaner or a mixture of vinegar and water. Rinse and dry thoroughly.
Plastic head appears discolored	Exposure to high heat or staining foods (e.g., tomato sauce, turmeric).	Ensure not to exceed the maximum heat resistance (270°C). For existing stains, try a baking soda paste, but discoloration may be permanent.
Scratches on non-stick pans	Incorrect use or damaged turner head.	The plastic head is designed to be gentle. If scratches occur, inspect the turner for rough edges or damage. Replace if necessary.

SPECIFICATIONS

Model Number	1874966030
Brand	WMF
Material	Special Plastic (head), Cromargan Stainless Steel (handle)
Color	Black (head), Silver (handle)
Overall Length	36.2 cm (approximately 14.25 inches)
Product Dimensions	13.98"L x 4.33"W
Item Weight	5.3 ounces
Heat Resistance	Up to 270°C (518°F)

Dishwasher Safe	Yes
Recommended Uses	Cooking, Flipping, Stir-Frying



Image: Visual representation of the WMF Wok Turner's dimensions, indicating an approximate length of 15 inches (38 cm).

WARRANTY INFORMATION

WMF products are manufactured to high-quality standards. For specific warranty details regarding your WMF Profi Plus Wok Turner, please refer to the warranty card included with your purchase or visit the official WMF website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

Should you have any questions, require assistance, or need to report an issue with your WMF Profi Plus Wok Turner, please contact WMF customer support. Contact information can typically be found on the product packaging or on the official WMF website. Please have your model number (1874966030) ready when contacting support.