

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Invicta](#) /
- › [Invicta Pro Diver Chronograph Watch Model 0070 User Manual](#)

Invicta 0070

Invicta Pro Diver Chronograph Watch Model 0070 User Manual

Model: 0070 | Brand: Invicta

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

The Invicta Pro Diver Chronograph Watch Model 0070 is a robust and stylish timepiece designed for men. It features a blue dial with round indexes, a chronograph function, and a durable stainless steel bracelet and case. This watch is suitable for both casual and sporty occasions, offering reliability and style in a 48mm round case. It is water-resistant up to 200 meters, making it suitable for professional marine activity and serious surface water sports, but not scuba diving.



Figure 1: Front view of the Invicta Pro Diver Chronograph Watch Model 0070.

2. SETUP

2.1 Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to position 2.
2. **Set the time:** Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. **Set the date:** Pull the crown out to position 1. Turn the crown to adjust the date. Push the crown back to position 0 to secure.

4. **Push in the crown:** Once the time and date are set, push the crown back into position 0 to start the watch and ensure water resistance.

2.2 Adjusting the Bracelet

The stainless steel bracelet can be adjusted by removing or adding links. It is recommended to have a professional jeweler perform this adjustment to prevent damage to the watch or bracelet. The clasp also features a micro-adjustment pin for fine-tuning the fit.



Figure 2: Side view showing the crown and chronograph pushers.

3. OPERATING THE CHRONOGRAPH AND BEZEL

3.1 Using the Chronograph Function

The chronograph function allows for precise timing of events. The watch features three sub-dials for seconds, minutes, and hours.

1. **Start:** Press the top pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time will be indicated on the sub-dials.
3. **Reset:** Press the bottom pusher (B) to reset the chronograph to zero.

3.2 Using the Unidirectional Rotating Bezel

The unidirectional rotating bezel can be used to measure elapsed time, typically for diving or other timed activities. To use:

1. Align the zero mark on the bezel with the minute hand at the start of your activity.
2. Read the elapsed time on the bezel against the minute hand. The bezel only rotates counter-clockwise, preventing accidental overestimation of elapsed time.



Figure 3: The watch worn on a wrist, showcasing its design.

4. MAINTENANCE

4.1 Water Resistance

This watch is water-resistant to 200 meters (20 ATM). This rating means it is suitable for professional marine activity and serious surface water sports. It is generally not suitable for scuba diving unless specified otherwise. Always ensure the crown is fully pushed in before exposing the watch to water.

4.2 Cleaning

To clean your watch, wipe it with a soft, damp cloth. For the metal bracelet, a soft brush with mild soap and water can be used, followed by thorough rinsing and drying. Avoid using harsh chemicals or abrasive materials.

4.3 Battery Replacement

The watch uses a Japanese Quartz movement and requires 1 Lithium Ion battery (included). Battery replacement should be performed by a qualified watch technician to maintain water resistance and ensure proper function.

Your browser does not support the video tag.

Video 1: An official product video showcasing the Invicta Men's Pro Diver Collection Chronograph Watch.

5. TROUBLESHOOTING

5.1 Watch Not Keeping Time

- **Check the crown:** Ensure the crown is fully pushed in to position 0. If it's pulled out, the watch will not run.
- **Battery:** If the watch is a quartz model and stops, the battery may need replacement. Consult a professional watch technician.

5.2 Water Inside the Watch

- If you notice condensation or water inside the watch, immediately take it to a qualified watch technician. Do not attempt to open the watch yourself, as this can void the warranty and cause further damage.

6. SPECIFICATIONS

Display Type	Analog
Indices	12 h Dial, Round Indexes
Case Diameter	48 Millimeters
Case Thickness	15 Millimeters
Case Material	Stainless Steel
Case Finish	Brushed
Dial Color	Blue
Crystal Type	Flame-Fusion
Band Material	Stainless Steel
Band Color	Silver
Band Width	19 Millimeters
Band Length	11 Inches
Clasp Type	Fold-Over-Clasp-With-Safety
Watch Movement Type	Japanese Quartz
Power Source	Battery Powered (1 Lithium Ion battery included)
Water Resistance Depth	200 Meters (660 Feet)
Item Weight	0.69 Pounds

7. WARRANTY & SUPPORT

7.1 Manufacturer's Warranty

This Invicta watch is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or visit the official Invicta website. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For any questions, service, or repair needs not covered in this manual, please contact Invicta customer support. Contact information can typically be found on the official Invicta website or on the product packaging.

