

Possini Euro Design 43060

Possini Euro Design Art Deco Modern Ceiling Light Instruction Manual

Model: 43060

1. PRODUCT OVERVIEW

This manual provides essential information for the safe installation, operation, and maintenance of your Possini Euro Design Art Deco Modern Ceiling Light. This slim, low-profile flushmount fixture is designed to enhance various indoor spaces such as bedrooms, hallways, kitchens, bathrooms, living rooms, and dining areas. It features an oil-rubbed bronze finish and a marbled glass bowl shade, providing both functional illumination and a contemporary aesthetic.



Figure 1.1: The Possini Euro Design Art Deco Modern Ceiling Light, showcasing its oil-rubbed bronze finish and marbled glass shade, installed flush against a ceiling.



Figure 1.2: A direct view of the ceiling light from below, highlighting the intricate marbled pattern of the glass bowl shade.

2. SAFETY INFORMATION

WARNING: Risk of Electric Shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.

- Always ensure the power supply is turned off before installing, cleaning, or performing any maintenance on the fixture.
- Installation should be performed by a qualified electrician or a knowledgeable individual familiar with electrical wiring.
- Handle the glass shade with care to prevent breakage. The glass may feature minor pinprick bubbles, which are normal and not defects.
- Use only bulbs of the specified type and wattage (maximum 100 watts per bulb, standard-medium base).
- This fixture is designed for indoor use only and is not water resistant.
- Ensure the installation location is well-ventilated, especially if used in a bathroom.

3. WHAT'S IN THE BOX

Carefully unpack all components and inspect for any damage. Keep all packaging materials until you are certain all parts are present and in good condition.

- Ceiling Light Fixture (Oil-Rubbed Bronze finish with Marbleized Glass Bowl Shade)
- Mounting Hardware
- Instruction Manual

Note: Bulbs are not included. This fixture requires two standard-medium base bulbs (E26 base).

4. SETUP AND INSTALLATION

Follow these steps for proper installation. If you are unsure about any part of the installation process, consult a qualified electrician.

1. **Prepare for Installation:** Turn off the electricity at the main fuse box or circuit breaker. Ensure the power is completely disconnected before proceeding.
2. **Mounting the Canopy:** Secure the mounting hardware (included) to the electrical junction box in your ceiling. The canopy is 9 1/2 inches wide and 3/4 inches high.
3. **Wiring:** Connect the fixture's wires to the corresponding household wires according to local electrical codes. Typically, black to black (live), white to white (neutral), and green or bare copper to green or bare copper (ground). Ensure all connections are secure with wire nuts.
4. **Attaching the Fixture:** Carefully attach the fixture body to the mounted canopy, ensuring all wires are tucked safely inside the junction box.
5. **Installing Bulbs:** Insert two standard-medium base (E26) bulbs, up to 100 watts each (not included), into the sockets.
6. **Securing the Glass Shade:** Carefully place the marbled glass bowl shade onto the fixture and secure it using the provided fasteners. Ensure it is seated properly to prevent accidental falls.
7. **Restore Power:** Once installation is complete and all components are securely in place, restore

power at the fuse box or circuit breaker.



Figure 4.1: Dimensional diagram of the fixture, showing its 12 3/4" width and 4 1/2" height, with a 9 1/2" wide canopy.

Your browser does not support the video tag.

Video 4.1: A "Ceiling Light Buying Guide" from LampsPlus, offering general advice on selecting and understanding ceiling light types, including flushmounts and semi-flushmounts. This video provides helpful context for installation and placement considerations.

5. OPERATING INSTRUCTIONS

This fixture operates like a standard ceiling light. Once installed and wired correctly, it can be controlled by a wall switch (not included). The fixture is compatible with dimmer switches, allowing you to adjust the light output to set the desired mood. Ensure any dimmer switch used is compatible with the type of bulbs installed (e.g., LED compatible dimmers for LED bulbs).

The fixture uses two standard-medium base bulbs, each up to 100 watts, for a total maximum wattage of 200 watts. For energy efficiency, consider using LED bulbs.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your ceiling light.

- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth to wipe the metal finish. For the glass shade, a mild glass cleaner can be used, applied to the cloth first, not directly to the shade. Avoid abrasive cleaners or solvents that may damage the finish or glass.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow old bulbs to cool before removal. Replace with new standard-medium base (E26) bulbs, up to 100 watts each.
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

7. TROUBLESHOOTING

If you encounter issues with your ceiling light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none">• No power to the fixture.• Loose wiring connection.• Faulty bulb.	<ul style="list-style-type: none">• Check circuit breaker/fuse.• Ensure all wire connections are secure (power off first).• Replace bulb.
Light flickers.	<ul style="list-style-type: none">• Loose bulb.• Incompatible dimmer switch.• Loose wiring.	<ul style="list-style-type: none">• Tighten bulb.• Ensure dimmer is compatible with bulb type.• Check wiring connections (power off first).
Glass shade cracks.	<ul style="list-style-type: none">• Over-tightening of fasteners.• Thermal stress.• Impact.	<ul style="list-style-type: none">• Do not over-tighten fasteners when securing the shade.• Ensure proper bulb wattage is used to avoid excessive heat.• Handle with care. Contact manufacturer for replacement if needed.

8. SPECIFICATIONS

Brand	Possini Euro Design
Model Number	43060
Product Dimensions	12.75"L x 12.75"W x 4.5"H
Canopy Dimensions	9.5"W x 0.75"H
Item Weight	4.53 Pounds
Material	Metal (Oil-Rubbed Bronze Finish), Glass (Marbleized Shade)
Light Source Type	Standard-medium base bulb (E26)
Number of Light Sources	2
Maximum Wattage	100 watts per bulb (200 watts total)
Voltage	120 Volts
Installation Type	Flush Mount
Indoor/Outdoor Usage	Indoor Only
Assembly Required	No (minor assembly for shade attachment)
Country of Origin	China
UPC	736101057338

9. WARRANTY AND SUPPORT

This Possini Euro Design product is backed by the manufacturer's standard warranty. For specific warranty details, claims, or technical support, please contact Possini Euro Design customer service or the retailer from whom the product was purchased. Please have your model number (43060) and proof of purchase ready when contacting support.

Your browser does not support the video tag.

Video 9.1: A brand video from Possini Euro Design, showcasing various modern and contemporary lighting styles. This video highlights the aesthetic and design philosophy of the brand.

© 2024 Possini Euro Design. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.