

[manuals.plus](#) /› [KODAK](#) /› [KODAK Fun Saver Disposable Camera with Flash \(Model 8617763\) Instruction Manual](#)**KODAK 8617763**

KODAK Fun Saver Disposable Camera with Flash

MODEL: 8617763

Introduction

This manual provides essential instructions for using your KODAK Fun Saver Disposable Camera with Flash, Model 8617763. This single-use camera is pre-loaded with ISO 400 film, offering 27 exposures. It features a built-in electronic flash, making it suitable for capturing moments in various lighting conditions, both indoors and outdoors.

Key Features

- **Built-in Flash:** For enhanced illumination in low-light environments.
- **Lightweight and Compact:** Easy to carry and handle.
- **Indoor/Outdoor Use:** Versatile for different photographic settings.
- **27 Exposures:** Pre-loaded with ISO 400 film for 27 photographs.

Setup

The KODAK Fun Saver camera comes pre-loaded with film and includes batteries for the flash, making it ready for immediate use. No assembly or film loading is required by the user.



Figure 1: Front view of the KODAK Fun Saver Disposable Camera, showing the lens and flash unit.

Operating Instructions

- 1. Advance the Film:** Locate the film advance wheel on the top right side of the camera (when viewed from the back). Turn the wheel clockwise until it stops. This prepares the camera for the next shot.
- 2. Activate the Flash (Optional):** For indoor or low-light conditions, press and hold the flash button on the front of the camera (often marked with a lightning bolt symbol) until the red light on top of the camera illuminates. This indicates the flash is charged and ready.
- 3. Compose Your Shot:** Look through the viewfinder on the back of the camera to frame your subject. Ensure your subject is within the recommended flash range (approximately 4 to 11.5 feet or 1.2 to 3.5 meters) if using the flash.
- 4. Take the Picture:** Press the shutter button located on the top of the camera firmly to capture the image.
- 5. Repeat:** Advance the film again for the next exposure. Continue until all 27 exposures are used.
- 6. Film Development:** Once all exposures are used, take the entire camera to a photo lab for film development. The lab will remove the film and provide your prints or digital files.



Figure 2: Side view of the KODAK Fun Saver, illustrating the film winding mechanism and flash activation steps.



Figure 3: Back view of the KODAK Fun Saver, highlighting the viewfinder and film advance wheel.

Media Resources

No official seller videos are available for this product at this time.

Specifications

Feature	Detail
Product Dimensions	2.48 x 0.98 x 0.59 inches
Item Weight	4 ounces (0.25 Pounds)
Item Model Number	8617763
Batteries	2 AA batteries required (included)
Special Feature	Built-in Flash
Film Format Type	35mm

Feature	Detail
Film Color	Color
Compatible Devices	Camera
Max Shutter Speed	1/125s
Included Components	Camera Body & Accessories
Date First Available	April 3, 2006

Troubleshooting

- **Dark Photos:** Ensure adequate lighting. Use the built-in flash for indoor or low-light scenes. Keep subjects within the flash range.
- **Flash Not Firing:** Make sure the flash is fully charged (red light is solid). If the light does not come on, the batteries may be depleted. As this is a single-use camera, battery replacement is not intended.
- **Film Not Advancing:** Ensure the film advance wheel is turned completely until it stops. If it still doesn't advance, the film may be at the end of its roll (all 27 exposures used) or there might be an internal issue.
- **Blurry Photos:** Hold the camera steady when taking a picture. Ensure subjects are not too close or too far for the fixed-focus lens.

Warranty and Support

For warranty information or product support, please refer to the packaging or contact KODAK customer service directly. As a single-use product, specific repair services are typically not offered.