Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Moen /
- Moen 1933 Legend Escutcheon Instruction Manual

Moen 1933

Moen 1933 Legend Escutcheon Instruction Manual

Model: 1933

1. Introduction

This instruction manual provides essential information for the proper installation, operation, and maintenance of your Moen 1933 Legend Escutcheon. The Moen Legend series is designed to offer dependable products with an ageless yet fashion-forward presence, seamlessly integrating with various home styles. This escutcheon features a chrome finish, providing a highly reflective, mirror-like look that complements any decorating style.

2. SAFETY INFORMATION

Always observe the following safety precautions during installation and maintenance:

- Ensure the main water supply is turned off before beginning any plumbing work.
- Wear appropriate personal protective equipment, such as safety glasses and gloves.
- If you are unsure about any step, consult a qualified plumber.
- Keep small parts away from children.

3. Parts List

Verify that all components are present before beginning installation:

- Moen 1933 Legend Escutcheon: A circular metal plate, chrome-finished, designed to cover the faucet opening on the sink or countertop.
- Gasket: A black rubber ring used to create a watertight seal between the escutcheon and the mounting surface.



Figure 1: Moen 1933 Legend Escutcheon and Gasket. This image displays the Moen 1933 Legend Escutcheon, a chromefinished circular metal plate, alongside its accompanying black rubber gasket. The escutcheon features two cutouts for faucet components, while the gasket provides a seal.

4. SETUP AND INSTALLATION

4.1. Preparation

- 1. Turn off the water supply to the faucet at the main shut-off valve.
- 2. Clear the work area around the faucet.
- 3. Gather necessary tools, which may include a wrench, screwdriver, and plumber's putty (if required by your specific faucet model).

4.2. Installation Steps

- 1. Ensure the mounting surface (sink or countertop) is clean and dry.
- 2. Place the rubber gasket (provided) over the faucet holes on the mounting surface. This gasket helps create a watertight seal and protects the surface.
- 3. Position the Moen 1933 Legend Escutcheon over the gasket, aligning any necessary openings with the faucet components.
- 4. Secure the escutcheon in place according to your specific Moen Legend faucet's installation instructions. This typically involves tightening nuts or screws from underneath the sink to hold the faucet body and escutcheon firmly.
- 5. Once the faucet assembly is secure, slowly turn the water supply back on and check for any leaks.

5. OPERATING INSTRUCTIONS

The Moen 1933 Legend Escutcheon is a static component designed to provide a finished look and seal for your faucet installation. It does not have moving parts or operational controls. Its primary function is aesthetic and protective, covering the faucet mounting holes and providing a base for the faucet.

6. MAINTENANCE

Proper care will help maintain the appearance and longevity of your escutcheon:

• Cleaning: Clean the chrome finish regularly with a soft, damp cloth and mild soap. Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.

- Avoid Abrasives: Do not use abrasive cleaners, harsh chemicals, or scouring pads, as these can
 damage the chrome finish.
- **Inspection:** Periodically check the escutcheon and its surrounding area for any signs of wear, corrosion, or loose connections.

7. TROUBLESHOOTING

If you encounter issues related to the escutcheon, consider the following:

- Water Leaks Around Base: If water is leaking from under the escutcheon, the gasket may not be
 properly seated or could be damaged. Turn off the water supply, disassemble the faucet, inspect the
 gasket, and re-install ensuring a tight, even seal.
- Loose Escutcheon: If the escutcheon feels loose, the mounting nuts or screws securing the faucet assembly may need to be tightened. Access these from underneath the sink and carefully tighten them.
- Finish Discoloration/Damage: If the chrome finish shows signs of discoloration or damage, it may be due to harsh cleaning agents. Refer to the maintenance section for proper cleaning procedures. If damage persists, consider contacting Moen customer support.

8. Specifications

Specification	Detail
Brand	Moen
Model Number	1933
Part Number	1933
Item Weight	2.4 ounces
Product Dimensions	8.75 x 5.25 x 0.12 inches
Color	Chrome
Item Package Quantity	1
Included Components	Bath Faucets And Accessories, Bathroom Sink Faucet Replacement Parts

9. WARRANTY INFORMATION

Moen products are manufactured to the highest standards of quality and workmanship. For detailed information regarding the warranty coverage for your Moen 1933 Legend Escutcheon, please refer to the official Moen website or contact Moen customer service directly. Retain your proof of purchase for warranty claims.

10. SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Moen customer service. You can find contact information on the official Moen website.

Your browser does not support the video tag.

Video: Moen Brand Overview. This video provides an overview of Moen's commitment to water experiences, showcasing various Moen faucet and shower products in different home settings, highlighting their design and functionality.

 
Visit the official Moen website for more product information and support:Moen Store

Related Documents - 1933



Moen Two-Handle Bathroom Sink Faucet Installation and Warranty Guide

Comprehensive guide for installing and maintaining Moen two-handle bathroom sink faucets designed for 4-inch center installations. Includes parts identification, step-by-step instructions, consumer information on lead, and lifetime limited warranty details.




Moen Adler Two Handle Lavatory Faucet Illustrated Parts List

Detailed illustrated parts list for the Moen Adler Two Handle Lavatory Faucet, providing part numbers, descriptions, and finish options for components like handles, cartridges, and mounting hardware. Includes model numbers 84603 and 84603SRN.



Moen Two-Handle Kitchen Faucet Installation Guide & Warranty (Model INS2219A)

 Detailed installation guide, parts list, cleaning instructions, and limited lifetime warranty for the Moen Two-Handle Kitchen Faucet, Model INS2219A. Includes contact information for USA, Canada, and Mexico, and step-by-step instructions with textual descriptions of diagrams.



Moen ARBOR™ MOTIONSENSE™ Hands-Free Pulldown Kitchen Faucet Illustrated Parts

Detailed illustrated parts list for the Moen ARBOR™ with MOTIONSENSE™ Hands-Free Single-Handle High Arc Pulldown Kitchen Faucet (Models 7594EC, 7594ESRS, 7594EORB). Includes part numbers, finishes, and ordering information for replacement components.

User Manual of Product 1: Moen Arbor Spot Resist Staintoss Melionsonse Two Sonson Teachiess Kitchen Faucet Featuring Power Clean, One Handle Kitchen Sink Faucets with Pull Down Spray Head, 7594ESPS

Moen Arbor Motionsense Touchless Kitchen Faucet - User Manual & Illustrated Parts

Detailed user manual and illustrated parts list for the Moen Arbor Spot Resist Stainless Motionsense Two-Sensor Touchless Kitchen Faucet (Model 7594ESRS) with Power Clean and pull-down spray head. Includes part numbers and available finishes.



Moen SLEEK™ Single-Handle High Arc Pulldown Kitchen Faucet Illustrated Parts

Official Moen SLEEKTM kitchen faucet replacement parts list, featuring part numbers and finishes for models 7864, 7864SRS, 7864BL, and 7864BLS. Includes spout kits, handle kits, cartridges, hoses, and optional accessories.