

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Piko](#) /

› [Piko 62012 Gazebo Toy Instruction Manual](#)

## Piko 62012

# Piko 62012 Multicoloured Gazebo Toy

## INSTRUCTION MANUAL

### INTRODUCTION

This manual provides comprehensive instructions for the Piko 62012 Multicoloured Gazebo Toy. It covers essential information regarding its features, setup, proper use, maintenance, and safety guidelines. Please read this manual thoroughly before using the product to ensure safe and optimal performance.

### SAFETY INFORMATION

#### WARNING:

- Assembly requires adult supervision.
- Not suitable for children under 3 years due to small parts.
- Always keep assembly instructions for reference.

This product is designed as a model accessory and should be handled with care. Keep away from extreme temperatures and direct sunlight to prevent material degradation.

### PRODUCT OVERVIEW



Figure 1: The Piko 62012 Multicoloured Gazebo Toy. This image displays the fully assembled model gazebo, featuring a dark grey shingled roof, white ornate pillars, and a brown base. Inside, miniature figures are depicted, suggesting its use as a detailed accessory for model train layouts or dioramas. The gazebo is placed on a vibrant green, grassy surface, highlighting its realistic design.

The Piko 62012 Gazebo Toy is a highly detailed, multicoloured model structure designed to enhance model train sets and dioramas. It features elaborate colouring and precise technology, ensuring a high level of detail and scalability for realistic scene creation.

- **High level of detail and scalability:** Designed for realistic integration into model landscapes.
- **Precise technology:** Ensures accurate construction and appearance.
- **Elaborate colouring:** Provides a vibrant and authentic look.

## SETUP

The Piko 62012 Gazebo Toy is largely pre-assembled, as indicated by "Assembly Required: No" in its specifications. However, minor setup may be required for placement and integration into your model environment.

1. **Unpacking:** Carefully remove the gazebo from its packaging. Inspect for any damage during transit.
2. **Placement:** Choose a stable, flat surface for the gazebo within your model layout. Ensure it is positioned securely to prevent accidental tipping.
3. **Integration:** If desired, use model adhesive (not included) to permanently secure the gazebo to your baseboard. Ensure any miniature figures or accessories are placed carefully inside.

## OPERATING (USAGE)

The Piko 62012 Gazebo Toy is a static model accessory. Its "operation" involves its role in creating a realistic and engaging miniature scene.

- **Scenic Enhancement:** Place the gazebo in a prominent location within your model railway or diorama to add architectural interest and a focal point.
- **Figurine Placement:** Utilize miniature figures (sold separately) to populate the gazebo, creating dynamic and lifelike scenes, such as a garden party or a quiet gathering.
- **Lighting (Optional):** For advanced modelers, consider adding miniature LED lighting (not included) inside the gazebo to illuminate it, especially for evening scenes.

## MAINTENANCE

Proper maintenance will ensure the longevity and appearance of your Piko Gazebo Toy.

- **Cleaning:** Gently dust the gazebo regularly with a soft, dry brush or a microfibre cloth. For stubborn dirt, lightly dampen the cloth with water (do not use harsh chemicals or abrasive cleaners).
- **Storage:** When not in use or during transport, store the gazebo in its original packaging or a protective container to prevent dust accumulation and damage.
- **Environmental Conditions:** Keep the model away from direct sunlight, high humidity, and extreme temperature fluctuations to prevent warping, fading, or material degradation. The product is not water resistant.

## TROUBLESHOOTING

While the Piko Gazebo Toy is a durable model, minor issues may arise. Here are some common concerns and their solutions:

- **Dust Accumulation:** If dust builds up in intricate areas, use a soft brush or compressed air (from a safe distance) to remove it.
- **Minor Damage (e.g., detached piece):** For small detached plastic pieces, use a suitable model adhesive to reattach them. Ensure the adhesive is compatible with plastic and applied sparingly.
- **Fading Colors:** This can occur if the model is exposed to prolonged direct sunlight. Store the model away from direct light to preserve its colours.
- **Missing Parts:** If you believe parts are missing upon unboxing, contact the retailer or Piko customer support with your purchase details.

## SPECIFICATIONS

Feature	Detail
Brand	Piko
Model Number	62012
Style	Gazebo
Material	Plastic
Color	Multicoloured
Item Weight	9.6 ounces
Product Dimensions (L x W x H)	15.94 x 12.01 x 3.94 inches

Feature	Detail
<b>Assembly Required</b>	No
<b>Water Resistance Level</b>	Not Water Resistant
<b>Manufacturer Recommended Age</b>	14 months and up
<b>UPC</b>	782675803796, 798627383612

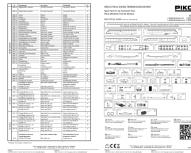
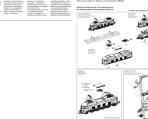
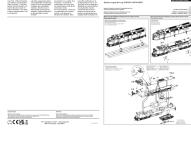
## WARRANTY AND SUPPORT

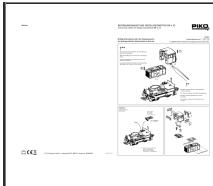
Specific warranty details for the Piko 62012 Gazebo Toy are typically provided by the retailer at the time of purchase or by the manufacturer directly. Please retain your proof of purchase for any warranty claims.

For product support, missing parts, or further inquiries, please contact your point of purchase or visit the official Piko website for customer service information.

Piko 62012 Multicoloured Gazebo Toy Instruction Manual © 2024 Piko. All rights reserved.

## Related Documents - 62012

	<p><a href="#"><b>PIKO SmartControlwlan Digital Command Control System - Owner's Manual</b></a></p> <p>Comprehensive owner's manual for the PIKO SmartControlwlan DCC system, detailing setup, operation, locomotive and accessory control, route programming, and settings for model railroad enthusiasts. Learn to control trains, switches, signals, and program CVs with this user-friendly system.</p>
	<p><a href="#"><b>PIKO Dieseltriebwagen Desiro Ersatzteile</b></a></p> <p>Umfassende Liste von Ersatzteilen für den PIKO Dieseltriebwagen Desiro, einschließlich Teilenummern und Beschreibungen für verschiedene Komponenten wie Wagenkästen, Fahrwerk, Inneneinrichtung und mehr. Informationen für DC- und AC-Versionen.</p>
	<p><a href="#"><b>PIKO Electric Locomotive Rh 1000 NS: Instruction Manual &amp; Spare Parts (#97504)</b></a></p> <p>Detailed instructions for the PIKO HO scale Electric Locomotive Rh 1000 NS (Model #97504), including assembly, disassembly, decoder and sound installation, and a comprehensive spare parts list.</p>
	<p><a href="#"><b>PIKO SmartDecoder XP Sound Next18 for Electric Locomotive BR 243 TT - Multiprotocol Sound Decoder</b></a></p> <p>Detailed specifications and features of the PIKO SmartDecoder XP Sound Next18, a multiprotocol sound decoder for TT scale electric locomotives, offering advanced sound, motor control, and digital system compatibility.</p>
	<p><a href="#"><b>PIKO D&amp;RGW KM ML4000 Diesel Locomotive Instruction Manual and Parts List</b></a></p> <p>Instruction sheet and spare parts list for the PIKO D&amp;RGW KM ML4000 Diesel Locomotive, including disassembly, maintenance, and part ordering information.</p>



### [PIKO Diesel Locomotive BR V 23 Instruction Manual and Parts List](#)

Instruction sheet and spare parts list for the PIKO HO scale Diesel Locomotive BR V 23 (Model 52552). Includes details on decoder installation, sound retrofit, and a comprehensive parts breakdown.