

Manuals.plus /

- › jWIN /
- › jWIN JX-CD313 Portable CD Player User Manual

jWIN JX-CD313

jWIN JX-CD313 Portable CD Player User Manual

Model: JX-CD313

INTRODUCTION

Thank you for purchasing the jWIN JX-CD313 Portable CD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.



Image: Top view of the jWIN JX-CD313 Portable CD Player. The device is blue with silver accents, featuring a central display, playback controls, and volume buttons.

SAFETY INFORMATION

- Do not expose the unit to rain or moisture.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not open the casing; refer all servicing to qualified personnel.
- Use only the specified power adapter.
- Keep out of reach of children.

PACKAGE CONTENTS

Ensure all items are present in the package:

- jWIN JX-CD313 Portable CD Player

- Power Cord
- Remote Control
- User Manual (this document)

SETUP

1. Powering the Device

The JX-CD313 can be powered by either batteries or the included AC power cord.

Using AC Power:

1. Insert the small end of the power cord into the DC IN jack on the side of the CD player.
2. Plug the other end of the power cord into a standard wall outlet.

Installing Batteries:

1. Locate the battery compartment on the bottom of the unit.
2. Open the battery compartment cover.
3. Insert the required number of AA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Connecting Headphones or External Speakers

To listen to audio, connect headphones or external speakers to the **AUX OUT** or **HEADPHONE** jack (3.5mm) on the side of the unit.

OPERATING INSTRUCTIONS

1. Basic Controls

Familiarize yourself with the main controls located on the top of the CD player:

- **PLAY/PAUSE** (▶/⏸): Press to start or pause playback.
- **STOP** (■): Press to stop playback.
- **SKIP/SEARCH** (◀◀ / ▶▶): Press briefly to skip tracks. Press and hold to fast-forward or rewind within a track.
- **VOLUME** (+/-): Adjusts the audio output level.
- **MODE**: Selects different playback modes (e.g., Repeat One, Repeat All, Random).
- **PROGRAM**: Used to program a custom playback order for tracks.
- **OPEN**: Slide or press to open the CD compartment lid.

2. Playing a CD

1. Slide or press the **OPEN** button to open the CD compartment lid.
2. Carefully place a CD onto the spindle with the label side facing up.
3. Close the CD compartment lid securely.
4. Press the **PLAY/PAUSE** button (▶) to begin playback.
5. Adjust the volume using the **VOLUME** (+/-) buttons.

3. Playback Modes

Press the **MODE** button repeatedly to cycle through available playback options:

- **Normal Play**: Plays tracks in order.
- **Repeat One (REP 1)**: Repeats the current track.

- **Repeat All (REP ALL):** Repeats all tracks on the CD.
- **Random (RND):** Plays tracks in a random order.

4. Programming Tracks

1. With the CD stopped, press the **PROGRAM** button. The display will show "P01".
2. Use the **SKIP/SEARCH** buttons (◀◀ / ▶▶) to select the desired track for the first program slot.
3. Press **PROGRAM** again to confirm the track and move to the next program slot ("P02").
4. Repeat steps 2 and 3 until all desired tracks are programmed.
5. Press **PLAY/PAUSE** (▶) to start playing the programmed sequence.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- For the optical lens, use a specialized CD lens cleaner disc (not included) if playback issues occur due to dust.

CD Handling

- Always hold CDs by their edges.
- Store CDs in their cases to prevent scratches and dust accumulation.
- Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards.

Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	No power, dead batteries, or incorrect AC connection.	Check AC power cord connection. Replace batteries or ensure correct polarity.
CD does not play / "NO DISC" error.	CD inserted incorrectly, dirty/scratched CD, or dirty lens.	Ensure CD is inserted label-side up. Clean CD. Try a different CD. Clean optical lens.
No sound.	Volume too low, headphones/speakers not connected, or faulty headphones/speakers.	Increase volume. Ensure headphones/speakers are fully plugged in. Test with different headphones/speakers.
CD skips during playback.	Unit is being moved, dirty/scratched CD, or dirty lens.	Ensure unit is on a stable surface. Clean CD. Clean optical lens.

SPECIFICATIONS

Model Name	JX-CD313
Brand	jWIN
Product Dimensions	2.5 x 9.5 x 6.63 inches
Item Weight	7.2 ounces
Color	Blue
Connectivity Technology	Auxiliary
Included Components	Power Cord, Remote Control, User Manual

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or contact jWIN customer service. Contact details are typically available on the manufacturer's official website or product packaging. Please have your model number (JX-CD313) and purchase date available when contacting support.

