

Bag Boy M-350

Bag Boy M-350 2 Wheel Golf Push Cart Instruction Manual

Model: M-350 (BB75401)

1. INTRODUCTION

Welcome to the Bag Boy M-350 2 Wheel Golf Push Cart instruction manual. This guide will assist you in setting up, operating, and maintaining your golf push cart. The M-350 is designed for ease of use, featuring a lightweight aluminum frame and a simple two-step open and close mechanism, making it ideal for golfers who prefer to walk the course.

2. SAFETY INFORMATION

- Always read and understand all instructions before assembling or operating the golf push cart.
- Ensure all locking mechanisms are fully engaged before placing a golf bag on the cart or moving it.
- Do not overload the cart beyond its intended capacity.
- Keep hands and fingers clear of moving parts and folding mechanisms to prevent injury.
- Store the cart in a safe, dry place when not in use.

3. PACKAGE CONTENTS

Please verify that all components are present in your package:

- Bag Boy M-350 Golf Push Cart

4. SETUP

The Bag Boy M-350 features an easy two-step open and close mechanism for quick setup and compact storage. Follow these steps to unfold your cart:

1. Place the folded cart on a flat, stable surface.
2. Locate the main folding latch (usually near the handle or base) and release it.
3. Gently extend the frame upwards and outwards until the cart fully unfolds and locks into its open position.
You should hear a click indicating it is secure.

4. Ensure all support rods and wheel mechanisms are firmly locked before use.



Image 1: The Bag Boy M-350 2 Wheel Golf Push Cart fully unfolded and ready for use. This image shows the cart's lightweight aluminum frame, two large wheels, adjustable handle, and the integrated scorecard holder.

5. OPERATING INSTRUCTIONS

5.1 Attaching Your Golf Bag

The cart is equipped with a quick-release Velcro strap system to securely hold your golf bag. Place your golf bag onto the cart's upper and lower support brackets. Fasten the Velcro straps firmly around the bag to prevent

movement during transport. Ensure the bag is balanced on the cart.

5.2 Adjusting Handle Height

The handle height is adjustable to accommodate golfers of various heights. Locate the adjustment mechanism on the handle shaft, typically a quick-release lever or knob. Release it, set the handle to your desired comfortable height, and then securely fasten the mechanism to lock the handle in place.

5.3 Using the Scorecard Holder

The deluxe scorecard holder provides convenient storage for your scorecard, tees, and golf balls. Place your scorecard in the designated slot, and utilize the built-in holders for tees and golf balls for easy access during your game.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Bag Boy M-350 golf push cart, regular maintenance is recommended.

- **Cleaning:** Wipe down the frame and wheels with a damp cloth after each use to remove dirt and debris. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Storage:** Fold the cart compactly and store it in a dry, cool place away from direct sunlight and extreme temperatures. This helps preserve the materials and moving parts.
- **Inspection:** Periodically check all bolts, screws, and moving parts for tightness and wear. Tighten any loose fasteners. The cart's design allows for easy replacement of damaged parts, which can extend its lifespan.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Bag Boy M-350 golf push cart.

- **Cart does not fold/unfold smoothly:** Check for any obstructions in the folding mechanism. Ensure all latches are fully disengaged or engaged as required. Apply a small amount of silicone lubricant to pivot points if stiffness persists.
- **Golf bag feels unstable:** Verify that the quick-release Velcro straps are securely fastened around your golf bag. Adjust the bag's position on the support brackets for better balance. Ensure the bag is seated correctly in the lower cradle.
- **Wheels do not roll freely:** Inspect wheels for debris accumulation (grass, mud, etc.). Clean the wheel axles and ensure they are free from obstructions. Check for any damage to the wheels or bearings.

8. SPECIFICATIONS

Feature	Detail
Model Name	M-350 Cart Bag
Part Number	BB75401
Material	Aluminum
Color	Black
Item Weight	10 Pounds
Item Dimensions (LxWxH)	36 x 13 x 10 inches

Feature	Detail
Package Dimensions (LxWxH)	36 x 10 x 9 inches
Suggested Users	Unisex-adult
Sport Type	Golf
Manufacturer	Bag Boy Company
Model Year	2014

9. WARRANTY INFORMATION

The Bag Boy M-350 Golf Push Cart comes with a **1-year manufacturer's warranty** from the date of original purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for all warranty claims. For detailed warranty terms and conditions, including exclusions and how to make a claim, please refer to the official Bag Boy website or contact their customer support directly.

10. SUPPORT

For further assistance, technical support, or to inquire about replacement parts for your Bag Boy M-350 Golf Push Cart, please visit the official Bag Boy website. You can typically find contact information for customer service, FAQs, and additional resources there. Always refer to your model number (M-350 / BB75401) when seeking support to ensure accurate assistance.