

BLAUPUNKT 7645150510

Blaupunkt Essen MP 35 Car Radio User Manual

Model: 7645150510

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Blaupunkt Essen MP 35 car radio. Please read this manual thoroughly before using the device to ensure proper function and to prevent damage.

The Blaupunkt Essen MP 35 is designed to provide high-quality audio entertainment in your vehicle, featuring MP3 playback capabilities.

SAFETY INFORMATION

Always observe the following safety precautions:

- Do not operate the device in a manner that distracts you from driving.
- Ensure proper ventilation around the unit.
- Avoid exposing the unit to extreme temperatures, direct sunlight, or moisture.
- Only use accessories specified by Blaupunkt.
- Refer all servicing to qualified service personnel.

SETUP AND INSTALLATION

Package Contents

Verify that all items are present:

- Blaupunkt Essen MP 35 Car Radio Unit
- Mounting Sleeve
- Release Keys (2)
- Wiring Harness (ISO Connector)

- User Manual (this document)
- Remote Control (if included with your model)

Installation Steps

Warning: Disconnect the vehicle's battery negative terminal before beginning installation to prevent electrical shorts.

1. **Prepare the Dashboard Opening:** Ensure the dashboard opening is standard DIN size. If replacing an existing radio, remove it using appropriate tools.
2. **Install Mounting Sleeve:** Insert the metal mounting sleeve into the dashboard opening. Bend the tabs outwards to secure it firmly.

Image Placeholder: Illustration showing the mounting sleeve being inserted into the dashboard and secured by bending tabs. This image helps visualize the correct installation of the sleeve.

3. **Connect Wiring Harness:** Connect the vehicle's wiring harness to the supplied ISO connector. Ensure all connections (power, ground, speakers, antenna) are correct. Refer to your vehicle's wiring diagram if necessary.

Image Placeholder: Diagram illustrating the wiring connections for the ISO connector, showing power, ground, and speaker wire connections. This diagram is crucial for correct electrical setup.

4. **Insert the Unit:** Carefully slide the Blaupunkt Essen MP 35 unit into the mounting sleeve until it clicks into place.
5. **Reconnect Battery:** Reconnect the vehicle's battery negative terminal.
6. **Initial Power On:** Turn on the vehicle's ignition and then power on the car radio.

Antenna Connection

Connect the vehicle's antenna cable to the antenna input on the rear of the unit. Ensure a secure connection for optimal radio reception.

OPERATING INSTRUCTIONS

Front Panel Controls

Image Placeholder: Front panel diagram of the Blaupunkt Essen MP 35, with labels for each button and control knob. This image is essential for identifying controls.

- **POWER/MUTE Button:** Press to turn the unit ON/OFF. Press briefly to MUTE/UNMUTE audio.
- **VOLUME Knob:** Rotate to adjust the volume level.
- **SRC (Source) Button:** Press to cycle through available audio sources (FM, AM, CD, MP3).
- **BAND Button:** In radio mode, press to switch between FM1, FM2, FM3, and AM bands.
- **SEEK Buttons (<< / >>):** In radio mode, press to seek the next/previous strong station. In CD/MP3 mode, press to skip tracks.
- **DISPLAY Button:** Press to change display information (e.g., clock, track title).
- **EQ Button:** Press to cycle through preset equalizer settings.
- **MENU/SETUP Button:** Press and hold to enter the system setup menu.

Radio Operation

1. **Select Radio Source:** Press the **SRC** button until "FM" or "AM" is displayed.
2. **Select Band:** Press the **BAND** button to choose between FM1, FM2, FM3, or AM.
3. **Tune Stations:**
 - **Automatic Seek:** Press **SEEK <<** or **SEEK >>** to find the next strong station.
 - **Manual Tuning:** Press and hold **SEEK <<** or **SEEK >>** until the frequency starts changing, then release and press briefly for fine tuning.
4. **Store Presets:** Tune to the desired station. Press and hold one of the numeric preset buttons (1-6) until you hear a beep. The station is now stored.

CD/MP3 Playback

1. **Insert Disc:** Gently insert a CD or MP3 CD into the disc slot with the label side up. The unit will automatically switch to CD/MP3 mode and begin playback.
2. **Track Navigation:** Press **SEEK <<** or **SEEK >>** to skip to the previous or next track.
3. **Fast Forward/Rewind:** Press and hold **SEEK <<** or **SEEK >>** during playback.
4. **Pause/Play:** Press the **PLAY/PAUSE** button (usually button 3 or 4, refer to front panel diagram) to pause or resume playback.
5. **Folder Navigation (MP3):** If playing an MP3 CD with folders, use the **FOLDER UP/DOWN** buttons (if available, refer to front panel diagram) to navigate between folders.

Audio Settings

Press the **MENU/SETUP** button repeatedly or press and hold to access audio settings such as Bass, Treble, Balance, Fader, and Loudness. Use the **VOLUME** knob to adjust values.

MAINTENANCE

Cleaning the Unit

Use a soft, dry cloth to clean the front panel. For stubborn dirt, dampen the cloth slightly with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface.

CD Player Care

- Handle CDs by their edges to avoid fingerprints and scratches.
- Keep the disc slot free of dust and debris.
- Do not insert damaged, warped, or irregularly shaped discs.

TROUBLESHOOTING

Before contacting customer support, please refer to the following table for common issues and solutions:

Problem	Possible Cause	Solution
No power	Blown fuse; incorrect wiring; vehicle battery disconnected.	Check vehicle fuses and the unit's fuse. Verify wiring connections. Ensure battery is connected.
No sound	Volume too low; Mute activated; incorrect speaker wiring.	Increase volume. Press MUTE button. Check speaker connections.

Problem	Possible Cause	Solution
Poor radio reception	Antenna not connected; damaged antenna; weak signal area.	Ensure antenna is securely connected. Check antenna for damage. Try a different location.
Disc error / Disc not playing	Dirty or scratched disc; incorrect disc format; foreign object in slot.	Clean disc. Use only compatible CD/MP3 discs. Check for obstructions.

SPECIFICATIONS

Feature	Detail
Model Number	7645150510
Brand	BLAUPUNKT
Control Method	Remote Control
Audio Output Type	Speakers
Package Dimensions	25.2 x 23.2 x 11.6 cm
Weight	1.96 kg
ASIN	B0009HOOM4

WARRANTY INFORMATION

Blaupunkt products are covered by a limited warranty. Please refer to the warranty card included with your product or visit the official Blaupunkt website for detailed terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, service, or further inquiries, please contact Blaupunkt customer support. Contact information can typically be found on the official Blaupunkt website or on the warranty card.

Online Support: www.blaupunkt.com/en/support/