

[Manuals.plus](#) /

› [Bomann](#) /

› Bomann CB 967 Cordless Handheld Vacuum Cleaner Instruction Manual

Bomann CB 967

Bomann CB 967 Cordless Handheld Vacuum Cleaner Instruction Manual

Model: CB 967

IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Always observe basic safety precautions when using electrical appliances.

- This appliance is intended for domestic use only. Do not use it for commercial purposes.
- Do not immerse the appliance, charging station, or power adapter in water or other liquids.
- Keep the appliance away from children. Supervise children to ensure they do not play with the appliance.
- Do not vacuum hot ashes, burning cigarettes, or sharp objects.
- Ensure the dust filter is always correctly installed before operation.
- Only use the original power adapter and charging station supplied with the appliance.
- Do not operate the appliance if the power cord or plug is damaged. Contact qualified personnel for repair.
- The Ni-Mh batteries are rechargeable. Do not attempt to replace them yourself. Contact customer service if battery replacement is needed.
- Dispose of batteries responsibly according to local regulations.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Bomann CB 967 handheld vacuum cleaner.



The complete set of the Bomann CB 967, including the vacuum unit, charging base, power adapter, crevice tool, and brush attachment.

1. Main Vacuum Unit
2. Dust Container
3. Washable Permanent Dust Filter
4. On/Off Switch
5. LED Charging Indicator
6. Charging Station (Stand/Wall Mount)
7. Power Adapter
8. Crevice Nozzle
9. Brush Nozzle

SETUP AND INITIAL USE

1. Charging the Battery

Before first use, fully charge the appliance for approximately 12-16 hours.

1. Connect the power adapter to the charging station.
2. Plug the power adapter into a suitable wall outlet.
3. Place the handheld vacuum cleaner onto the charging station. Ensure proper contact.
4. The LED charging indicator will illuminate, indicating that the unit is charging.
5. Once fully charged, the LED may change color or turn off depending on the model. The appliance is now ready for use.



The charging station for the Bomann CB 967, shown with its power adapter and screws for optional wall mounting.

2. Assembling Accessories

The crevice nozzle and brush nozzle can be easily attached to the suction opening for specialized cleaning tasks.

- To attach an accessory, simply push it firmly onto the suction opening until it is securely in place.

- To remove, pull the accessory off gently.



The included crevice nozzle for reaching tight spaces and the brush nozzle for delicate surfaces or stubborn dirt.

OPERATION

1. Turning On/Off

Locate the On/Off switch on the top of the main unit.

- To turn on the vacuum cleaner, slide the switch to the 'I' position.
- To turn off the vacuum cleaner, slide the switch to the 'O' position.

2. Using the Vacuum Cleaner

The Bomann CB 967 is designed for quick and convenient cleaning of dry surfaces.

- For general cleaning, use the main suction opening.
- For narrow gaps, corners, or hard-to-reach areas, attach the crevice nozzle.
- For delicate surfaces, upholstery, or to dislodge stubborn dirt, attach the brush nozzle.
- Do not overfill the dust container. Empty it regularly for optimal suction performance.



The Bomann CB 967 handheld vacuum cleaner with the crevice nozzle, effectively cleaning between car seats.



The Bomann CB 967 handheld vacuum cleaner with the brush nozzle, cleaning dust and debris from a computer keyboard.

MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

1. Emptying the Dust Container

1. Ensure the vacuum cleaner is turned off.
2. Press the release button (if applicable) or twist the dust container to detach it from the main unit.
3. Carefully remove the dust filter from the container.
4. Empty the contents of the dust container into a waste bin.
5. Reassemble the filter and dust container, ensuring they are securely locked in place.

2. Cleaning the Filter

The Bomann CB 967 features a washable permanent dust filter.

1. After emptying the dust container, gently tap the filter to remove loose dust.
2. Rinse the filter under running cold water until the water runs clear. Do not use detergents.
3. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Operating the vacuum with a damp filter can damage the motor.
4. Once dry, place the filter back into the dust container and reattach the container to the main unit.

TROUBLESHOOTING

Refer to this table for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged.	Charge the battery for the recommended time.
	On/Off switch is not in the 'On' position.	Slide the switch to 'I'.
Low suction power.	Dust container is full.	Empty the dust container.
	Filter is clogged.	Clean or wash the dust filter and ensure it is completely dry before reinserting.
	Suction opening or nozzle is blocked.	Remove any obstructions from the suction opening or attached nozzle.
LED charging indicator not working.	Appliance not correctly placed on charging station.	Ensure proper contact between the vacuum and the charging station.
	Power adapter not plugged in or faulty.	Check power connection. Try a different outlet. If still not working, contact customer support.

TECHNICAL SPECIFICATIONS

Key technical data for the Bomann CB 967 handheld vacuum cleaner.



A diagram illustrating the dimensions of the Bomann CB 967 handheld vacuum cleaner: 310 mm length, 130 mm height, and 100 mm width.

Feature	Specification
---------	---------------

Feature	Specification
Model Number	CB 967
Product Dimensions	Approx. 11.99 x 13 x 35 cm
Weight	Approx. 700 grams
Battery Type	Ni-Mh rechargeable batteries (3 included)
Dust Container Volume	2 Liters
Filter Type	Permanent, washable dust filter
Special Features	Bagless, Cordless, Compact, Lightweight, Washable Filter, Rechargeable
Form Factor	Handheld

WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your purchase or contact Bomann customer service directly. Keep your proof of purchase for any warranty claims.

You can typically find contact details on the official Bomann website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0009HOONS>

More documents and user manuals: <https://manuals.plus/>