

Transcend TS1GMP610

Transcend T.sonic 610 MP3 Player User Manual

Model: TS1GMP610

1. INTRODUCTION

Thank you for choosing the Transcend T.sonic 610 MP3 Player. This device is designed to provide portable audio entertainment with features such as an FM tuner and voice recorder. This manual will guide you through the setup, operation, and maintenance of your new MP3 player to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

2.1 Key Features

- 1 GB storage capacity.
- Up to 15 hours of audio playback on a single charge.
- 1-inch dual-color OLED display (128 x 64 pixel resolution).
- Supports MP3, WMA, and WAV audio formats.
- Integrated FM Tuner.
- Voice Recording functionality.

2.2 Device Layout

Familiarize yourself with the physical components of your T.sonic 610 MP3 player.



Figure 1: Front view of the Transcend T.sonic 610 MP3 Player. This image displays the compact design and the OLED screen.

- **OLED Display:** Shows menu, track information, and settings.
- **Control Buttons:** Typically include Play/Pause, Next/Previous Track, Volume Up/Down, and Menu/Back buttons. Refer to the included quick start guide for specific button functions.
- **USB Port:** For connecting to a computer for data transfer and charging.
- **Headphone Jack:** For connecting your earphones.
- **Microphone:** For voice recording.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your T.sonic 610. Connect the MP3 player to a computer's USB port using the provided USB cable. The device will indicate charging status on its display. A full charge typically takes a few hours.

3.2 Connecting to a Computer

To transfer music or other files, connect the MP3 player to your computer using the USB cable. The device will appear as a removable disk drive. You can then drag and drop files directly to the player's storage.

3.3 Loading Music and Files

Once connected to your computer, open the MP3 player's drive. Create folders if desired (e.g., 'Music', 'Voice Recordings'). Copy your MP3, WMA, or WAV audio files into the appropriate folders on the device. Safely eject the device from your computer before disconnecting the USB cable.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- **To Power On:** Press and hold the Play/Pause button for a few seconds until the display lights up.
- **To Power Off:** Press and hold the Play/Pause button again until the display turns off.

4.2 Basic Navigation

Use the navigation buttons (usually directional or dedicated buttons) to scroll through menus and select options. The Play/Pause button often doubles as a 'Confirm' or 'Enter' button, while a dedicated 'Menu' or 'Back' button allows you to return to the previous screen or main menu.

4.3 Playing Music

1. Navigate to the 'Music' or 'Audio' section from the main menu.
2. Browse through your folders and select a track or album.
3. Press the Play/Pause button to start playback.
4. Use the Next/Previous buttons to skip tracks and Volume Up/Down buttons to adjust the sound level.

4.4 Using the FM Tuner

1. From the main menu, select 'FM Radio'.
2. Use the navigation buttons to scan for stations or manually tune to a frequency.
3. The connected headphones act as the antenna for the FM tuner.

4.5 Voice Recording

1. Select 'Voice Recorder' from the main menu.
2. Press the Play/Pause button to start recording.
3. Press Play/Pause again to pause or stop the recording.
4. Recordings are typically saved in a dedicated folder on the device.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry, lint-free cloth. Do not use liquid cleaners or abrasive materials, as they may damage the screen or casing.

5.2 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, especially if it will not be used for an extended period. Store the device in a cool, dry place.

5.3 Storage

When not in use, store the MP3 player in a protective pouch or case to prevent scratches and damage from dust or impacts.

6. TROUBLESHOOTING

- **Device will not turn on:** Ensure the battery is charged. Connect to a computer or USB charger for at least 30 minutes.
- **No sound:** Check headphone connection. Ensure volume is not muted or set too low. Test with different headphones.
- **Cannot connect to computer:** Try a different USB port or cable. Ensure the device is powered on. Restart your computer.
- **Files not appearing:** Ensure files are in a supported format (MP3, WMA, WAV). Reconnect the device and verify files were transferred correctly.
- **FM radio static:** Ensure headphones are properly connected as they act as the antenna. Try moving to a different location for better reception.

7. SPECIFICATIONS

Feature	Specification
Model Number	TS1GMP610
Memory Storage Capacity	1 GB
Display	1-inch dual-color OLED (128 x 64 pixels)
Supported Audio Formats	MP3, WMA, WAV
Battery Life	Up to 15 hours (approximate)
Connectivity	USB 2.0 (for data transfer and charging)
Special Features	FM Tuner, Voice Recorder

Product Dimensions	5.7 x 4.5 x 1.5 inches
Item Weight	0.988 ounces

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

The Transcend T.sonic 610 MP3 Player comes with a **2-year limited warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For technical assistance, warranty service, or further information, please visit the official Transcend website or contact their customer support department. Contact details can typically be found on the manufacturer's website or in the product packaging.