

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony Pictures Home Entertainment](#) /
- › [The Downfall: Hitler and the End of the Third Reich DVD Instruction Manual](#)

Sony Pictures Home Entertainment B0009RCPUC

The Downfall: Hitler and the End of the Third Reich DVD Instruction Manual

Model: B0009RCPUC

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your *The Downfall: Hitler and the End of the Third Reich* DVD. Please read this guide thoroughly before use to ensure optimal viewing experience and longevity of the product.

SETUP

- Unpack the DVD:** Carefully remove the DVD disc from its packaging. Handle the disc by its edges to avoid fingerprints on the playback surface.
- Prepare Your Player:** Ensure your DVD player or computer with a DVD drive is connected to a display device (TV, monitor) and powered on.
- Insert the Disc:** Open the disc tray of your DVD player or computer drive. Place the DVD disc into the tray with the label side facing up. Close the tray.
- Power On:** Turn on your display device and select the correct input source for your DVD player.

OPERATING INSTRUCTIONS

- **Disc Loading:** After inserting the disc, your DVD player should automatically load the disc and display the main menu. If not, press the "Play" or "Disc" button on your remote control or player.
- **Main Menu Navigation:** Use the arrow keys on your remote control to navigate through the menu options. Press "Enter" or "OK" to select an option.
- **Playing the Movie:** Select "Play Movie" or a similar option from the main menu to begin playback.
- **Language and Subtitles:**
 - The primary audio language for this DVD is **German (Dolby Digital 5.1)**.
 - English subtitles are available. To activate or deactivate subtitles, navigate to the "Audio/Subtitles" or "Setup" menu on the DVD, or use the "Subtitle" button on your remote control.

- **Aspect Ratio:** The film is presented in an aspect ratio of **1.78:1**. Ensure your display device is set to an appropriate viewing mode (e.g., "Widescreen" or "16:9") for optimal presentation.
- **Pausing and Stopping:** Use the "Pause" button to temporarily stop playback and the "Stop" button to end the movie and return to the main menu or disc start.

MAINTENANCE

- **Disc Cleaning:** If the disc surface becomes dirty or smudged, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line. Do not wipe in a circular motion. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the DVD disc in its original case in a cool, dry place away from direct sunlight and extreme temperatures. This prevents warping and scratching.
- **Handling:** Always hold the disc by its outer edges or by placing a finger through the center hole. Avoid touching the playback surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Disc does not play or load.	Disc is dirty, scratched, or inserted incorrectly. Player is not functioning correctly.	Clean the disc. Ensure the disc is inserted label-side up. Try the disc in another player to rule out player malfunction.
No audio or incorrect audio language.	Audio settings on player or DVD menu are incorrect.	Check your DVD player's audio output settings. Navigate to the "Audio" menu on the DVD to select the desired language (German).
Subtitles are not displayed or are in the wrong language.	Subtitle settings on player or DVD menu are incorrect.	Use the "Subtitle" button on your remote or navigate to the "Subtitles" menu on the DVD to select English subtitles.
Picture quality issues (pixelation, freezing).	Disc surface damage or player reading error.	Clean the disc. If the problem persists, the disc may be damaged.

SPECIFICATIONS

Feature	Detail
Title	The Downfall: Hitler and the End of the Third Reich
ASIN	B0009RCPUC
Studio	Sony Pictures Home Entertainment
Director	Oliver Hirschbiegel
Actors	Alexandra Maria Lara, Bruno Ganz, Corinna Harfouch
Release Date	August 2, 2005
Run Time	2 hours and 35 minutes

Feature	Detail
Media Format	Subtitled
Aspect Ratio	1.78:1
MPAA Rating	R (Restricted)
Dubbed Language	German
Subtitles	English
Number of Discs	1
Product Dimensions	7.5 x 5.5 x 0.5 inches; 2.4 ounces
Genre	Drama

For further assistance, please refer to your DVD player's manual or contact the manufacturer.