

Directed 474T

Directed Electronics 474T 4-Button Transmitter User Manual

Model: 474T | Brand: Directed

INTRODUCTION

This manual provides essential information for the Directed Electronics 474T 4-Button Transmitter. This device is a replacement remote designed for use with compatible Directed Electronics car security and remote start systems. It features a 4-button layout and utilizes stealth code technology for secure operation.

The 474T transmitter is compatible with specific Valet systems, including the Valet 562T, 536T, and 554R.



Figure 1: Directed Electronics 474T 4-Button Transmitter. This image displays the front of the remote, highlighting its four primary function buttons and the 'VALET' branding.

SETUP AND PROGRAMMING

The Directed Electronics 474T transmitter requires programming to your vehicle's compatible security or remote start system. Programming instructions are typically specific to the main control unit (e.g., Valet 562T, 536T, 554R) and are not included with the transmitter itself. Please refer to the user manual of your specific Directed Electronics system for detailed programming steps.

General Programming Guidance:

- Locate the programming button or switch on your vehicle's alarm or remote start control module. This is often referred to as the 'Valet' button.
- Follow the sequence of ignition cycles and button presses as outlined in your system's manual to enter programming mode.
- Once in programming mode, press the desired button on the 474T transmitter to link it with the system.
- Exit programming mode according to your system's instructions.

The 474T transmitter requires one CR2 battery for operation. Ensure the battery is correctly installed before attempting to program or use the remote.

OPERATING INSTRUCTIONS

The 474T transmitter features four distinct buttons for controlling your vehicle's security system:

- **Lock Button ():** Press this button to arm your vehicle's security system and lock the doors.
- **Unlock Button ():** Press this button to disarm your vehicle's security system and unlock the doors.
- **Asterisk (*) Button:** This button typically controls auxiliary functions such as remote start, trunk release, or panic mode, depending on how your system is configured. Consult your system's manual for specific functionality.
- **AUX Button:** This button is designated for additional auxiliary functions, which can be programmed to control various features of your vehicle's security or convenience system. Refer to your system's manual for details on its assigned function.

Ensure you are within range of your vehicle for the transmitter to function correctly. Signal range may vary based on environmental factors and vehicle obstructions.

MAINTENANCE

To ensure optimal performance and longevity of your Directed Electronics 474T transmitter, follow these maintenance guidelines:

- **Battery Replacement:** The transmitter is powered by one CR2 battery. When the remote's range decreases or it becomes unresponsive, it is likely time to replace the battery. To replace, carefully open the remote casing, remove the old battery, and insert a new CR2 battery, observing correct polarity.
- **Cleaning:** Clean the exterior of the transmitter with a soft, dry cloth. Avoid using abrasive cleaners or solvents, which can damage the casing or buttons.
- **Storage:** Store the transmitter in a dry place, away from extreme temperatures and direct sunlight. Avoid exposing it to water or excessive moisture.
- **Handling:** Avoid dropping the transmitter or subjecting it to strong impacts, as this can damage internal components.

TROUBLESHOOTING

If you experience issues with your Directed Electronics 474T transmitter, consider the following common solutions:

- **Remote Not Responding:**
 - Check the battery. Replace the CR2 battery if it is low or depleted.
 - Ensure you are within the effective operating range of your vehicle's system.
 - Verify that the remote is properly programmed to your system. If unsure, attempt to re-program the remote following your system's manual.
- **Intermittent Operation:**
 - This could indicate a weak battery. Replace the CR2 battery.
 - Environmental interference (e.g., strong radio signals, large metal structures) can affect performance. Try operating the remote in a different location.
- **Buttons Not Functioning Correctly:**

- Ensure no debris is lodged under the buttons.
- If a specific button is consistently unresponsive, the remote may require professional inspection or replacement.

For persistent issues, consult the comprehensive troubleshooting section of your vehicle's Directed Electronics system manual or contact Directed Electronics customer support.

SPECIFICATIONS

Model Number	474T
Brand	Directed
Product Dimensions	3.09 x 8 x 5 inches
Item Weight	0.08 ounces
Batteries Required	1 CR2 battery
Connectivity Technology	Radio Frequency (434 MHz)
Special Features	Ergonomic, Wireless
Color	White (casing is black, buttons are grey/yellow)
Compatible Devices	Valet 562T, 536T, 554R
Manufacturer	Directed Electronics Inc
Country of Origin	China







WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the documentation provided with your original Directed Electronics system or visit the official Directed Electronics website. Warranty terms and conditions may vary.

For technical support, programming assistance, or service inquiries, please contact Directed Electronics customer support directly. Contact information can typically be found on the manufacturer's website or in your system's main user manual.

IMPORTANT SAFETY INFORMATION

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

	<p>Directed 4103 Keyless Entry Remote Start Installation Guide</p> <p>This installation guide provides detailed instructions for the Directed 4103 Keyless Entry Remote Start system, covering safety precautions, wiring diagrams, feature programming, and troubleshooting for professional installers.</p>
	<p>Directed 4105 Keyless Entry Remote Start System Installation Guide</p> <p>Comprehensive installation guide for the Directed 4105 4-button series Keyless Entry Remote Start system, covering wiring, features, programming, and troubleshooting for professional installers.</p>
	<p>Directed Digital Solutions Chrysler Installation Guide</p> <p>This installation guide provides detailed instructions for installing Directed Digital Solutions firmware for Chrysler, Dodge/RAM, Jeep, Mitsubishi, and Volkswagen vehicles. It covers wiring connections, vehicle application guides, and troubleshooting.</p>
	<p>Directed 5105V/5105P/5105X/5105A/5105L Owner's Guide - Vehicle Security & Remote Start System</p> <p>Comprehensive owner's guide for Directed 5105 series vehicle security and remote start systems, covering installation, operation, features, troubleshooting, and warranty. Learn how to use your car alarm and remote start system effectively.</p>
	<p>Directed 4X05 Series Remote Start & Keyless Entry System: Quick Reference Installation Guide</p> <p>This guide provides essential information for installing Directed 4X05 series remote start and keyless entry systems (models 4115 and 4105). It details wiring connections, installation points, programming features, remote control functions, and diagnostic procedures.</p>
	<p>Directed HONDA4 Installation Guide for Acura and Honda Vehicles</p> <p>Comprehensive installation guide for the Directed HONDA4 firmware, offering remote start, security, and bypass solutions for select Acura and Honda vehicles. Features detailed wiring diagrams, vehicle application charts, and professional installation instructions.</p>