

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Protect Turbo GV9150 Steam Generator User Manual

Tefal GV9150

Tefal Protect Turbo GV9150 Steam Generator User Manual

Model: GV9150

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Tefal Protect Turbo GV9150 Steam Generator. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not leave the appliance unattended while it is switched on.
- Keep the appliance and its cord out of reach of children.
- Never immerse the appliance, cord, or plug in water or any other liquid.
- Unplug the appliance from the mains socket before filling with water, cleaning, or after each use.
- Do not operate the appliance with a damaged cord or plug, or if it has been dropped or damaged.
- The soleplate and steam are extremely hot and can cause burns. Handle with care.
- Only use the appliance for its intended household purpose.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Tefal Protect Turbo GV9150 Steam Generator.



Figure 1: The Tefal Protect Turbo GV9150 Steam Generator, showing the iron securely nested within its base unit, which includes the water tank and control panel. A protective cover is visible over the iron.



Figure 2: The Tefal Protect Turbo GV9150 Steam Generator positioned on an ironing board, with the iron detached from its base and ready for use. This image illustrates the appliance in a typical operational setting.

1. **Iron Unit:** Features a ceramic soleplate and comfort handle.
2. **Steam Hose:** Connects the iron to the base unit.
3. **Base Unit:** Houses the boiler, water tank, and control panel.
4. **Removable Water Tank:** 850ml capacity with a water level indicator.
5. **Control Panel:** For power, steam, and temperature settings.
6. **Power Cord:** With cord rewind feature.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Positioning:** Place the steam generator base unit on a stable, heat-resistant surface, such as an ironing board designed for steam generators.
3. **Filling the Water Tank:**
 - Ensure the appliance is unplugged.
 - Remove the 850ml water tank from the base unit.
 - Fill the tank with tap water up to the 'MAX' level indicator. Do not use distilled or demineralized water exclusively, as it can affect steam performance.
 - Replace the water tank securely into the base unit.
4. **Connecting Power:** Plug the power cord into a suitable 220V grounded electrical outlet.

5. OPERATING INSTRUCTIONS

1. **Power On:** Switch on the appliance using the power button on the control panel. The indicator light will illuminate.
2. **Heating Up:** Allow the appliance to heat up. This typically takes a few minutes. The steam ready indicator light will turn on when the desired temperature and pressure are reached.
3. **Adjusting Steam and Temperature:**
 - Use the temperature dial on the iron to select the appropriate setting for your fabric type.
 - Use the steam control on the base unit to select continuous steam (100g/min) or activate the Turbo Steam function (150g).
4. **Ironing:** Begin ironing your garments. Press the steam trigger on the iron handle to release steam.
5. **Turbo Steam:** For stubborn creases, activate the 150g Turbo Steam burst by pressing the dedicated button.
6. **Continuous Refill:** The appliance features unlimited ironing time due to its continuous refill capability. If the water tank runs low, you can refill it at any time without switching off the appliance.
7. **After Use:** Switch off the appliance, unplug it from the mains, and allow it to cool down completely before storing. Use the cord rewind feature for tidy storage.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your steam generator.

- **Descaling:** Although the boiler is corrosion-free, mineral deposits can still accumulate over time, especially in hard water areas. Refer to the appliance's specific descaling procedure, usually involving a rinse or a descaling solution. Perform descaling as recommended by the manufacturer.

- **Cleaning the Soleplate:** If the soleplate becomes dirty, clean it with a damp cloth and a non-abrasive cleaner designed for iron soleplates. Do not use metallic pads or abrasive cleaners.
- **Emptying the Water Tank:** After each use, it is recommended to empty any remaining water from the tank to prevent stagnant water and mineral buildup.
- **Storage:** Once cooled, store the iron securely in its base unit. Use the cord rewind function to neatly store the power cord.

7. TROUBLESHOOTING

If you encounter issues, consult the following table before contacting customer service.

Problem	Possible Cause	Solution
No steam produced	Water tank empty; appliance not heated up; steam control off.	Fill water tank; wait for 'steam ready' light; activate steam control.
Water leaking from soleplate	Temperature too low for steam; iron held horizontally for too long.	Increase temperature setting; avoid holding iron horizontally when not in use.
Appliance not heating	Not plugged in; power switch off; faulty outlet.	Check power connection; ensure power switch is on; test outlet with another appliance.

8. TECHNICAL SPECIFICATIONS

- **Model:** GV9150
- **Power:** 2200 Watts
- **Voltage:** 220 Volts
- **Continuous Steam Output:** 100 g/min
- **Turbo Steam Boost:** 150 g
- **Bar Pressure:** 5 Bar
- **Water Tank Capacity:** 850 ml (removable)
- **Soleplate Material:** Ceramic
- **Special Features:** Cord rewind, Comfort handle, Corrosion-free boiler, Variable steam, Unlimited ironing time (continuous refill)
- **Dimensions (approx.):** 48.8 x 35.2 x 28.2 cm
- **Weight (approx.):** 6.82 kg

9. WARRANTY AND SUPPORT

Your Tefal Protect Turbo GV9150 Steam Generator is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or warranty claims, please contact Tefal customer service in your region. Contact information can typically be found on the Tefal official website or on your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0009VQ22A>

More documents and user manuals: <https://manuals.plus/>