

Taco SR501

Taco SR501 Single Zone Hot Water Circulator Switching Relay User Manual

Model: SR501

[Overview](#) [Safety](#) [Installation](#) [Operation](#) [Maintenance & Support](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. PRODUCT OVERVIEW

The Taco SR501 Single Zone Hot Water Circulator Switching Relay is designed to manage a single zone hot water circulator pump in heating systems. This device simplifies wiring and offers reliable control for your heating system. Its design allows for easy replacement of existing single zone switching relays without needing to replace the entire enclosure.

Key features include:

- External Indicator Lights for instant diagnostic feedback.
- Universal replaceability with a snap-in PC board.
- Simplified wiring for straightforward installation.
- Fully enclosed snap-out relays.
- 100% factory tested for reliability.
- Contractor-friendly PC board layout.
- Universal thermostat compatibility.
- UL and CSA approved for safety standards.



Figure 1: The Taco SR501 Single Zone Hot Water Circulator Switching Relay. This image shows the compact green enclosure of the relay unit with its product label visible.

2. IMPORTANT SAFETY INFORMATION

WARNING: Risk of Electric Shock. Disconnect power before installation or servicing.

- All wiring must conform to local electrical codes and ordinances.
- Installation and servicing should only be performed by qualified personnel.
- Ensure the power supply to the heating system is completely disconnected before beginning any work on the relay.
- Do not operate the device with damaged wiring or if the enclosure is open.
- This device is designed for indoor use only.

3. INSTALLATION INSTRUCTIONS

The Taco SR501 is designed for straightforward installation and can often replace older single zone relays without extensive modifications.

3.1 Pre-Installation Steps

1. **Disconnect Power:** Turn off the main power supply to the boiler or heating system at the circuit breaker. Verify power is off using a voltage tester.
2. **Identify Wiring:** Carefully label all existing wires connected to the old relay (if replacing one) to ensure correct re-connection.
3. **Mounting Location:** Choose a suitable mounting location near the boiler or circulator pump, ensuring it is dry and easily accessible for future servicing.

3.2 Wiring the SR501

The SR501 features a contractor-friendly PC board layout and simplified wiring terminals.

- **Power Connection:** Connect the incoming 120V AC power supply to the designated terminals on the relay.
- **Thermostat Connection:** Connect the thermostat wires to the low voltage thermostat terminals. The SR501 is compatible with conventional and programmable thermostats.
- **Circulator Pump Connection:** Connect the circulator pump wiring to the appropriate pump terminals.
- **Grounding:** Ensure the unit is properly grounded according to local electrical codes.

Note: The snap-in PC board design facilitates easy replacement. If replacing an older unit, the new SR501's PC board can often be swapped into the existing enclosure, provided the knockout configuration is suitable. Consult the wiring diagram provided with the product for specific terminal assignments.

4. OPERATING INSTRUCTIONS

The Taco SR501 operates automatically in response to thermostat calls for heat.

4.1 Initial Power-Up

1. After completing all wiring and securing the cover, restore power to the heating system at the circuit breaker.
2. Observe the external indicator lights. A power indicator light should illuminate, confirming the unit is receiving power.

4.2 Normal Operation

- When the connected thermostat calls for heat, the SR501 will energize the circulator pump.
- An indicator light for the zone (or pump) will illuminate, indicating that the pump is active.
- When the thermostat is satisfied, the SR501 will de-energize the circulator pump, and the zone/pump indicator light will turn off.

The SR501 uses a standard ice cube replaceable relay, which can be easily swapped if needed.

5. MAINTENANCE

The Taco SR501 is designed for reliable, maintenance-free operation. However, periodic checks can help ensure its longevity and proper function.

- **Visual Inspection:** Annually, inspect the unit for any signs of physical damage, loose connections, or corrosion.
- **Indicator Lights:** Periodically check the external indicator lights during operation to confirm proper power and zone activation.
- **Cleaning:** Keep the area around the relay clean and free from dust and debris to ensure adequate ventilation.
- **Relay Replacement:** If the circulator pump fails to operate despite a call for heat and the thermostat is functioning, the internal ice cube relay may need replacement. Ensure power is disconnected before attempting to replace the relay.

Always disconnect power before performing any maintenance or inspection.

6. TROUBLESHOOTING GUIDE

Use the external indicator lights for quick diagnostics.

Problem	Possible Cause	Solution
No power indicator light	No power to the unit; faulty wiring; tripped circuit breaker.	Check circuit breaker. Verify power supply connections. Ensure main power is on.
Circulator pump does not run when thermostat calls for heat, but power light is on.	Faulty thermostat; loose thermostat wiring; faulty internal relay.	Check thermostat operation. Verify thermostat wiring connections. Replace the internal ice cube relay.
Circulator pump runs continuously.	Thermostat stuck in "call for heat" position; shorted thermostat wiring; faulty internal relay.	Check thermostat. Inspect thermostat wiring for shorts. Replace the internal ice cube relay.

If troubleshooting steps do not resolve the issue, contact a qualified HVAC technician or Taco customer support.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	SR501
Brand	Taco
Contact Type	Normally Open
Operation Mode	Automatic
Number of Terminals	2
Specification Met	UL, CSA Approved
Item Weight	2.05 pounds

Feature	Detail
Product Dimensions	1 x 1 x 1 inches (Approximate, refer to actual product for precise measurements)
UPC	687752390384

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Taco SR501 Single Zone Hot Water Circulator Switching Relay comes with an **Extended 3 Year Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use and service. For full warranty terms and conditions, please refer to the official documentation provided with your product or visit the manufacturer's website.

8.2 Customer Support

For technical assistance, warranty claims, or further information regarding your Taco SR501, please contact Taco customer support:

 
- **Website:** www.tacomfort.com
- **Phone:** Refer to the official Taco website for regional contact numbers.
- **Email:** Refer to the official Taco website for support email addresses.


When contacting support, please have your product model number (SR501) and date of purchase available.

© 2023 Taco Comfort Solutions. All rights reserved.


This manual is for informational purposes only. Taco Comfort Solutions assumes no responsibility for errors or omissions in this manual or for damages resulting from the use of the information contained herein.

Related Documents - SR501

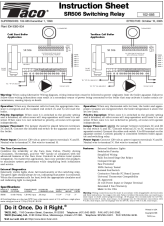	Taco SR501-4 Switching Relay Instruction Sheet and Wiring Guide Detailed instruction sheet for the Taco SR501-4 Switching Relay, covering features, operation, wiring diagrams, specifications, troubleshooting, and warranty information for HVAC professionals.
	Taco SR506 Switching Relay Instruction Sheet Instruction sheet for the Taco SR506 Switching Relay, detailing wiring diagrams, operation, priority settings, jumper placement, power input, external diagnostics, and specifications for both Cold Start Boiler and Tankless Coil Boiler applications. Includes features and manufacturer information.

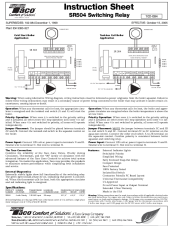 	TACO Zone Control Product Information and Wiring Guide Comprehensive overview of TACO zone control products, including switching relays, zone valve controls, and add-on power controls, with detailed product information, specifications, and wiring diagrams for HVAC systems.
	Taco SR502/503/504/506-5 Switching Relay Instruction Sheet Comprehensive instruction sheet for Taco's SR502, SR503, SR504, and SR506-5 switching relays, covering installation, operation, wiring, troubleshooting, and specifications for HVAC zone control systems.
	Taco SR504 Switching Relay Instruction Sheet Instruction sheet for the Taco SR504 Switching Relay, detailing its operation, features, specifications, and wiring for both Cold Start Boiler and Tankless Coil Boiler applications. Includes installation and safety warnings.
	Taco 0026e ECM High-Efficiency Circulator Instruction Sheet Instruction sheet for the Taco 0026e ECM High-Efficiency Circulator, detailing its features, applications, installation, wiring, programming, and troubleshooting. This variable speed circulator offers significant energy savings and replaces older single and 3-speed models.

 Documents - Taco – SR501

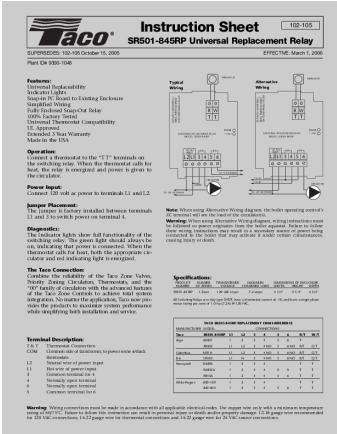


[pdf] Instructions Warranty

SR501 845RP 102 105 Vincent Viola taco sr501 845rp instructions ecomfort manuals |||

Instruction Sheet 102-105 **SR501**-845RP Universal Replacement Relay SUPERSEDES: 102-105 October 15, 2005 Plant ID# 9300-1048 EFFECTIVE: March 1, 2006 Features: Universal Replaceability Indicator Lights Snap-in PC Board to Existing Enclosure Simplified Wiring Fully Enclosed Snap-Out Relay 100 Fac...

 lang:en score:56 filesize: 45.7 K page_count: 2 document date: 2011-12-27

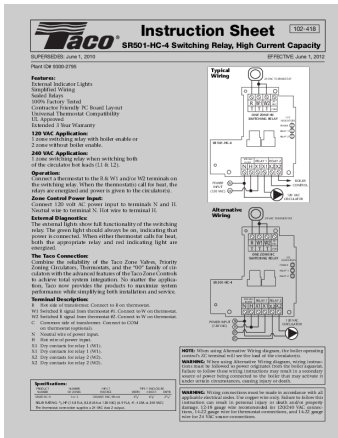


[pdf] User Manual Warranty

SR501 IN SH 102 169 W FUSES taco sr501 hc switching relay instruction manual ecomfort manuals |||

Instruction Sheet 102-418 **SR501**-HC-4 Switching Relay, High Current Capacity
SUPERSEDES: June 1, 2010 EFFECTIVE: June 1, 2012 Plant ID# 9300-2795 Features:
External Indicator Lights Simplified Wiring Sealed Relays 100 Factory Tested Contractor
Friendly PC Board Layout Universal Thermostat Compat...

 lang:en score:55 filesize: 191.77 K page_count: 2 document date: 2012-11-27

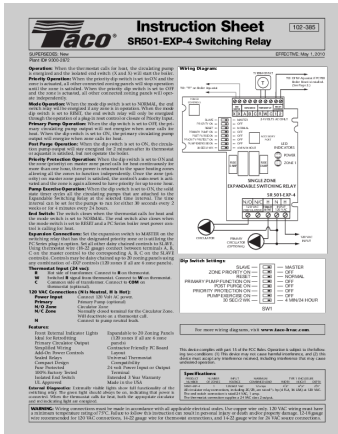


[pdf] User Manual

102 385 SR501 EXP NEW UL FCC Vincent Viola taco sr501 exp switching relay instruction manual

powerequipmentdirect manuals |||

Instruction Sheet **SR501**-EXP-4 Switching Relay 102-385 SUPERSEDES: New Plant ID#
9300-2872 EFFECTIVE: May 1, 2010 Operation: When the thermostat calls for heat, the
circulating pump is energized and the isolated end switch X and X will start the boiler. Priority
Operation: When the priority di...

 lang:en score:54 filesize: 111.57 K page_count: 2 document date: 2012-03-15

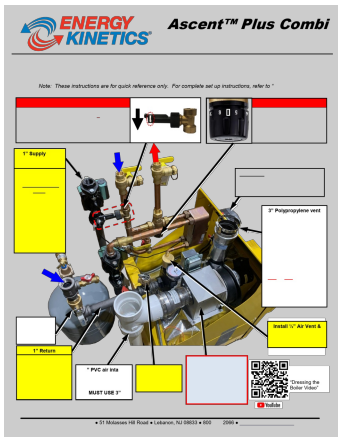

Energy Kinetics Ascent Plus Combi Quick Installation Guide

A comprehensive quick installation guide for the Energy Kinetics Ascent Plus Combi boiler,
covering setup, wiring, and safety checks.

lang:en score:49 filesize: 1.52 M page_count: 5 document date: 2023-05-26

The All New . . .
TACO ZONE CONTROLS WIRING GUIDE

	Pages
Switching Relays – Single Zone Wiring	2 - 4
Switching Relays – 801 Boiler Wiring Safety Notice	5
Switching Relays – 808 EXP Connected Together with Priority	6 - 8
Switching Relays – EXP Connected Together with Priority	10 - 13
Switching Relays – Multiple Indirect Hot Water Heaters	14 - 15
Switching Relays – EXP Connected to Reset Controls (PCT101, T102 & T103)	16 - 27
Zone Valve Controls – 808 EXP Connected Together with Priority	28 - 32
Zone Valve Controls – EXP Connected Together with Priority	33 - 36
Zone Valve Controls – Connected to Reset Controls (PCT101, T102 & T103)	37 - 44
Hydra Air Fan Controls (HAFS 201)	45 - 47
New Expandable Zone Control – Connected to Older Expandable Zone Control	48 - 50
Specialty Thermostat and Zone Valve Wiring	51 - 58
Outdoor Mixing Block	60 - 61
X-Pump Block	62 - 64
Series Mixing Valves	65 - 68
Low Water Cutoffs and Electric Water Feeders	67 - 82
Aquastat Wiring	83 - 85
Instruction Sheets	86 - 102
Standard Terms and Definitions	103
Zone Controls Cross Reference	104 - 105

Do it once.
Do it right. **Taco**

© Taco Catalog No. 100-92
Revised Date November 27, 2014
Supersedes Date September 20, 2013

[pdf] Instructions Guide Diagram Catalog

Untitled Taco Marketing Account The All New TACO ZONE CONTROLS WIRING GUIDE When using Alternative Wiring diagram wiring instructions must be followed so power originates from the boiler aquastat Failure to follow these may result in a secondary source of being connected that activate it under certain circumstances causing injury or death Guide taco hvac FileLibrary

The All New . . . TACO ZONE CONTROLS WIRING GUIDE Switching Relays Single Zone Wiring Switching R ... edes Date: September 20, 2013 TACO Zone Control Product Information Switching Relays Product No. **SR501-4 SR501-HC-4 SR501-OR-4** SR502-4 SR503-4 SR504-4 SR506-4 Description 1 Zone Switching Relay 1 ...
lang:en score:44 filesize: 4.96 M page_count: 107 document date: 2019-10-21

Instruction Sheet
Comfort 808 EXP 4-20mA Control Relay with External Power

LIMITED WARRANTY STATEMENT

Do it Once, Do it Right.

[pdf] Installation Guide Instructions

SR501 IN SH 102 169 W FUSES Taco OR 4 Install Instructions s3 supplyhouse product files
ond sensor can be placed alongside the one to be tested and the readings compared. First measure the ... 2,045 160 71 1,689 170 77 1,403 180 82 1,172 190 88 983 200 93 829
TECHNICAL DATA: **SR501-OR** Boiler Reset Control Relay: Control: Enclosure: Dimensions:
Approvals: Power Supply: Micr...
lang:en score:43 filesize: 237.97 K page_count: 2 document date: 2013-04-24

SR501-5 SWITCHING RELAY

FEATURES:
External Indicator Lights
Universal Compatibility
Simple PC Board
Simplified Wiring
Sealed Relay
Free Protected Contacts
100% Factory Tested
Connector Friendly PC Board Layout
Universal Terminal Compatibility
Extended 3 Year Warranty

OPERATION:
Control is a 24Vdc signal to the "I" terminals on the switching relay. When the terminals are shorted, the relay will energize and power is given to the indicator light.

POWER SUPPLY:
Control is a 24Vdc signal to the "I" terminals on the switching relay. When the terminals are shorted, the relay will energize and power is given to the indicator light.

WARRANTY:
The product is warranted for 3 years from the date of purchase. The warranty is void if the product is not used in accordance with the instructions.

TECHNICAL SPECIFICATIONS:

PRODUCT NUMBER	INPUT	OUTPUT	TYPE 1 ENCLOSURE
SR501-5	120VAC	120VAC	120VAC

For information on Taco Switching Relays (SR) including ratings, wiring diagrams, and other information, visit www.taco.com.

[pdf]

SR501 5 Instruction Sheet 2025 06 09 Taco IOM 102 570tacocomfort documents FileLibrary 570 |||
InsIntrsutcruticotnioSnhSeheet et **SR501-5 SWITCHING RELAY**
UPERSEUDPESR:SMEDarEcSh:1M, a2r0c1h31, 2013 lant IDP#la9n3t0I0D-#28963500-2865
SR5S0R15-ISn40Rs15St-0wr41u-
i4StccSwtwhiioittncnchghinSiRgnheRgEeeIFaRIFaeEyyeCiTElIVFaFEE:yCDT e1cIV0el2EmS-
n:3bDR7e5ser5c2et00mr, 1bl2un-e04rs1Sc23tr0hSu,tewc2i...
lang:en score:41 filesize: 630.28 K page_count: 2 document date: 2025-06-09

Instruction Sheet
SR501-HC-4 Switching Relay, High Current Capacity

FEATURES:
External Indicator Lights
Universal Compatibility
Simple PC Board
Simplified Wiring
Sealed Relay
Free Protected Contacts
100% Factory Tested
Connector Friendly PC Board Layout
Universal Terminal Compatibility
Extended 3 Year Warranty

OPERATION:
Control is a 24Vdc signal to the "I" terminals on the switching relay. When the terminals are shorted, the relay will energize and power is given to the indicator light.

POWER SUPPLY:
Control is a 24Vdc signal to the "I" terminals on the switching relay. When the terminals are shorted, the relay will energize and power is given to the indicator light.

WARRANTY:
The product is warranted for 3 years from the date of purchase. The warranty is void if the product is not used in accordance with the instructions.


TECHNICAL SPECIFICATIONS:

PRODUCT NUMBER	INPUT	OUTPUT	TYPE 1 ENCLOSURE
SR501-HC-4	120VAC	120VAC	120VAC

For information on Taco Switching Relays (SR) including ratings, wiring diagrams, and other information, visit www.taco.com.

[pdf] Installation Guide Instructions Warranty

 SR501 IN SH 102 169 W FUSES Taco HC 4 Install Instructions s3 supplyhouse product files
Instruction Sheet 102-418 **SR501-HC-4** Switching Relay, High Current Capacity
SUPERSEDES: March 1, 2013 Plant ID# 9300-2795 EFFECTIVE: December 20, 2013
Features: External Indicator Lights Typical Wiring: See NOTE 1 Alternative Wiring: See NOTE 1 Simplified Wiring Sealed Relays 24 VAC THERMO...
lang:en score:40 filesize: 234.06 K page_count: 2 document date: 2014-05-22

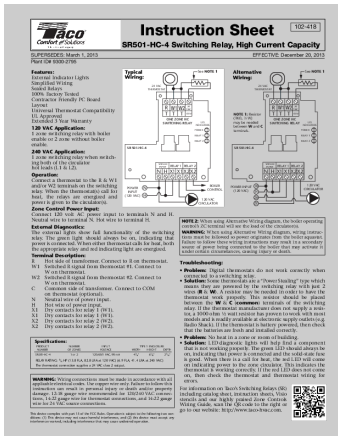

[pdf] Guide Warranty Catalog

SR501 IN SH 102 169 W FUSES TACO HVAC SupplyHouse Taco Inc will repair or replace without charge at the company s option any product part which is proven defective under normal use within three 3 years from date of start up For information on Switching Relays SR including catalog sheet instruction sheets Visio stencils and our highly praised Zone Controls Wiring Guide 418 taco hvac FileLibrary

Instruction Sheet 102-418 **SR501**-HC-4 Switching Relay, High Current Capacity

SUPERSEDES: March 1, 2013 Plant ID# 9300-2795 EFFECTIVE: December 20, 2013

Features: External Indicator Lights Typical Wiring: See NOTE 1 Alternative Wiring: See NOTE 1 Simplified Wiring Sealed Relays 24 VAC THERMO...

lang:en **score:39** filesize: 602.24 K page_count: 2 document date: 2015-11-16




[pdf] Installation Guide Specifications Dimension Guide Warranty Borchure Catalog

taco sr501 or fuelmizer switching relay brochure ecomfort manuals |||

Electronic Controls The FuelMizerTM **SR501**-OR is a microprocessor-based control designed to regulate the supply water temperature of a single boiler, based on the outdoor temperature.The FuelMizer is a boiler reset control and switching relay in one unit; it is ideal for retrofit application, but m...

 lang:en **score:39** filesize: 1.54 M page_count: 2 document date: 2012-07-25

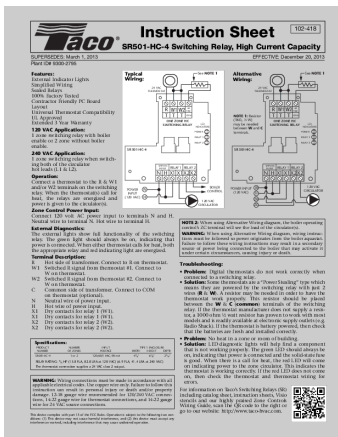

[pdf] User Manual Warranty

TACO SR501 HC 4 01 MANUAL Manual Hub drive google file d 1NrlYgQUY7VZUgI0XURmcJwFDcoo9ZOz5 preview |||

Instruction Sheet 102-418 **SR501**-HC-4 Switching Relay, High Current Capacity

SUPERSEDES: March 1, 2013 Plant ID# 9300-2795 EFFECTIVE: December 20, 2013

Features: External Indicator Lights Typical Wiring: See NOTE 1 Alternative Wiring: See NOTE 1 Simplified Wiring Sealed Relays 24 VAC THERMO...

lang:en **score:39** filesize: 996.31 K page_count: 2 document date: 2023-10-27

The All New . . . TACO ZONE CONTROLS WIRING GUIDE

	Pages
Switching Relays - Single Zone Wiring	2 - 4
Switching Relays - 01 Boiler Wiring Safety Notice	5 - 8
Switching Relays - R505 EXP Connected Together with Priority	8 - 9
Switching Relays - EXP Connected Together with Priority	10 - 13
Switching Relays - Multiple Indirect Hot Water Heaters	14 - 15
Switching Relays - EXP Connected to Reset Controls (PCT50, T02 & T05)	16 - 27
Zone Valve Controls - R505 EXP Connected Together with Priority	28 - 32
Zone Valve Controls - EXP Connected Together with Priority	33 - 36
Zone Valve Controls - Connected to Reset Controls (PCT50, T02 & T05)	37 - 44
Relay Air Fan Controls (MFGS 001)	45 - 47
Non-Expendable Zone Control - Connected to Order Expendable Zone Control	48 - 50
Specialty Thermostat and Zone Valve Wiring	51 - 59
Radiant Mixing Block	60 - 61
X-Pump Block	62 - 64
Series Mixing Valves	65 - 66
Low Water Safety and Electric Water Feeders	67 - 68
Apparatus Wiring	69 - 80
Instruction Sheets	80 - 82
Standard Terms and Definitions	83 - 83
Zone Controls Cross Reference	104 - 105

Do it once.
Do it right. **TACO**

© Taco Catalog No.100-02

Effective Date: November 27, 2014
Supersedes Date: September 20, 2013

[pdf] Installation Guide Guide Catalog

SR501 Switching Relay Installation Guide Taco Comfort Solutions 4 687752857573 0687752857573 929932

0cedd6ce 02d7 4f64 990e d336d6e2e4cd images thdstatic catalog Images 0c |||

The All New . . . TACO ZONE CONTROLS WIRING GUIDE Switching Relays Single Zone

Wiring Switching R ... edes Date: September 20, 2013 TACO Zone Control Product


Information Switching Relays Product No. **SR501**-4 **SR501**-HC-4 **SR501**-OR-4 SR502-4

SR503-4 SR504-4 SR506-4 Description 1 Zone Switching Relay 1 ...

lang:en **score:39** filesize: 5.95 M page_count: 107 document date: 2023-03-22

ZONE CONTROLS WIRE GUIDE 3 08 TACO HVAC The All New WIRING Zone controls wire guide alternative wiring one zone hc switchingl relay sr 501 4 led indicators r w1 24 vac thermostat w2 com tt t nhx1 1 2 120 input circulator 6 Valve Control with Priority Add On Power Controls For use all EXP Product No Description PC700 Boiler Reset Nov 27 2014 — Manual Operation Switch X Pump Block Single Input from Heat Source Output to System HEAT SOURCE Supply Sensor Exp Line Cord Variable Speed Circulator Heating Circulator Do not connect feeder a manual reset LWCO Note on switch position 100 92 Taco ZC Wiring Guide taco hvac FileLibrary media blueridgecompany documents flopro 80

 lang:en score:36 filesize: 6.41 M page_count: 107 document date: 2014-11-25

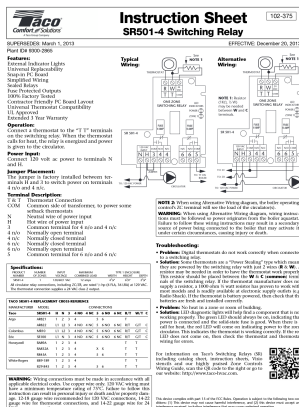

Detailed instruction sheet for the Taco SR501-4 Switching Relay, covering features, operation, wiring diagrams, specifications, troubleshooting, and warranty information for HVAC professionals.

TACO Zone Control Pump Information

Switching Relays	Driveway
SR01-10	1 Zone Switching Relay
SR01-10C4	1 or 2 Zone Switching Relays High Current Capacity
SR01-10C4-2	1 Zone Switching Relay with On/Off Indicator
SR02-4	2 Zone Switching Relays with Priority
SR02-4-2	2 Zone Switching Relays with Priority
SR03-4	3 Zone Switching Relays with Priority
SR03-4-2	3 Zone Switching Relays with Priority

Expendable Switching Relays - Expendable to 120 Zones (20 Zoning Packs)	
SR01-EXP-1	1 Zone Switching Relay
SR02-EXP-4	2 Zone Switching Relays with Priority
SR03-EXP-4	3 Zone Switching Relays with Priority
SR04-EXP-4	4 Zone Switching Relays with Priority
Zone Valve Controls	
ZoneVal-M4	**Driveway**
ZV0C-M4-1	1 Zone Valve Control with Priority
ZV0C-M4-2	2 Zone Valve Control with Priority
ZV0C-M4-4	4 Zone Valve Control with Priority
Expendable Zone Valve Controls - Expendable to 120 Zones (20 Zoning Packs)	
ZoneVal-EXP-M4	**Driveway**
ZV0C-EXP-4	4 Zone Valve Control with Priority
Add-On Power Controls (For use with all EXP controls)	
PC70	70Watt Power Control
PC75	75Watt Power Control
PC80	80Watt Power Control
PC85	85Watt Power Control
PC90	90Watt Power Control
PC95	95Watt Power Control
PC100	100Watt Power Control
PC110	110Watt Power Control
PC120	120Watt Power Control
PC130	130Watt Power Control
PC140	140Watt Power Control
PC150	150Watt Power Control
PC160	160Watt Power Control
PC170	170Watt Power Control
PC180	180Watt Power Control
PC190	190Watt Power Control
PC200	200Watt Power Control
PC210	210Watt Power Control
PC220	220Watt Power Control
PC230	230Watt Power Control
PC240	240Watt Power Control
PC250	250Watt Power Control
PC260	260Watt Power Control
PC270	270Watt Power Control
PC280	280Watt Power Control
PC290	290Watt Power Control
PC300	300Watt Power Control
PC310	310Watt Power Control
PC320	320Watt Power Control
PC330	330Watt Power Control
PC340	340Watt Power Control
PC350	350Watt Power Control
PC360	360Watt Power Control
PC370	370Watt Power Control
PC380	380Watt Power Control
PC390	390Watt Power Control
PC400	400Watt Power Control
PC410	410Watt Power Control
PC420	420Watt Power Control
PC430	430Watt Power Control
PC440	440Watt Power Control
PC450	450Watt Power Control
PC460	460Watt Power Control
PC470	470Watt Power Control
PC480	480Watt Power Control
PC490	490Watt Power Control
PC500	500Watt Power Control
PC510	510Watt Power Control
PC520	520Watt Power Control
PC530	530Watt Power Control
PC540	540Watt Power Control
PC550	550Watt Power Control
PC560	560Watt Power Control
PC570	570Watt Power Control
PC580	580Watt Power Control
PC590	590Watt Power Control
PC600	600Watt Power Control
PC610	610Watt Power Control
PC620	620Watt Power Control
PC630	630Watt Power Control
PC640	640Watt Power Control
PC650	650Watt Power Control
PC660	660Watt Power Control
PC670	670Watt Power Control
PC680	680Watt Power Control
PC690	690Watt Power Control
PC700	700Watt Power Control
PC710	710Watt Power Control
PC720	720Watt Power Control
PC730	730Watt Power Control
PC740	740Watt Power Control
PC750	750Watt Power Control
PC760	760Watt Power Control
PC770	770Watt Power Control
PC780	780Watt Power Control
PC790	790Watt Power Control
PC800	800Watt Power Control
PC810	810Watt Power Control
PC820	820Watt Power Control
PC830	830Watt Power Control
PC840	840Watt Power Control
PC850	850Watt Power Control
PC860	860Watt Power Control
PC870	870Watt Power Control
PC880	880Watt Power Control
PC890	890Watt Power Control
PC900	900Watt Power Control
PC910	910Watt Power Control
PC920	920Watt Power Control
PC930	930Watt Power Control
PC940	940Watt Power Control
PC950	950Watt Power Control
PC960	960Watt Power Control
PC970	970Watt Power Control
PC980	980Watt Power Control
PC990	990Watt Power Control
PC1000	1000Watt Power Control
PC1010	1010Watt Power Control
PC1020	1020Watt Power Control
PC1030	1030Watt Power Control
PC1040	1040Watt Power Control
PC1050	1050Watt Power Control
PC1060	1060Watt Power Control
PC1070	1070Watt Power Control
PC1080	1080Watt Power Control
PC1090	1090Watt Power Control
PC1100	1100Watt Power Control
PC1110	1110Watt Power Control
PC1120	1120Watt Power Control
PC1130	1130Watt Power Control
PC1140	1140Watt Power Control
PC1150	1150Watt Power Control
PC1160	1160Watt Power Control
PC1170	1170Watt Power Control
PC1180	1180Watt Power Control
PC1190	1190Watt Power Control
PC1200	1200Watt Power Control
PC1210	1210Watt Power Control
PC1220	1220Watt Power Control
PC1230	1230Watt Power Control
PC1240	1240Watt Power Control
PC1250	1250Watt Power Control
PC1260	1260Watt Power Control
PC1270	1270Watt Power Control
PC1280	1280Watt Power Control
PC1290	1290Watt Power Control
PC1300	1300Watt Power Control
PC1310	1310Watt Power Control
PC1320	1320Watt Power Control
PC1330	1330Watt Power Control
PC1340	1340Watt Power Control
PC1350	1350Watt Power Control
PC1360	1360Watt Power Control
PC1370	1370Watt Power Control
PC1380	138

ZONE CONTROLS WIRE GUIDE 3 08 Taco 00010 1 106 OTHER1 images tradeservice ATTACHMENTS
DIR100257 |||

lang:en score:36 filesize: 47.13 K page_count: 2 document date: 2019-08-01

The All New . . .	
TACO ZONE CONTROLS WIRING GUIDE	
	Page
Switching Relays - Single Zone Wiring	2 - 4
Switching Relays - Oil Boiler Wiring Safety Notice	5 - 9
Switching Relays - HEN EXP Connected Together with Priority	6 - 9
Switching Relays - EXP Connected Together with Priority	10 - 13
Switching Relays - Multiple Indirect Heat Boiler Relays	14 - 15
Switching Relays - EXP Connected to Reset Controls (PCT06, T02 & T05)	16 - 27
Zone Valve Controls - HEN EXP Connected Together with Priority	28 - 32
Zone Valve Controls - EXP Connected Together with Priority	33 - 36
Zone Valve Controls - Connected to Reset Controls (PCT06, T02 & T05)	37 - 44
Hydro Air Fan Controls (HAFS 101 & 201)	45 - 48
New Expandable Zone Control - Connected to Older Expandable Zone Control	50 - 51
Specialty Thermostat and Zone Valve Wiring	52 - 61
Radiant Mixing Block	62 - 63
X-Pump Block	64 - 66
Series Mixing Valves	67 - 68
Low Water Cutoffs and Electric Water Feeders	69 - 84
Aquastat Wiring	85 - 91
Instruction Sheets	92 - 94
Standard Terms and Definitions	95 - 103
Zone Controls Cross Reference	95 - 97

Do it once.
Do it right.



* Taco Catalog No. 100-92

Effective Date: August 1, 2010
Supersedes: Old Form

TACO Zone Control Product Information	
Switching Relays	Description
SR501-4	1 Zone Switching Relay
SR501-HC-4	1 or 2 Zone Switching Relay High Current Capacity
SR501-OR-4	1 Zone Switching Relay with Outdoor Reset
SR503-4	1 Zone Switching Relay with Priority
SR504-4	2 Zone Switching Relay with Priority
SR505-4	2 Zone Switching Relay with Priority
SR506-4	2 Zone Switching Relay with Priority
Expandable Switching Relays - Expandable to 128 Zones (28 Zoning Panels)	Description
SR501-EXP-4	1 Zone Switching Relay
SR503-EXP-4	2 Zone Switching Relay with Priority
SR504-EXP-4	2 Zone Switching Relay with Priority
Zone Valve Controls	Description
ZVC02-4	2 Zone Valve Control with Priority
ZVC03-4	2 Zone Valve Control with Priority
ZVC04-4	2 Zone Valve Control with Priority
ZVC05-4	2 Zone Valve Control with Priority
ZVC06-4	2 Zone Valve Control with Priority
Expandable Zone Valve Controls - Expandable to 128 Zones (28 Zoning Panels)	Description
ZVC03-EXP-4	2 Zone Valve Control with Priority
ZVC04-EXP-4	2 Zone Valve Control with Priority
ZVC05-EXP-4	2 Zone Valve Control with Priority
Add-On Power Controls (For use with all EXP controls)	Description
PC010	Boiler Reset Control
PC015	3 Stage Boiler Reset Control
PC018	Variable Speed Pump Injection Mixing Control
Fan Controls	Description
HAFS201-4	Hydro Air Fan Control with Optional Time Delay

Do it once.
Do it right.



Instruction Sheet

SR501-EXP-4 Switching Relay

102-385

WARNING: Before you start any work on the line, the circulating pump must be stopped. Do not start the pump until the system is fully recharged and the pressure is normal. Do not start the pump until the system is fully recharged and the pressure is normal. Do not start the pump until the system is fully recharged and the pressure is normal.

Operation: When the thermostat calls for heat, the circulating pump is energized and the isolated end switch X and X will start the boiler. Priority Operation: When the priority dip switch is set to priority, the circulating pump is energized and the isolated end switch X and X will start the boiler. Priority Operation: When the priority dip switch is set to priority, the circulating pump is energized and the isolated end switch X and X will start the boiler.

Wiring Diagram: The wiring diagram shows the connections for the SR501-EXP-4 Switching Relay. It includes terminals for Zone 1, Zone 2, Zone 3, Zone 4, Zone 5, Zone 6, Zone 7, Zone 8, Zone 9, Zone 10, Zone 11, Zone 12, Zone 13, Zone 14, Zone 15, Zone 16, Zone 17, Zone 18, Zone 19, Zone 20, Zone 21, Zone 22, Zone 23, Zone 24, Zone 25, Zone 26, Zone 27, Zone 28, Zone 29, Zone 30, Zone 31, Zone 32, Zone 33, Zone 34, Zone 35, Zone 36, Zone 37, Zone 38, Zone 39, Zone 40, Zone 41, Zone 42, Zone 43, Zone 44, Zone 45, Zone 46, Zone 47, Zone 48, Zone 49, Zone 50, Zone 51, Zone 52, Zone 53, Zone 54, Zone 55, Zone 56, Zone 57, Zone 58, Zone 59, Zone 60, Zone 61, Zone 62, Zone 63, Zone 64, Zone 65, Zone 66, Zone 67, Zone 68, Zone 69, Zone 70, Zone 71, Zone 72, Zone 73, Zone 74, Zone 75, Zone 76, Zone 77, Zone 78, Zone 79, Zone 80, Zone 81, Zone 82, Zone 83, Zone 84, Zone 85, Zone 86, Zone 87, Zone 88, Zone 89, Zone 90, Zone 91, Zone 92, Zone 93, Zone 94, Zone 95, Zone 96, Zone 97, Zone 98, Zone 99, Zone 100, Zone 101, Zone 102, Zone 103, Zone 104, Zone 105, Zone 106, Zone 107, Zone 108, Zone 109, Zone 110, Zone 111, Zone 112, Zone 113, Zone 114, Zone 115, Zone 116, Zone 117, Zone 118, Zone 119, Zone 120, Zone 121, Zone 122, Zone 123, Zone 124, Zone 125, Zone 126, Zone 127, Zone 128, Zone 129, Zone 130, Zone 131, Zone 132, Zone 133, Zone 134, Zone 135, Zone 136, Zone 137, Zone 138, Zone 139, Zone 140, Zone 141, Zone 142, Zone 143, Zone 144, Zone 145, Zone 146, Zone 147, Zone 148, Zone 149, Zone 150, Zone 151, Zone 152, Zone 153, Zone 154, Zone 155, Zone 156, Zone 157, Zone 158, Zone 159, Zone 160, Zone 161, Zone 162, Zone 163, Zone 164, Zone 165, Zone 166, Zone 167, Zone 168, Zone 169, Zone 170, Zone 171, Zone 172, Zone 173, Zone 174, Zone 175, Zone 176, Zone 177, Zone 178, Zone 179, Zone 180, Zone 181, Zone 182, Zone 183, Zone 184, Zone 185, Zone 186, Zone 187, Zone 188, Zone 189, Zone 190, Zone 191, Zone 192, Zone 193, Zone 194, Zone 195, Zone 196, Zone 197, Zone 198, Zone 199, Zone 200, Zone 201, Zone 202, Zone 203, Zone 204, Zone 205, Zone 206, Zone 207, Zone 208, Zone 209, Zone 210, Zone 211, Zone 212, Zone 213, Zone 214, Zone 215, Zone 216, Zone 217, Zone 218, Zone 219, Zone 220, Zone 221, Zone 222, Zone 223, Zone 224, Zone 225, Zone 226, Zone 227, Zone 228, Zone 229, Zone 230, Zone 231, Zone 232, Zone 233, Zone 234, Zone 235, Zone 236, Zone 237, Zone 238, Zone 239, Zone 240, Zone 241, Zone 242, Zone 243, Zone 244, Zone 245, Zone 246, Zone 247, Zone 248, Zone 249, Zone 250, Zone 251, Zone 252, Zone 253, Zone 254, Zone 255, Zone 256, Zone 257, Zone 258, Zone 259, Zone 260, Zone 261, Zone 262, Zone 263, Zone 264, Zone 265, Zone 266, Zone 267, Zone 268, Zone 269, Zone 270, Zone 271, Zone 272, Zone 273, Zone 274, Zone 275, Zone 276, Zone 277, Zone 278, Zone 279, Zone 280, Zone 281, Zone 282, Zone 283, Zone 284, Zone 285, Zone 286, Zone 287, Zone 288, Zone 289, Zone 290, Zone 291, Zone 292, Zone 293, Zone 294, Zone 295, Zone 296, Zone 297, Zone 298, Zone 299, Zone 300, Zone 301, Zone 302, Zone 303, Zone 304, Zone 305, Zone 306, Zone 307, Zone 308, Zone 309, Zone 310, Zone 311, Zone 312, Zone 313, Zone 314, Zone 315, Zone 316, Zone 317, Zone 318, Zone 319, Zone 320, Zone 321, Zone 322, Zone 323, Zone 324, Zone 325, Zone 326, Zone 327, Zone 328, Zone 329, Zone 330, Zone 331, Zone 332, Zone 333, Zone 334, Zone 335, Zone 336, Zone 337, Zone 338, Zone 339, Zone 340, Zone 341, Zone 342, Zone 343, Zone 344, Zone 345, Zone 346, Zone 347, Zone 348, Zone 349, Zone 350, Zone 351, Zone 352, Zone 353, Zone 354, Zone 355, Zone 356, Zone 357, Zone 358, Zone 359, Zone 360, Zone 361, Zone 362, Zone 363, Zone 364, Zone 365, Zone 366, Zone 367, Zone 368, Zone 369, Zone 370, Zone 371, Zone 372, Zone 373, Zone 374, Zone 375, Zone 376, Zone 377, Zone 378, Zone 379, Zone 380, Zone 381, Zone 382, Zone 383, Zone 384, Zone 385, Zone 386, Zone 387, Zone 388, Zone 389, Zone 390, Zone 391, Zone 392, Zone 393, Zone 394, Zone 395, Zone 396, Zone 397, Zone 398, Zone 399, Zone 400, Zone 401, Zone 402, Zone 403, Zone 404, Zone 405, Zone 406, Zone 407, Zone 408, Zone 409, Zone 410, Zone 411, Zone 412, Zone 413, Zone 414, Zone 415, Zone 416, Zone 417, Zone 418, Zone 419, Zone 420, Zone 421, Zone 422, Zone 423, Zone 424, Zone 425, Zone 426, Zone 427, Zone 428, Zone 429, Zone 430, Zone 431, Zone 432, Zone 433, Zone 434, Zone 435, Zone 436, Zone 437, Zone 438, Zone 439, Zone 440, Zone 441, Zone 442, Zone 443, Zone 444, Zone 445, Zone 446, Zone 447, Zone 448, Zone 449, Zone 450, Zone 451, Zone 452, Zone 453, Zone 454, Zone 455, Zone 456, Zone 457, Zone 458, Zone 459, Zone 460, Zone 461, Zone 462, Zone 463, Zone 464, Zone 465, Zone 466, Zone 467, Zone 468, Zone 469, Zone 470, Zone 471, Zone 472, Zone 473, Zone 474, Zone 475, Zone 476, Zone 477, Zone 478, Zone 479, Zone 480, Zone 481, Zone 482, Zone 483, Zone 484, Zone 485, Zone 486, Zone 487, Zone 488, Zone 489, Zone 490, Zone 491, Zone 492, Zone 493, Zone 494, Zone 495, Zone 496, Zone 497, Zone 498, Zone 499, Zone 500, Zone 501, Zone 502, Zone 503, Zone 504, Zone 505, Zone 506, Zone 507, Zone 508, Zone 509, Zone 510, Zone 511, Zone 512, Zone 513, Zone 514, Zone 515, Zone 516, Zone 517, Zone 518, Zone 519, Zone 520, Zone 521, Zone 522, Zone 523, Zone 524, Zone 525, Zone 526, Zone 527, Zone 528, Zone 529, Zone 530, Zone 531, Zone 532, Zone 533, Zone 534, Zone 535, Zone 536, Zone 537, Zone 538, Zone 539, Zone 540, Zone 541, Zone 542, Zone 543, Zone 544, Zone 545, Zone 546, Zone 547, Zone 548, Zone 549, Zone 550, Zone 551, Zone 552, Zone 553, Zone 554, Zone 555, Zone 556, Zone 557, Zone 558, Zone 559, Zone 560, Zone 561, Zone 562, Zone 563, Zone 564, Zone 565, Zone 566, Zone 567, Zone 568, Zone 569, Zone 570, Zone 571, Zone 572, Zone 573, Zone 574, Zone 575, Zone 576, Zone 577, Zone 578, Zone 579, Zone 580, Zone 581, Zone 582, Zone 583, Zone 584, Zone 585, Zone 586, Zone 587, Zone 588, Zone 589, Zone 590, Zone 591, Zone 592, Zone 593, Zone 594, Zone 595, Zone 596, Zone 597, Zone 598, Zone 599, Zone 600, Zone 601, Zone 602, Zone 603, Zone 604, Zone 605, Zone 606, Zone 607, Zone 608, Zone 609, Zone 610, Zone 611, Zone 612, Zone 613, Zone 614, Zone 615, Zone 616, Zone 617, Zone 618, Zone 619, Zone 620, Zone 621, Zone 622, Zone 623, Zone 624, Zone 625, Zone 626, Zone 627, Zone 628, Zone 629, Zone 630, Zone 631, Zone 632, Zone 633, Zone 634, Zone 635, Zone 636, Zone 637, Zone 638, Zone 639, Zone 640, Zone 641, Zone 642, Zone 643, Zone 644, Zone 645, Zone 646, Zone 647, Zone 648, Zone 649, Zone 650, Zone 651, Zone 652, Zone 653, Zone 654, Zone 655, Zone 656, Zone 657, Zone 658, Zone 659, Zone 660, Zone 661, Zone 662, Zone 663, Zone 664, Zone 665, Zone 666, Zone 667, Zone 668, Zone 669, Zone 670, Zone 671, Zone 672, Zone 673, Zone 674, Zone 675, Zone 676, Zone 677, Zone 678, Zone 679, Zone 680, Zone 681, Zone 682, Zone 683, Zone 684, Zone 685, Zone 686, Zone 687, Zone 688, Zone 689, Zone 690, Zone 691, Zone 692, Zone 693, Zone 694, Zone 695, Zone 696, Zone 697, Zone 698, Zone 699, Zone 700, Zone 701, Zone 702, Zone 703, Zone 704, Zone 705, Zone 706, Zone 707, Zone 708, Zone 709, Zone 710, Zone 711, Zone 712, Zone 713, Zone 714, Zone 715, Zone 716, Zone 717, Zone 718, Zone 719, Zone 720, Zone 721, Zone 722, Zone 723, Zone 724, Zone 725, Zone 726, Zone 727, Zone 728, Zone 729, Zone 730, Zone 731, Zone 732, Zone 733, Zone 734, Zone 735, Zone 736, Zone 737, Zone 738, Zone 739, Zone 740, Zone 741, Zone 742, Zone 743, Zone 744, Zone 745, Zone 746, Zone 747, Zone 748, Zone 749, Zone 750, Zone 751, Zone 752, Zone 753, Zone 754, Zone 755, Zone 756, Zone 757, Zone 758, Zone 759, Zone 760, Zone 761, Zone 762, Zone 763, Zone 764, Zone 765, Zone 766, Zone 767, Zone 768, Zone 769, Zone 770, Zone 771, Zone 772, Zone 773, Zone 774, Zone 775, Zone 776, Zone 777, Zone 778, Zone 779, Zone 780, Zone 781, Zone 782, Zone 783, Zone 784, Zone 785, Zone 786, Zone 787, Zone 788, Zone 789, Zone 790, Zone 791, Zone 792, Zone 793, Zone 794, Zone 795, Zone 796, Zone 797, Zone 798, Zone 799, Zone 800, Zone 801, Zone 802, Zone 803, Zone 804, Zone 805, Zone 806, Zone 807, Zone 808, Zone 809, Zone 810, Zone 811, Zone 812, Zone 813, Zone 814, Zone 815, Zone 816, Zone 817, Zone 818, Zone 819, Zone 820, Zone 821, Zone 822, Zone 823, Zone 824, Zone 825, Zone 826, Zone 827, Zone 828, Zone 829, Zone 830, Zone 831, Zone 832, Zone 833, Zone 834, Zone 835, Zone 836, Zone 837, Zone 838, Zone 839, Zone 840, Zone 841, Zone 842, Zone 843, Zone 844, Zone 845, Zone 846, Zone 847, Zone 848, Zone 849, Zone 850, Zone 851, Zone 852, Zone 853, Zone 854, Zone 855, Zone 856, Zone 857, Zone 858, Zone 859, Zone 860, Zone 861, Zone 862, Zone 863, Zone 864, Zone 865, Zone 866, Zone 867, Zone 868, Zone 869, Zone 870, Zone 871, Zone 872, Zone 873, Zone 874, Zone 875, Zone 876, Zone 877, Zone 878, Zone 879, Zone 880, Zone 881, Zone 882, Zone 883, Zone 884, Zone 885, Zone 886, Zone 887, Zone 888, Zone 889, Zone 890, Zone 891, Zone 892, Zone 893, Zone 894, Zone 895, Zone 896, Zone 897, Zone 898, Zone 899, Zone 900, Zone 901, Zone 902, Zone 903, Zone 904, Zone 905, Zone 906, Zone 907, Zone 908, Zone 909, Zone 910, Zone 911, Zone 912, Zone 913, Zone 914, Zone 915, Zone 916, Zone 917, Zone 918, Zone 919, Zone 920, Zone 921, Zone 922, Zone 923, Zone 924, Zone 925, Zone 926, Zone 927, Zone 928, Zone 929, Zone 930, Zone 931, Zone 932, Zone 933, Zone 934, Zone 935, Zone 936, Zone 937, Zone 938, Zone 939, Zone 940, Zone 941, Zone 942, Zone 943, Zone 944, Zone 945, Zone 946, Zone 947, Zone 948, Zone 949, Zone 950, Zone 951, Zone 952, Zone 953, Zone 954, Zone 955, Zone 956, Zone 957, Zone 958, Zone 959, Zone 960, Zone 961, Zone 962, Zone 963, Zone 964, Zone 965, Zone 966, Zone 967, Zone 968, Zone 969, Zone 970, Zone 971, Zone 972, Zone 973, Zone 974, Zone 975, Zone 976, Zone 977, Zone 978, Zone 979, Zone 980, Zone 981, Zone 982, Zone 983, Zone 984, Zone 985, Zone 986, Zone 987, Zone 988, Zone 989, Zone 990, Zone 991, Zone 992, Zone 993, Zone 994, Zone 995, Zone 996, Zone 997, Zone 998, Zone 999, Zone 1000, Zone 1001, Zone 1002, Zone 1003, Zone 1004, Zone 1005, Zone 1006, Zone 1007, Zone 1008, Zone 1009, Zone 1010, Zone 1011, Zone 1012, Zone 1013, Zone 1014, Zone 1015, Zone 1016, Zone 1017, Zone 1018, Zone 1019, Zone 1020, Zone 1021, Zone 1022, Zone 1023, Zone 1024, Zone 1025, Zone 1026, Zone 1027, Zone 1028, Zone 1029, Zone 1030, Zone 1031, Zone 1032, Zone 1033, Zone 1034, Zone 1035, Zone 1036, Zone 1037, Zone 1038, Zone 1039, Zone 1040, Zone 1041, Zone 1042, Zone 1043, Zone 1044, Zone 1045, Zone 1046, Zone 1047, Zone 1048, Zone 1049, Zone 1050, Zone 1051, Zone 1052, Zone 1053, Zone 1054, Zone 1055, Zone 1056, Zone 1057, Zone 1058, Zone 1059, Zone 1060, Zone 1061, Zone 1062, Zone 1063, Zone 1064, Zone 1065, Zone 1066, Zone 1067, Zone 1068, Zone 1069, Zone 1070, Zone 1071, Zone 1072, Zone 1073, Zone 1074, Zone 1075, Zone 1076, Zone 1077, Zone 1078, Zone 1079, Zone 1080, Zone 1081, Zone 1082, Zone 1083, Zone 1084, Zone 1085, Zone 1086, Zone 1087, Zone 1088, Zone 1089, Zone 1090, Zone 1091, Zone 1092, Zone 1093, Zone 1094, Zone 1095, Zone 1096, Zone 1097, Zone 1098, Zone 1099, Zone 1100, Zone 1101, Zone 1102, Zone 1103, Zone 1104, Zone 1105, Zone 1106, Zone 1107, Zone 1108, Zone 1109, Zone 1110, Zone 1111, Zone 1112, Zone 1113, Zone 1114, Zone 1115, Zone 1116, Zone 1117, Zone 1118, Zone 1119, Zone 1120, Zone 1121, Zone 1122, Zone 1123, Zone 1124, Zone 1125, Zone 1126, Zone 1127, Zone 1128, Zone 1129, Zone 1130, Zone 1131, Zone 1132, Zone 1133, Zone 1134, Zone 1135, Zone 1136, Zone 1137, Zone 1138, Zone 1139, Zone 1140, Zone 1141, Zone 1142, Zone 1143, Zone 1144, Zone 1145, Zone 1146, Zone 1147, Zone 1148, Zone 1149, Zone 1150, Zone 1151, Zone 1152, Zone 1153, Zone 1154, Zone 1155, Zone 1156, Zone 1157, Zone 1158, Zone 1159, Zone 1160, Zone 1161, Zone 1162, Zone 1163, Zone 1164, Zone 1165, Zone 1166, Zone 1167, Zone 1168, Zone 1169, Zone 1170, Zone 1171, Zone 1172, Zone 1173, Zone 1174, Zone 1175, Zone 1176, Zone 1177, Zone 1178, Zone 1179, Zone 1180, Zone 1181, Zone 1182, Zone 1183, Zone 1184, Zone 1185, Zone 1186, Zone 1187, Zone 1188, Zone 1189, Zone 1190, Zone 1191, Zone 1192, Zone 1193, Zone 1194, Zone 1195, Zone 1196, Zone 1197, Zone 1198, Zone 1199, Zone 1200, Zone 1201, Zone 1202, Zone 1203, Zone 1204, Zone 1205, Zone 1206, Zone 1207, Zone 1208, Zone 1209, Zone 1210, Zone 1211, Zone 1212, Zone 1213, Zone 1214, Zone 1215, Zone 1216, Zone 1217, Zone 1218, Zone 1219, Zone 1220, Zone 1221, Zone 1222, Zone 1223, Zone 1224, Zone 1225, Zone 1226, Zone 1227, Zone 1228, Zone 1229, Zone 1230, Zone 1231, Zone 1232, Zone 1233, Zone 1234, Zone 1235, Zone 1236, Zone 1237, Zone 1238, Zone 1239, Zone 1240, Zone 1241, Zone 1242, Zone 1243, Zone 1244, Zone 1245, Zone 1246, Zone 1247, Zone 1248, Zone 1249, Zone 1250, Zone 1251, Zone 1252, Zone 1253, Zone 1254, Zone 1255, Zone 1256, Zone 1257, Zone 1258, Zone 1259, Zone 1260, Zone 1261, Zone 1262, Zone 1263, Zone 1264, Zone 1265, Zone 1266, Zone 1267, Zone 1268, Zone 1269, Zone 1270, Zone 1271, Zone 1272, Zone 1273, Zone 1274, Zone 1275, Zone 1276, Zone 1277, Zone 1278, Zone 1279, Zone 1280, Zone 1281, Zone 1282, Zone 1283, Zone 1284, Zone 1285, Zone 1286, Zone 1287, Zone 1288, Zone 1289, Zone 1290, Zone 1291, Zone 1292, Zone 1293, Zone 1294, Zone 1295, Zone 1296, Zone 1297, Zone 1298, Zone 1299, Zone 1300, Zone 1301, Zone 1302, Zone 1303, Zone 1304, Zone 1305, Zone 1306, Zone 1307, Zone 1308, Zone 1309, Zone 1310, Zone 1311, Zone 1312, Zone 1313, Zone 1314, Zone 1315, Zone 1316, Zone 1317, Zone 1318, Zone 1319, Zone 1320, Zone 1321, Zone 1322, Zone 1323, Zone 1324, Zone 1325, Zone 1326, Zone 1327, Zone 1328, Zone 1329, Zone 1330, Zone 1331, Zone 1332, Zone 1333, Zone 1334, Zone 1335, Zone 1336, Zone 1337, Zone 1338, Zone 1339, Zone 1340, Zone 1341, Zone 1342, Zone 1343, Zone 1344, Zone 1345, Zone 1346, Zone 1347, Zone 1348, Zone 1349, Zone 1350, Zone 1351, Zone 1352, Zone 1353, Zone 1354, Zone 1355, Zone 1356, Zone 1357, Zone 1358, Zone 1359, Zone 1360, Zone 1361, Zone 1362, Zone 1363, Zone 1364, Zone 1365, Zone 1366, Zone 1367, Zone 1368, Zone 1369, Zone 1370, Zone 1371, Zone 1372, Zone 1373, Zone 1374, Zone 1375, Zone 1376, Zone 1377, Zone 1378, Zone 1379, Zone 1380, Zone 1381, Zone 1382, Zone 1383, Zone 1384, Zone 1385, Zone 1386, Zone 1387, Zone 1388, Zone 1389, Zone 1390, Zone 1391, Zone 1392, Zone 1393, Zone 1394, Zone 1395, Zone 1396, Zone 1397, Zone 1398, Zone 1399, Zone 1400, Zone 1401, Zone 1402, Zone 1403, Zone 1404, Zone 1405, Zone 1406, Zone 1407, Zone 1408, Zone 1409, Zone 1410, Zone 1411, Zone 1412, Zone 1413, Zone 1414, Zone 1415, Zone 1416, Zone 1417, Zone 1418, Zone 1419, Zone 1420, Zone 1421, Zone 1422, Zone 1423, Zone 1424, Zone 1425, Zone 1426, Zone 1427, Zone 1428, Zone 1429, Zone 1430, Zone 1431, Zone 1432, Zone 1433, Zone 1434, Zone 1435, Zone 1436, Zone 1437, Zone 1438, Zone 1439, Zone 1440, Zone 1441, Zone 1442, Zone 1443, Zone 1444, Zone 1445, Zone 1446, Zone 1447, Zone 1448, Zone 1449, Zone 1450, Zone 1451, Zone 1452, Zone 1453, Zone 1454, Zone 1455, Zone 1456, Zone 1457, Zone 1458, Zone 1459, Zone 1460, Zone 1461, Zone 1462, Zone 1463, Zone 1464, Zone 1465, Zone 1466, Zone 1467, Zone 1468, Zone 1469, Zone 1470, Zone 1471, Zone 1472, Zone 1473, Zone 1474, Zone 1475, Zone 1476, Zone 1477, Zone 1478, Zone 1479, Zone 1480, Zone 1481, Zone 1482, Zone 1483, Zone 1484, Zone 1485, Zone 1486, Zone 1487, Zone 1488, Zone 1489, Zone 1490, Zone 1491, Zone 1492, Zone 1493, Zone 1494, Zone 1495, Zone 1496, Zone 1497, Zone 1498, Zone 1499, Zone 1500, Zone 1501, Zone 1502, Zone 1503, Zone 1504, Zone 1505, Zone 1506, Zone 1507, Zone 1508, Zone 1509, Zone 1510, Zone 1511, Zone 1512, Zone 1513, Zone 1514, Zone 1515, Zone 1516, Zone 1517, Zone 1518, Zone 1519, Zone 1520, Zone 1521, Zone 1522, Zone 1523, Zone 1524, Zone 1525, Zone 1526, Zone 1527, Zone 1528, Zone 1529, Zone 1530, Zone 1531, Zone 1532, Zone 1533, Zone 1534, Zone 1535, Zone 1536, Zone 1537, Zone 1538, Zone 1539, Zone 1540, Zone 1541, Zone 1542, Zone 1543, Zone 1544, Zone 1545, Zone 1546, Zone 1547, Zone 1548, Zone 1549, Zone 1550, Zone 1551, Zone 1552, Zone 1553, Zone 1554, Zone 1555, Zone 1556, Zone 1557, Zone 1558, Zone 1559, Zone 1560, Zone 1561, Zone 1562, Zone 1563, Zone 1564, Zone 1565, Zone 1566, Zone 1567, Zone 1568, Zone 1569, Zone 1570, Zone 1571, Zone 1572, Zone 1573, Zone 1574, Zone 1575, Zone 1576, Zone 1577, Zone 1578, Zone 1579, Zone 1580, Zone 1581, Zone 1582, Zone 1583, Zone 1584, Zone 1585, Zone 1586, Zone 1587, Zone 1588, Zone 1589, Zone 1590, Zone 1591, Zone 1592, Zone 1593, Zone 1594, Zone 1595, Zone 1596, Zone 1597, Zone 15

The All New . . .
TACO ZONE CONTROLS WIRING GUIDE

	Page
Switching Relays - Single Zone Wiring	2 - 4
Switching Relays - Oil Boiler Wiring Safety Notice	5 - 5
Switching Relays - NON EXP Connected Together with Priority	6 - 9
Switching Relays - EXP Connected Together with Priority	10 - 13
Switching Relays - Multiple Indirect Heat Water Heating	14 - 15
Switching Relays - EXP Connected to Heat Controls (PCT10, T02 & T03)	16 - 27
Zone Valve Controls - NON EXP Connected Together with Priority	28 - 32
Zone Valve Controls - EXP Connected Together with Priority	33 - 36
Zone Valve Controls - Connected to Heat Controls (PCT10, T02 & T03)	37 - 44
Signal Air Fan Controls (MFC T01 & T02)	45 - 48
New Expandable Zone Control - Connected to Older Expandable Zone Control	50 - 51
Specialty Thermostat and Zone Valve Wiring	52 - 61
Radiant Mixing Block	62 - 63
X-Press Block	64 - 66
Series Mixing Valves	67 - 68
Low Water Cutoffs and Electric Water Feeders	69 - 84
Aquastat Wiring	85 - 91
Instruction Sheets	92 - 94
Standard Terms and Definitions	102
Zone Controls Cross Reference	103 - 107

Do it once.
Do it right.



* Taco Catalog No. 100-102

Effective Date: August 1, 2010
Supersedes: Older Issues

[pdf] Guide Catalog

Wiring Guide Taco SR506 4 6 Zone Switching Relay PlumbersStock 684509 L4StfY xrefs0 plumbersstock product 8

||| ||| The All New . TACO ZONE CONTROLS WIRING GUIDE Switching Relays Single Zone Wiring Switching

Relays Oil Boiler Wiring Safety Notice Switching Relays NON EXP Connected Together with

The All New . . . TACO ZONE CONTROLS WIRING GUIDE Switching Relays Single Zone

Wiring Switching R ... 1, 2010 Supersedes Date: New TACO Zone Control Product Information

Switching Relays Product No. **SR501-4** **SR501-HC-4** **SR501-OR-4** SR502-4 SR503-4 SR504-4 SR506-4 Description 1 Zone Switching Relay 1 ...

lang:en score:34 filesize: 2.08 M page_count: 110 document date: 2021-01-11

[pdf] Instructions Warranty Diagram

SR501 845RP 102 105 Vincent Viola Instruction Sheet Torrcoco TACO ZONES VOLTAGE COMBINED LOAD WIDTH

HEIGHT DEPTH 1 Zone 120 VAC Input 7 2 amps 4 5 3 All Switching Relays are relay type DPDT Warning When

using Alternative Wiring diagram wiring instructions must be followed so power originates from the boiler aquastat

Failure to follow these may result in a secondary source of being connected that activate it under certain

circumstances causing injury or death 845RP102 taco hvac FileLibrary

Instruction Sheet 102-105 **SR501**-845RP Universal Replacement Relay SUPERSEDES: 102-

105 October 15, 2005 Plant ID# 9300-1048 EFFECTIVE: March 1, 2006 Features: Universal

Replaceability Indicator Lights Snap-in PC Board to Existing Enclosure Simplified Wiring Fully

Enclosed Snap-Out Relay 100 Fac...

lang:en score:34 filesize: 392.34 K page_count: 2 document date: 2015-11-05

[pdf] Warranty

SR501 IN SH 102 169 W FUSES QuarkXPress R 8 51 Instruction Sheet 4 Switching Relay TACO REPLACEMENT

CROSS REFERENCE MANUFACTURER MODEL CONNECTIONS Taco Controlling 2 SR504 506 Relays Do it

Query ASSET ID 3249786 USE TYPE INSTALLATION PRODUCT 4154365 api ferguson dar step service |||

Instruction Sheet 102-375 **SR501**-4 Switching Relay SUPERSEDES: March 1, 2013

EFFECTIVE: December 20, 2013 Plant ID# 9300-2865 Features: External Indicator Lights

Universal Replaceability Snap-in PC Board Simplified Wiring Sealed Relays Fuse Protected

Outputs 100 Factory Tested Contractor Friendl...

lang:en score:34 filesize: 571.14 K page_count: 2 document date: 2015-11-16

Instruction Sheet
SR501-845RP Universal Replacement Relay

102-105

102-105 October 15, 2005
Plant ID# 9300-1048
EFFECTIVE: March 1, 2006

Features:
External Indicator Lights
Snap-in PC Board to Existing Enclosure
Simplified Wiring
100% Factory Tested
Universal Replaceability
100% Factory Tested
Standard 3 Wire Warranty
Made in the USA

Operation:
Control is referenced to the "T" terminals on the switching side. When the thermostat calls for heat, the valve is energized and power is given to the valve.

Power Input:
Control is 120 VAC or power to terminals L1 and L2.

Input Power:
The input is factory installed between terminals L1 and L2 to match power to terminal 1.

Diagnosis:
The indicator lights show full functionality of the switching side. The green light indicates the valve is energized and power is connected. When the thermostat calls for heat, both the appropriate valve and the indicator light is energized.

The Taco Connection:
Control is referenced to the Taco Zone Valve, Thermostat, Control, Thermostat, and the Taco Zone Control to achieve total system operation. Verify the application. Taco also provides the ability to install other manufacturer units including both indicator and control.

Terminal Description:
L1, L2: Common and common to common wire
L1: Common
L2: Common
L3: Common
L4: Common
L5: Common
L6: Common
L7: Common
L8: Common
L9: Common
L10: Common
L11: Common
L12: Common
L13: Common
L14: Common
L15: Common
L16: Common
L17: Common
L18: Common
L19: Common
L20: Common
L21: Common
L22: Common
L23: Common
L24: Common
L25: Common
L26: Common
L27: Common
L28: Common
L29: Common
L30: Common
L31: Common
L32: Common
L33: Common
L34: Common
L35: Common
L36: Common
L37: Common
L38: Common
L39: Common
L40: Common
L41: Common
L42: Common
L43: Common
L44: Common
L45: Common
L46: Common
L47: Common
L48: Common
L49: Common
L50: Common
L51: Common
L52: Common
L53: Common
L54: Common
L55: Common
L56: Common
L57: Common
L58: Common
L59: Common
L60: Common
L61: Common
L62: Common
L63: Common
L64: Common
L65: Common
L66: Common
L67: Common
L68: Common
L69: Common
L70: Common
L71: Common
L72: Common
L73: Common
L74: Common
L75: Common
L76: Common
L77: Common
L78: Common
L79: Common
L80: Common
L81: Common
L82: Common
L83: Common
L84: Common
L85: Common
L86: Common
L87: Common
L88: Common
L89: Common
L90: Common
L91: Common
L92: Common
L93: Common
L94: Common
L95: Common
L96: Common
L97: Common
L98: Common
L99: Common
L100: Common

Warning: Wiring connections must be made in accordance with all applicable electrical codes. The output side is with a common temperature rating of 100°C. Refer to the Taco Zone Control for more information on wiring connections and 100°C rating. The output side is with a common temperature rating of 100°C. Refer to the Taco Zone Control for more information on wiring connections and 100°C rating.

Instruction Sheet
SR501-4 Switching Relay

102-375

102-375 December 20, 2013
Plant ID# 9300-2865

Features:
External Indicator Lights
Snap-in PC Board to Existing Enclosure
Simplified Wiring
100% Factory Tested
Universal Replaceability
100% Factory Tested
Standard 3 Wire Warranty
Made in the USA

Operation:
Control is referenced to the "T" terminals on the switching side. When the thermostat calls for heat, the valve is energized and power is given to the valve.

Power Input:
Control is 120 VAC or power to terminals L1 and L2.

Input Power:
The input is factory installed between terminals L1 and L2 to match power to terminal 1.

 
Diagnosis:
The indicator lights show full functionality of the switching side. The green light indicates the valve is energized and power is connected. When the thermostat calls for heat, both the appropriate valve and the indicator light is energized.

The Taco Connection:
Control is referenced to the Taco Zone Valve, Thermostat, Control, Thermostat, and the Taco Zone Control to achieve total system operation. Verify the application. Taco also provides the ability to install other manufacturer units including both indicator and control.

Terminal Description:
L1, L2: Common and common to common wire
L1: Common
L2: Common
L3: Common
L4: Common
L5: Common
L6: Common
L7: Common
L8: Common
L9: Common
L10: Common
L11: Common
L12: Common
L13: Common
L14: Common
L15: Common
L16: Common
L17: Common
L18: Common
L19: Common
L20: Common
L21: Common
L22: Common
L23: Common
L24: Common
L25: Common
L26: Common
L27: Common
L28: Common
L29: Common
L30: Common
L31: Common
L32: Common
L33: Common
L34: Common
L35: Common
L36: Common
L37: Common
L38: Common
L39: Common
L40: Common
L41: Common
L42: Common
L43: Common
L44: Common
L45: Common
L46: Common
L47: Common
L48: Common
L49: Common
L50: Common
L51: Common
L52: Common
L53: Common
L54: Common
L55: Common
L56: Common
L57: Common
L58: Common
L59: Common
L60: Common
L61: Common
L62: Common
L63: Common
L64: Common
L65: Common
L66: Common
L67: Common
L68: Common
L69: Common
L70: Common
L71: Common
L72: Common
L73: Common
L74: Common
L75: Common
L76: Common
L77: Common
L78: Common
L79: Common
L80: Common
L81: Common
L82: Common
L83: Common
L84: Common
L85: Common
L86: Common
L87: Common
L88: Common
L89: Common
L90: Common
L91: Common
L92: Common
L93: Common
L94: Common
L95: Common
L96: Common
L97: Common
L98: Common
L99: Common
L100: Common

Warning: Wiring connections must be made in accordance with all applicable electrical codes. The output side is with a common temperature rating of 100°C. Refer to the Taco Zone Control for more information on wiring connections and 100°C rating. The output side is with a common temperature rating of 100°C. Refer to the Taco Zone Control for more information on wiring connections and 100°C rating.

lang:en score:34 filesize: 75.15 K page count: 3 document date: 2020-02-06

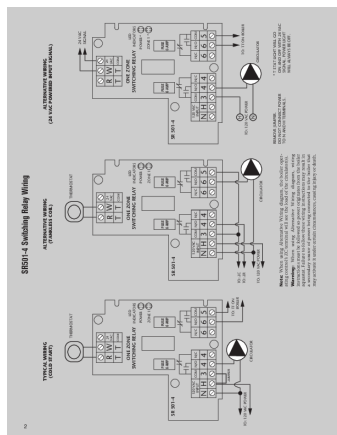[illegible]

TACO Zone Control Product Information	
Switching Ranges	Zone Values
Model No.	1 Zone Switching Relay
HSB1-E-1	1 Zone Switching Relay With High Capacity
HSB1-E-2	2 Zone Switching Relay With On/Off Relay
HSB1-E-4	2 Zone Switching Relay With Priority
HSB1-E	2 Zone Switching Relay With Priority
HSB1-E-1	2 Zone Switching Relay With Priority
HSB1-E-2	2 Zone Switching Relay With Priority
HSB1-E-4	2 Zone Switching Relay With Priority
HSB1-E	2 Zone Switching Relay With Priority
Expendable Switching Ranges - Expendable to 120 Zones (28 Zoning Panels)	Zone Values
Model No.	1 Zone Switching Relay
HSB1-EXP-1	1 Zone Switching Relay
HSB1-EXP-2	2 Zone Switching Relay With Priority
HSB1-EXP-4	2 Zone Switching Relay With Priority
HSB1-EXP	2 Zone Switching Relay With Priority
Zone Valve Controls	Descriptions
Model No.	2 Zone Valve Control with Priority
ZVCR-1	2 Zone Valve Control with Priority
ZVCR-4	2 Zone Valve Control with Priority
ZVCR-E	2 Zone Valve Control with Priority
ZVCR-E-4	2 Zone Valve Control with Priority
Expendable Zone Valve Controls - Expendable to 120 Zones (28 Zoning Panels)	Zone Values
Model No.	2 Zone Valve Control with Priority
ZVCR-EXP-1	2 Zone Valve Control with Priority
ZVCR-EXP-4	2 Zone Valve Control with Priority
ACM Power Controls (for use with all ZCP controls)	Zone Values
Model No.	2-Stage Motor Control
PCN-1	2-Stage Motor Control
PCN-4	Variable Speed Pump Injection Mixing Control
Ex. Controls	Descriptions
Model No.	Multi-Dr. Fan Control with Optional Time Delays
MSCH1-E-1	

[\[pdf\]](#) Instructions Guide Diagram

ZONE CONTROLS WIRE GUIDE 3 08 Other 1ZVC403 5 TACO Connor CoTacoFamilyofCo TacoComfortSolutions
00191 2 106 OTHER1media distributordatasolutions 4855 xlsx trimble

7cba037830299d6bb17866e673cf09f1bdaf7301 |||

2 TYPICAL WIRING COLD START THERMOSTAT SR 501-4 R W 24 VAC T T COM ONE
ZONE LED SWITCHING RELAY INDICATORS POWER ZONE 1 FUSE 6 AMP FUSE 6 AMP
120 VAC INPUT COM N/O N/C NH3 4 4 N/C N/O COM 665 **SR501**-4 Switching Relay Wiring
ALTERNATIVE WIRING TANKLESS COIL THERMOSTAT SR 501-4 R...

lang:en score:33 filesize: 83.27 K page count: 2 document date: 2023-12-20

[\[pdf\]](#) Guide

ZONE CONTROLS WIRE GUIDE 3 08 SR501 4 1 Zone Switching Relay HC or 2 High Current Capacity OR with
Outdoor Reset SR502 TacoFamilyofCo TacoComfortSolutions 00191 90 OTHER1 media distributordatasolutions
4855.xlsx trimble 2315881d625ba504ec1a53ccbdb72b7d214fc90 |||

TACO Zone Control Product Information Switching Relays Product No. **SR501-4 SR501-HC-4 SR501-OR-4 SR502-4 SR503-4 SR504-4 SR506-4** Description 1 Zone Switching Relay 1 or 2 Zone Switching Relay, High Current Capacity 1 Zone Switching Relay with Outdoor Reset 2 Zone Switching Relay with Priority 3 Zo...

lang:en score:33 filesize: 169.92 K page count: 3 document date: 2022-05-10

[\[pdf\]](#) Warranty Borchure Catalog

taco sr brochure ecomfort manuals |||

 
Electronic Controls Switching Relay The Taco Switching Relay is the best choice for all your zoning ... TO: ZR ON AQUASTAT JUMPER TO: ZC ON AQUASTAT 120 VAC INPUT
Switching Relays Product Number **SR501** SR502 SR503 SR504 SR506 Number of Zones 1 Zone 2 with Priority 3 with Priority 4 with Priorit...

lang:en score:32 filesize: 287.14 K page count: 2 document date: 2011-12-27

TACO Zone Control Product Information and Wiring Guide

Comprehensive overview of TACO zone control products, including switching relays, zone valve controls, and add-on power controls, with detailed product information, specifications, and wiring diagrams for HVAC systems.


lang:en score:32 filesize: 268.02 K page count: 6 document date: 2020-12-30

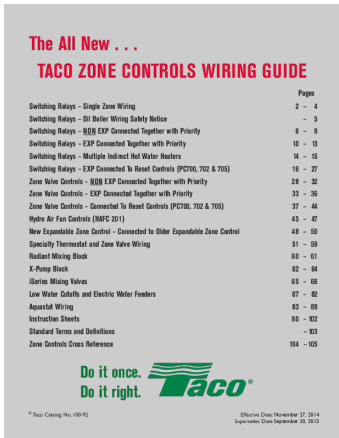

[pdf] Guide Catalog

ZONE CONTROLS WIRE GUIDE 3 08 TACOINE01202 1 cdn designair Resources |||

 The All New . . . TACO ZONE CONTROLS WIRING GUIDE Switching Relays Single Zone Wiring Switching R ... edes Date: September 20, 2013 TACO Zone Control Product Information Switching Relays Product No. **SR501-4** **SR501-HC-4** **SR501-OR-4** SR502-4 SR503-4 SR504-4 SR506-4 Description 1 Zone Switching Relay 1 ... lang:en **score:32** filesize: 62.5 K page_count: 3 document date: 2017-04-05

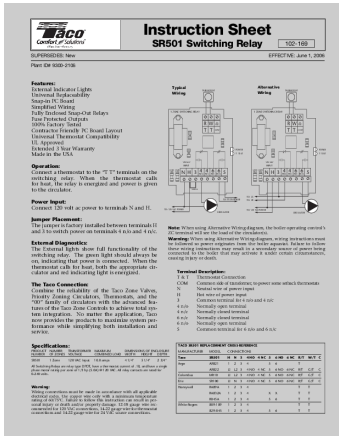

[pdf] Instructions Warranty

SR501 IN SH 102 169 W FUSES Vincent Viola Installation Instructions 4 1 x 2 3 5 120 VAC A DPDT Zone Fully Enclosed Snap Out Switching Relay Design Air TACONINST00048 cdn designair Resources |||

SUPERSEDES: New Plant ID# 9300-2106 Instruction Sheet **SR501** Switching Relay 102-169 EFFECTIVE: June 1, 2006 Features: External Indicator Lights Universal Replaceability Snap-in PC Board Simplified Wiring Fully Enclosed Snap-Out Relays Fuse Protected Outputs 100 Factory Tested Contractor Friend...

lang:en **score:32** filesize: 392.98 K page_count: 2 document date: 2017-07-29

 


[pdf] Installation Guide Warranty Catalog

Submittal Data Information NH FuelMizer® Instruction Sheet 102 420 Supersedes 06 12 Power input 120 vac 100 taco hvac FileLibrary

Electronic Controls The FuelMizer **SR501-OR** is a microprocessor-based control designed to regulate the supply water temperature of a single boiler, based on the outdoor temperature. The FuelMizer is a boiler reset control and switching relay in one unit; it is ideal for retrofit application, but ma...

lang:en **score:31** filesize: 1.2 M page_count: 2 document date: 2017-01-05

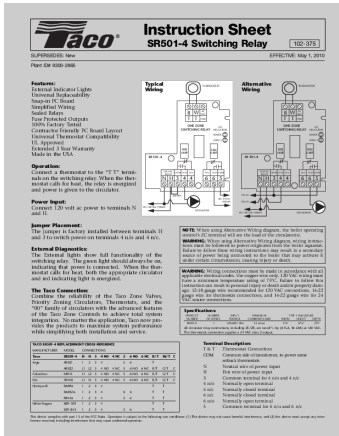

[pdf] Warranty

102 375 SR501 IN SH NEW UL FCC Vincent Viola taco sr501 4 replacemnent cross reference manufacturer model connections h n 3 no nc 5 6 r t w c argo ar821 1234 85160 PROD FILE switching relay tc s3 supplyhouse manuals

1351090952835 graycoolingman 1 0 10667336 pexuniverse 80 docs


SUPERSEDES: New Plant ID# 9300-2865 Instruction Sheet **SR501-4** Switching Relay 102-375 EFFECTIVE: May 1, 2010 Features: External Indicator Lights Universal Replaceability Snap-in PC Board Simplified Wiring Sealed Relays Fuse Protected Outputs 100 Factory Tested Contractor Friendly PC Board Layo...

lang:en **score:31** filesize: 106.69 K page_count: 2 document date: 2012-03-15

TACO Zone Control Product Information

Switching Relays	
Product No.	Description
SR501-4	1 Zone Switching Relay
SR501-HC-4	1 or 2 Zone Switching Relay, High Current Capacity
SR501-OR-4	1 Zone Switching Relay with Outdoor Reset
SR502-4	2 Zone Switching Relay with Priority
SR503-4	2 Zone Switching Relay with Priority
SR504-4	4 Zone Switching Relay with Priority
SR506-4	6 Zone Switching Relay with Priority
Expandable Switching Relays – Expandable to 128 Zones (28 Zoning Panels)	
Product No.	Description
SR501-EXP-4	1 Zone Switching Relay
SR501-EXP-4	1 Zone Switching Relay with Priority
SR502-EXP-4	2 Zone Switching Relay with Priority
SR504-EXP-4	4 Zone Switching Relay with Priority
SR506-EXP-4	6 Zone Switching Relay with Priority
Zone Valve Controls	
Product No.	Description
ZVC004-4	1 Zone Valve Control with Priority
ZVC004-4	2 Zone Valve Control with Priority
ZVC004-4	4 Zone Valve Control with Priority
ZVC004-4	6 Zone Valve Control with Priority
Expandable Zone Valve Controls – Expandable to 128 Zones (28 Zoning Panels)	
Product No.	Description
ZVC004-EXP-4	1 Zone Valve Control with Priority
ZVC004-EXP-4	2 Zone Valve Control with Priority
Add-On Power Controls (For use with all ZVC control)	
Product No.	Description
PC700	Boiler Reset Control
PC701	3 Stage Boiler Reset Control
PC702	Variable Speed Pump Injection Mixing Control
Fan Controls	
Product No.	Description
HAFCC01-4	Hydro Air Fan Control with Optional Time Delay

 Do it once.
Do it right. **Taco**

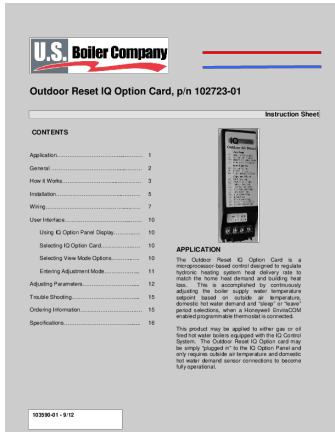

TACO Zone Control Product Information

Switching Relays	
Product No.	Description
SR501-4	1 Zone Switching Relay
SR501-HC-4	1 or 2 Zone Switching Relay, High Current Capacity
SR501-OR-4	1 Zone Switching Relay with Outdoor Reset
SR502-4	2 Zone Switching Relay with Priority
SR503-4	2 Zone Switching Relay with Priority
SR504-4	4 Zone Switching Relay with Priority
SR506-4	6 Zone Switching Relay with Priority
Expandable Switching Relays – Expandable to 128 Zones (28 Zoning Panels)	
Product No.	Description
SR501-EXP-4	1 Zone Switching Relay
SR501-EXP-4	1 Zone Switching Relay with Priority
SR502-EXP-4	2 Zone Switching Relay with Priority
SR504-EXP-4	4 Zone Switching Relay with Priority
SR506-EXP-4	6 Zone Switching Relay with Priority
Zone Valve Controls	
Product No.	Description
ZVC004-4	1 Zone Valve Control with Priority
ZVC004-4	2 Zone Valve Control with Priority
ZVC004-4	4 Zone Valve Control with Priority
ZVC004-4	6 Zone Valve Control with Priority
Expandable Zone Valve Controls – Expandable to 128 Zones (28 Zoning Panels)	
Product No.	Description
ZVC004-EXP-4	1 Zone Valve Control with Priority
ZVC004-EXP-4	2 Zone Valve Control with Priority
Add-On Power Controls (For use with all ZVC control)	
Product No.	Description
PC700	Boiler Reset Control
PC701	3 Stage Boiler Reset Control
PC702	Variable Speed Pump Injection Mixing Control
Fan Controls	
Product No.	Description
HAFCC01-4	Hydro Air Fan Control with Optional Time Delay

Do it once.
Do it right. **Taco**

[pdf] Guide

ZONE CONTROLS WIRE GUIDE 3 08 Other 1Northeastern 4 1 x22 X 2 5 120 VAC 60 Hz 12 A zone With Outdoor

Reset Boiler Switching RelayTaco 00010 106 OTHER1images tradeservice ATTACHMENTS DIR100257 Taco

OTHER1 |||

TACO Zone Control Product Information Switching Relays Product No. **SR501-4 SR501-HC-4 SR501-OR-4 SR502-4 SR503-4 SR504-4 SR506-4** Description 1 Zone Switching Relay 1 or 2 Zone Switching Relay, High Current Capacity 1 Zone Switching Relay with Outdoor Reset 2 Zone Switching Relay with Priority 3 Zo...

lang:en score:31 filesize: 169.93 K page_count: 3 document date: 2019-08-01

[pdf] Instructions Specifications

BCP7000D Outdoor Reset Plug in Card CIB Shipping Burnham Holdings INC IQ Instructions 102946 01

Temperature Sensor 10k Ohm Resistance burnham iq outdoor reset instructions ecomfort manuals |||

Outdoor Reset IQ Option Card, p/n 102723-01 CONTENTS Instruction Sheet

Application..... m with Zone Circulator Panel DHW AQUASTAT L4006, L4080 SUPPLIED BY OTHERS R T SWITCHING RELAY **SR501** OR R8845U SUPPLIED BY INSTALLER W C T POWER L2 SUPPLY 120/60/1 L1 H G L1 N L2 3 4 ...

lang:en score:30 filesize: 805.88 K page_count: 16 document date: 2012-09-25

[pdf] Guide


ZONE CONTROLS WIRE GUIDE 3 08 Other 1Northeastern 12 1 4 x22 X 8 120 VAC 60 Hz phase 15 A zone With

Priority Boiler Switching RelayTaco 00010 2 106 OTHER1images tradeservice ATTACHMENTS DIR100257 Taco

OTHER1 |||

TACO Zone Control Product Information Switching Relays Product No. **SR501-4 SR501-HC-4 SR501-OR-4 SR502-4 SR503-4 SR504-4 SR506-4** Description 1 Zone Switching Relay 1 or 2 Zone Switching Relay, High Current Capacity 1 Zone Switching Relay with Outdoor Reset 2 Zone Switching Relay with Priority 3 Zo...

 lang:en score:30 filesize: 96.94 K page_count: 3 document date: 2019-08-01

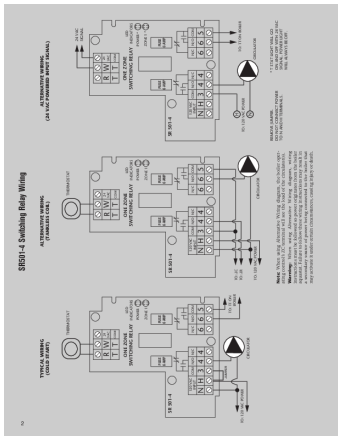

[\[pdf\]](#) Instructions Guide Diagram

ZONE CONTROLS WIRE GUIDE 3 08 TacoComfortSolutions 00145 2 106 OTHER1 images tradeservice

ATTACHMENTS DIR100277 |||

2 TYPICAL WIRING COLD START THERMOSTAT SR 501-4 R W 24 VAC T T COM ONE
 ZONE LED SWITCHING RELAY INDICATORS POWER ZONE 1 FUSE 6 AMP FUSE 6 AMP
 120 VAC INPUT COM N/O N/C NH3 4 4 N/C N/O COM 665 **SR501**-4 Switching Relay Wiring
 ALTERNATIVE WIRING TANKLESS COIL THERMOSTAT SR 501-4 R...

lang:en **score:30** filesize: 81.02 K page_count: 2 document date: 2020-02-20

Submittal Data Information
 Single Zone Switching Relay

Effective: December 15, 2006
 Supersedes: July 15, 2005

Notes:

1. The relay is designed to be used with a 24 VAC thermostat. Do not use with a 120 VAC thermostat. The relay will not operate with a 120 VAC thermostat. The relay will not operate with a 120 VAC thermostat. The relay will not operate with a 120 VAC thermostat.

2. The relay is designed to be used with a 24 VAC thermostat. Do not use with a 120 VAC thermostat. The relay will not operate with a 120 VAC thermostat. The relay will not operate with a 120 VAC thermostat. The relay will not operate with a 120 VAC thermostat.

Do it Once. Do it Right.

 
TACO, INC. 1800 Commerce Street, Dallas, Texas 75201 Telephone: (972) 382-0000 Fax: (972) 382-0000
 TACO Canada, Ltd. 1000 Steeles Ave. East, Unit 100, Scarborough, Ontario M1V 5K6 Telephone: (416) 291-1000 Fax: (416) 291-1000
 TACO Mexico, S.A. 1000 Steeles Ave. East, Unit 100, Scarborough, Ontario M1V 5K6 Telephone: (416) 291-1000 Fax: (416) 291-1000

[\[pdf\]](#) Warranty

Taco SR501 HC 4 Submittal 101 053 s3 supplyhouse product files taco hvac archives

Submittal Data Information Single Zone Switching Relay 101-053 Effective: December 15, 2006
 Job: S ... instant diagnostic feedback, making a snap of service calls or new installation start-ups. Special **SR501**-845RP contractor multi-packs also available. Taco Expandable Switching Relays Whether you want...

lang:en **score:30** filesize: 190.5 K page_count: 1 document date: 2007-01-05

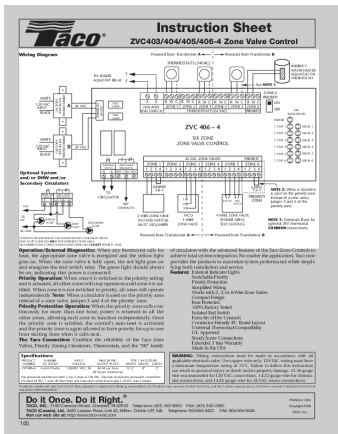


[\[pdf\]](#) Guide Diagram

ZONE CONTROLS WIRE GUIDE 3 08 TacoComfortSolutions 00145 100 104 OTHER1 images tradeservice

ATTACHMENTS DIR100277 |||

Instruction Sheet ZVC403/404/405/406-4 Zone Valve Control Wiring Diagram Powered from Transformer ...
 PANDABLE ZONE VALVE CONTROLS 4 Zone Valve Control with Priority 6 Zone Valve Control with Priority **SR501 SR501**-HC **SR501**-OR SR502 SR503 SR504 SR506 AR822II AR-861-2II 3 AR-861-3II 3 **SR501**-EXP SR...

 lang:en **score:30** filesize: 138.3 K page_count: 2 document date: 2020-02-20

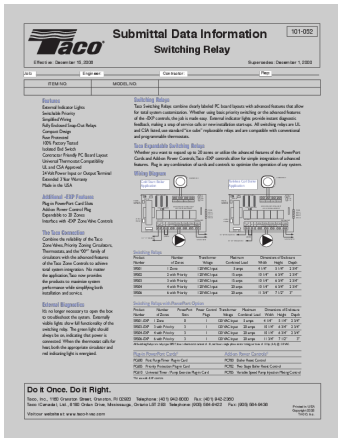


[pdf] Warranty Label

85357 PROD FILE 101 052 s3 supplyhouse manuals 1351159381991 taco hvac archives

Submittal Data Information 101-052 Switching Relay Effective: December 15, 2006 Submittal Data Inf ... TO: ZR ON AQUASTAT JUMPER TO: ZC ON AQUASTAT 120 VAC INPUT Switching Relays Product Number **SR501** SR502 SR503 SR504 SR506 Number of Zones 1 Zone 2 with Priority 3 with Priority 4 with Priorit...

 lang:en score:30 filesize: 144.31 K page_count: 1 document date: 2007-01-03

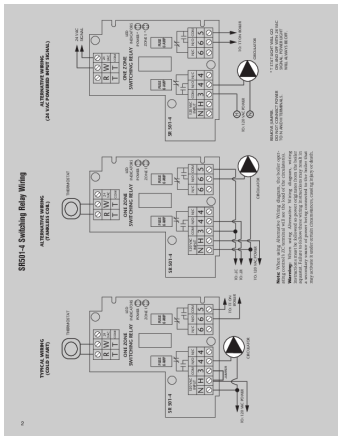


[pdf] Instructions Guide Diagram

ZONE CONTROLS WIRE GUIDE 3 08 TacoComfortSolutions 00145 2 90 106 OTHER1 images tradeservice

ATTACHMENTS DIR100277 |||

2 TYPICAL WIRING COLD START THERMOSTAT SR 501-4 R W 24 VAC T T COM ONE ZONE LED SWITCHING RELAY INDICATORS POWER ZONE 1 FUSE 6 AMP FUSE 6 AMP 120 VAC INPUT COM N/O N/C NH3 4 4 N/C N/O COM 665 **SR501**-4 Switching Relay Wiring ALTERNATIVE WIRING TANKLESS COIL THERMOSTAT SR 501-4 R...

 lang:en score:30 filesize: 170.44 K page_count: 3 document date: 2020-02-20

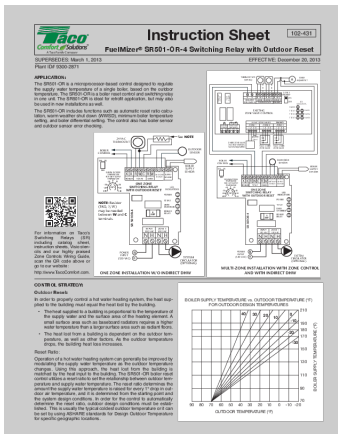

[pdf]

SR501 IN SH 102 169 W FUSES 431 taco hvac FileLibrary

Instruction Sheet 102-431 A Taco Family Company FuelMizer **SR501**-OR-4 Switching Relay with Outdoor Reset SUPERSEDES: March 1, 2013 Plant ID# 9300-2871 EFFECTIVE: December 20, 2013 APPLICATION: The **SR501**-OR is a microprocessor-based control designed to regulate the supply water temperature of a s...

lang:en score:30 filesize: 358.41 K page_count: 4 document date: 2017-01-05

SR501 IN SH 102 169 W FUSES In sh w fuses 4 Switching Relay Taco 375 SUPERSEDES March 1 2013
EFFECTIVE December 20 Plant ID 9300 2865 Features External Indicator Lights Universal Replaceability Snap in
PC Board Simplified Wiring Failure to follow these wiring instructions may result a secondary source of power being
connected the boiler that activate it un derc taim s g j yo h Spec ifications PRODUCT NUMBER INPUT MAXIMUM
TYPE ENCLOSURE OF ZONES VOLTAGE COMBINED LOAD WIDTH HEIGHT DEPTH 120 60 VAC 12 namps 47
8 65 23 1KΩ 1/2 be needed between and C terminals See NOTE TACO REPLACEMENT CROSS REFERENCE
MANUFACTURER MODEL CONNECTIONS TacoSR501 taco sr501 article 1408712807634 en ii media

Instruction Sheet 102-375 **SR501**-4 Switching Relay SUPERSEDES: March 1, 2013
EFFECTIVE: December 20, 2013 Plant ID# 9300-2865 Features: External Indicator Lights
Universal Replaceability Snap-in PC Board Simplified Wiring Sealed Relays Fuse Protected
Outputs 100 Factory Tested Contractor Friendl...