

Lexon la42-SY 4910015

Lexon Tykho Radio User Manual

Model: la42-SY 4910015

INTRODUCTION

Welcome to the user manual for your Lexon Tykho Radio. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device. The Lexon Tykho Radio is a compact and stylish portable radio designed for ease of use and reliable performance, featuring both AM and FM tuning capabilities.



Figure 1: Lexon Tykho Radio. This image displays the front view of the radio, highlighting its minimalist design, the prominent speaker grille, and the intuitive control buttons. An extendable antenna is visible on the top right side.

SETUP

1. Battery Installation

The Lexon Tykho Radio operates on 4 AAA batteries. To install the batteries:

1. Locate the battery compartment cover on the back or bottom of the radio.
2. Gently slide or unclip the cover to open the compartment.
3. Insert 4 AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

Ensure batteries are fresh for optimal performance. The radio is constructed from durable ABS material and weighs approximately 330 grams (11.6 ounces).

OPERATING INSTRUCTIONS

The Lexon Tykho Radio supports both AM and FM radio bands. Familiarize yourself with the controls on the device.

1. Power On/Off

Locate the power button, typically a small, distinct button or a rotary knob that clicks when turned. Press or turn it to power on the radio. Repeat to power off.

2. Tuning to a Station

The radio features a tuner for AM and FM bands. Use the tuning knob or buttons to scan for available stations. Extend the antenna for better reception, especially for FM stations.

- **Band Selection:** If available, switch between AM and FM bands using a dedicated switch or button.
- **Tuning:** Slowly rotate the tuning knob or press the tuning buttons to find your desired frequency.

3. Volume Control

Adjust the listening volume using the dedicated volume knob or buttons. Turn clockwise to increase volume and counter-clockwise to decrease.

4. Antenna Adjustment

For optimal reception, particularly for FM broadcasts, fully extend the telescopic antenna. Adjust its direction to improve signal clarity.

MAINTENANCE

To ensure the longevity and optimal performance of your Lexon Tykho Radio, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the radio. Do not use abrasive cleaners, solvents, or strong chemicals, as they may damage the ABS material.
- **Battery Care:** If the radio will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Water Exposure:** While the Tykho radio is known for its splash-proof design, avoid submerging it in water or exposing it to heavy rain.

TROUBLESHOOTING

If you encounter issues with your Lexon Tykho Radio, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power / Radio does not turn on	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh AAA batteries.
Poor reception / Static sound	Weak signal; antenna not extended or positioned correctly.	Fully extend the antenna and adjust its direction. Try moving the radio to a different location.

Problem	Possible Cause	Solution
No sound from speaker	Volume too low; radio muted.	Increase the volume. Ensure the radio is not muted (if applicable).

SPECIFICATIONS

Model Number: la42-SY 4910015

Brand: Lexon

Material: ABS

Weight: 330g (11.6 ounces)

Power Source: 4 x AAA Batteries

Tuner Technology: AM, FM

Radio Bands Supported: AM, FM

Color: Silver

Package Dimensions: 6.2 x 6.2 x 2.2 inches

Date First Available: August 16, 2024

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Lexon website or contact your point of purchase. Keep your proof of purchase for any warranty claims.

Lexon Official Website: www.lexon-design.com

© 2024 Lexon. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question