

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [REVLON](#) /

› Revlon 1875W Lightweight Hair Dryer Instruction Manual RV408

REVLON RV408

Revlon 1875W Lightweight Hair Dryer Instruction Manual

Model: RV408

1. INTRODUCTION

Thank you for choosing the Revlon 1875W Lightweight Hair Dryer. This appliance is designed to provide efficient and smooth hair drying. Its lightweight construction and versatile settings make it suitable for various styling needs. Please read this manual thoroughly before use to ensure safe and optimal performance.



Image 1: Revlon 1875W Lightweight Hair Dryer. This image displays the main unit of the hair dryer in black, highlighting its ergonomic design.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:
 - Always unplug this appliance immediately after using.
 - Do not use while bathing or in a shower.
 - Do not place or store appliance where it can fall or be pulled into a tub or sink.
 - Do not place in or drop into water or other liquid.
 - If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.

- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air towards eyes or other heat-sensitive areas.
- The appliance and attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.

3. PACKAGE CONTENTS

- Revlon 1875W Lightweight Hair Dryer (Model RV408)
- Concentrator Attachment
- Instruction Manual

4. PRODUCT FEATURES

- **Lightweight Design:** Engineered for comfortable handling and flexibility during styling.
- **1875 Watts Drying Power:** Provides maximum power for quick and efficient drying.
- **3 Heat/Speed Settings:** Offers versatile control for precise styling and drying.
- **Cold Shot Button:** Releases a burst of cool air to help set your style for a longer-lasting finish.
- **Concentrator Attachment:** Directs airflow for focused drying and precise styling.
- **Removable End Cap:** Designed for easy cleaning and maintenance of the air filter.
- **Hanging Ring:** For convenient storage.



Image 2: Hair Dryer Features. This image illustrates the hair dryer with its concentrator attachment, highlighting the 3 heat/speed settings, cold shot button, and removable end cap.

5. SETUP

1. **Unpack:** Carefully remove the hair dryer and all accessories from the packaging.
2. **Attach Concentrator (Optional):** If precise airflow is desired, align the concentrator attachment with the nozzle of the hair dryer and push it firmly into place until it clicks.
3. **Power Connection:** Ensure your hands are dry, then plug the hair dryer into a standard 120V AC electrical outlet.

6. OPERATING INSTRUCTIONS

1. **Power On:** Slide the ON/OFF switch to your desired speed setting (LOW, MED, HIGH).
2. **Select Heat:** The heat is integrated with the speed settings. Higher speeds typically provide more heat.
3. **Styling:** Direct the airflow towards your hair. For general drying, move the dryer continuously. For specific styling, use the concentrator attachment.
4. **Cold Shot:** Press and hold the cold shot button to release a burst of cool air. This helps to set curls, waves, or

overall styles for a longer hold. Release the button to return to the selected heat/speed setting.

5. **Power Off:** After use, slide the switch to the OFF position and unplug the appliance from the electrical outlet.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your hair dryer.

1. **Unplug:** Always unplug the hair dryer before cleaning.
2. **Clean Air Intake Filter:** The removable end cap at the rear of the dryer houses the air intake filter. Twist or pull off the end cap (refer to Image 2 for location). Gently remove any accumulated lint, dust, or hair from the filter screen using a soft brush or cloth.
3. **Reattach End Cap:** Once clean, securely reattach the end cap.
4. **Exterior Cleaning:** Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
5. **Storage:** Store the appliance in a cool, dry place. Do not wrap the cord around the dryer, as this can damage the cord. Use the hanging ring for convenient storage.

8. TROUBLESHOOTING

- **Appliance does not turn on:**
 - Ensure the hair dryer is securely plugged into a functional electrical outlet.
 - Check if the circuit breaker has tripped.
- **Low airflow or reduced performance:**
 - The air intake filter may be clogged. Refer to Section 7, "Maintenance and Cleaning," to clean the removable end cap and filter.
- **Appliance overheats and shuts off:**
 - The hair dryer is equipped with an automatic overheat protection device. If it overheats, it will shut off. Unplug the appliance and allow it to cool down for several minutes before attempting to use it again. Ensure the air intake and outlet are clear.

9. SPECIFICATIONS

- **Model:** RV408
- **Wattage:** 1875 watts
- **Power Source:** Corded Electric
- **Voltage:** 120 volts (Note: Wattage may vary depending on location of use)
- **Material:** Acrylonitrile Butadiene Styrene
- **Product Dimensions:** Approximately 3.7 x 9.9 x 9.7 inches
- **Weight:** Approximately 1.3 Pounds

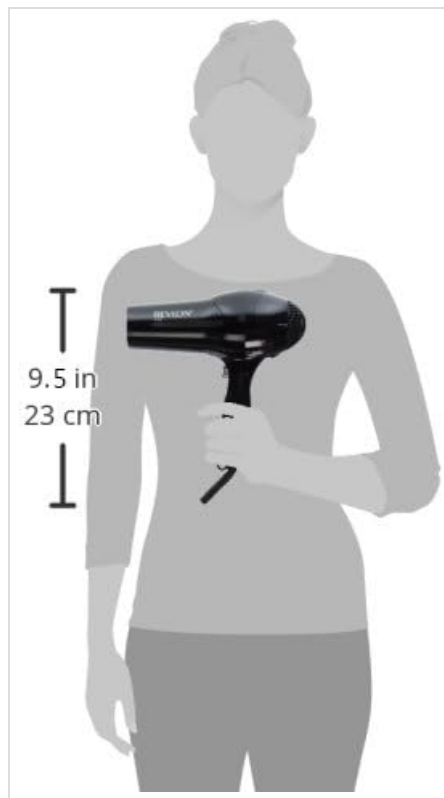


Image 3: Product Dimensions. This diagram illustrates the approximate dimensions of the hair dryer for reference.

10. WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please refer to the warranty card included with your purchase or visit the official Revlon website. You may also contact Revlon customer service directly for assistance with your Revlon 1875W Lightweight Hair Dryer, Model RV408.

© 2023 REVLON. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000A3I2X4>

More documents and user manuals: <https://manuals.plus/>