

[manuals.plus](#) /

› [3d](#) /

› [Outline Audio CD User Manual](#)

3d B000AA7C4M

Outline Audio CD User Manual

Model: B000AA7C4M | Brand: 3d

INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Outline Audio CD by E.D.O. Echo Soundsystem. Please read this manual thoroughly to ensure optimal performance and longevity of your product.

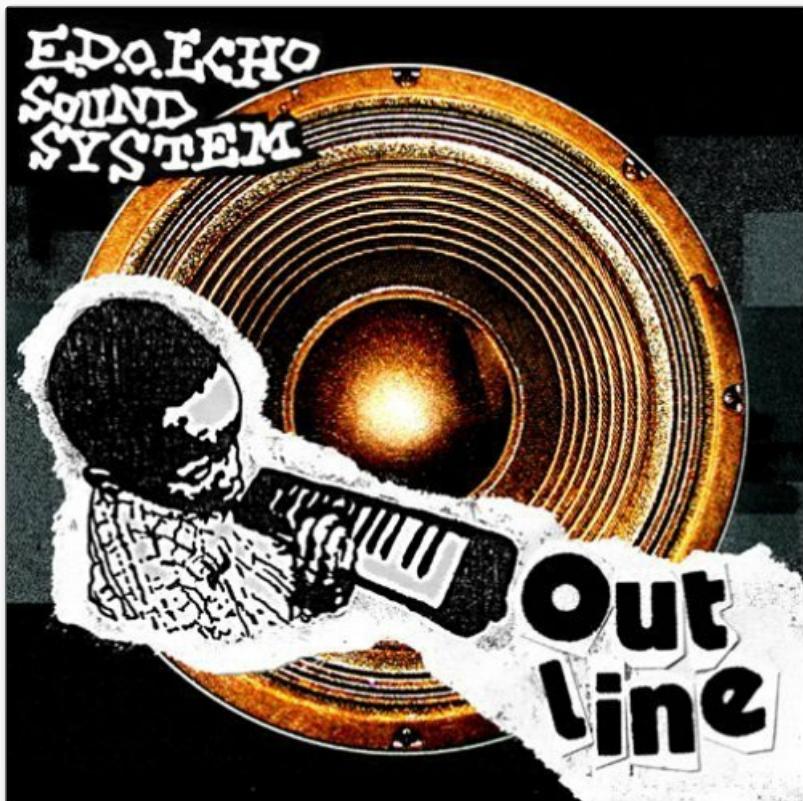


Image: The album cover for 'Outline' by E.D.O. Echo Soundsystem, depicting a graphic of a person with a keyboard against a large speaker.

SETUP AND HANDLING

Proper handling of your Audio CD is crucial to prevent damage and ensure clear playback.

- **Unpacking:** Carefully remove the CD from its packaging. Avoid touching the playing surface (shiny side) of the disc. Hold the CD by its edges or by placing a finger through the center hole.
- **Storage:** Store the CD in its original jewel case or a suitable CD wallet when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Loading:** Insert the CD into your CD player or computer's disc drive with the label side facing up. Ensure it clicks securely into place if using a tray-loading player.

OPERATING INSTRUCTIONS (PLAYBACK)

Follow these steps to play your Outline Audio CD:

1. **Power On:** Ensure your CD player or computer is powered on and connected to an audio output device (speakers, headphones).
2. **Insert Disc:** Open the disc tray or slot and carefully insert the Outline Audio CD. Close the tray or allow the disc to be drawn in.
3. **Select Play:** Most players will automatically begin playback. If not, press the "Play" button on your device or remote control.
4. **Navigation:** Use the "Next Track" or "Previous Track" buttons to skip between songs. Use the "Pause" button to temporarily stop playback and "Stop" to end playback.
5. **Volume Control:** Adjust the volume using your CD player's controls or your audio system's volume knob.

MAINTENANCE AND CARE

Regular care will help maintain the quality of your Audio CD.

- **Cleaning:** If the disc becomes dirty or smudged, gently wipe it with a soft, lint-free cloth. Wipe from the center of the disc outwards in a straight line, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Avoid Scratches:** Be careful not to drop the disc or slide it across rough surfaces. Scratches can lead to playback errors.
- **Temperature:** Do not expose the CD to extreme heat or cold, as this can warp the disc.

TROUBLESHOOTING

If you encounter issues during playback, consider the following common solutions:

Problem	Possible Cause	Solution
Disc skips or stutters	Dirty disc, scratched disc, or dirty player lens.	Clean the disc gently. Inspect for deep scratches. Try playing another CD to check the player.

Problem	Possible Cause	Solution
Disc does not play	Disc inserted incorrectly, player not powered on, or disc severely damaged.	Ensure disc is inserted label-side up. Check power connections. Try another disc.
No sound	Volume too low, audio cables disconnected, or incorrect input selected on receiver.	Increase volume. Check all audio cable connections. Select the correct input source on your amplifier/receiver.

SPECIFICATIONS

- **Title:** Outline
- **Artist:** E.D.O. Echo Soundsystem
- **Format:** Audio CD
- **ASIN:** B000AA7C4M
- **Label:** 3d
- **Manufacturer:** 3d
- **Number of Discs:** 1
- **Run Time:** 49 minutes
- **Package Dimensions:** 5.55 x 4.97 x 0.54 inches
- **Item Weight:** 3.26 ounces
- **First Available:** October 26, 2006

WARRANTY AND SUPPORT

As an Audio CD, this product typically does not come with an explicit manufacturer's warranty beyond the initial condition of the disc upon purchase. If you received a damaged or defective disc, please contact your retailer within their specified return period.

For general inquiries about the artist or album, please refer to publicly available information or fan communities.

Technical support for playback issues should be directed to the manufacturer of your CD player or audio equipment.

For Amazon-specific order support, please visit your [Amazon Orders page](#).