

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [GPX](#) /

> [GPX CDPR6205 Personal CD Player with Digital FM Scan Radio User Manual](#)

GPX CDPR6205

GPX CDPR6205 Personal CD Player with Digital FM Scan Radio User Manual

Model: CDPR6205

INTRODUCTION

Thank you for purchasing the GPX CDPR6205 Personal CD Player. This device offers portable audio entertainment with CD, CD-R/RW playback, a digital FM scan radio, and 60-second anti-skip protection. This manual provides essential information for safe operation, setup, and maintenance of your new personal CD player.

IMPORTANT SAFETY INFORMATION

- Read all instructions before operating the device.
- Keep this manual for future reference.
- Do not expose the unit to rain or moisture.
- Avoid extreme temperatures.
- Do not disassemble the unit. Refer servicing to qualified personnel.
- Dispose of batteries properly according to local regulations.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.

PACKAGE CONTENTS

Please check that all items are present:

- GPX CDPR6205 Personal CD Player
- Power Cord
- Stereo Earbuds (may vary by package)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your CD player.



Image: Front view of the GPX CDPR6205 Personal CD Player, showing the disc compartment, LCD display, and control buttons.

Controls and Indicators:

- **LCD Display:** Shows track number, time, FM frequency, and battery status.
- **PLAY/PAUSE Button:** Starts or pauses CD playback.
- **STOP Button:** Stops CD playback.
- **SKIP/SEARCH Buttons (<< / >>):** Skips tracks or fast forwards/rewinds within a track.
- **MODE Button:** Selects playback modes (Repeat 1, Repeat All, Random).
- **PROG Button:** Programs CD tracks.
- **FM SCAN Button:** Scans for FM radio stations.
- **VOLUME Control:** Adjusts audio output level.
- **DBBS (Dynamic Bass Boost System) Switch:** Enhances bass response.
- **HOLD Switch:** Locks all buttons to prevent accidental operation.
- **DC IN Jack:** For connecting the included power cord.
- **HEADPHONE Jack:** For connecting stereo headphones.
- **BATTERY COMPARTMENT:** Holds 2 x AA batteries (not included).

SETUP

1. Powering the Unit

Your CD player can be powered by either batteries or the included AC power cord.

Battery Installation:

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert 2 x "AA" size batteries (not included), ensuring correct polarity (+/-) as indicated inside the

compartment.

3. Close the battery compartment cover securely.
4. *Note:* The unit features a low battery indicator on the LCD display. Replace batteries when this indicator appears.

AC Power Connection:

1. Insert the small end of the included AC power cord into the DC IN jack on the side of the CD player.
2. Plug the other end of the power cord into a standard AC wall outlet.
3. *Note:* When the AC adapter is connected, battery power is automatically disconnected.

2. Connecting Headphones

Plug your stereo headphones into the HEADPHONE jack on the side of the unit. Ensure the plug is fully inserted for proper audio output.

OPERATING INSTRUCTIONS

Playing a CD

1. Slide the OPEN switch to open the CD compartment lid.
2. Place a CD (or CD-R/RW) with the label side facing up onto the center spindle.
3. Gently close the CD compartment lid until it clicks shut.
4. Press the **PLAY/PAUSE** button. The CD player will begin reading the disc, and the first track will start playing.
5. Adjust the **VOLUME** control to your desired listening level.
6. To pause playback, press **PLAY/PAUSE**. Press again to resume.
7. To stop playback, press the **STOP** button.
8. To skip to the next track, press the >> button. To go back to the beginning of the current track or previous track, press the << button.
9. To fast forward or rewind within a track, press and hold the >> or << button respectively.

Using the FM Radio

1. Ensure no CD is playing. If a CD is playing, press **STOP**.
2. Press the **FM SCAN** button. The radio will automatically scan for the next available FM station and begin playing it.
3. Press **FM SCAN** again to search for the next station.
4. Adjust the **VOLUME** control as needed.
5. *Note:* The unit does not display the exact FM frequency. It scans to the next strong signal.

Anti-Skip Protection (ASP)

The CDPR6205 features a 60-second Anti-Skip Protection system. This system buffers audio data, allowing for continuous playback even if the unit experiences minor shocks or vibrations. This feature is automatically active during CD playback.

Dynamic Bass Boost System (DBBS)

To enhance the bass frequencies of your audio, slide the **DBBS** switch to the ON position. Slide it to OFF to disable the bass boost.

HOLD Function

Slide the **HOLD** switch to the ON position to disable all buttons. This prevents accidental button presses during transport. Slide it to OFF to enable button functionality.

MAINTENANCE

Cleaning the Unit

- Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- To clean the CD lens, use a commercially available CD lens cleaner disc.

Battery Care

- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted; AC adapter not connected or faulty.	Replace batteries, check polarity; ensure AC adapter is securely plugged in.
No sound from headphones	Headphones not plugged in correctly; volume too low; headphones faulty.	Ensure headphones are fully inserted; increase volume; try different headphones.
CD does not play or skips	CD is dirty, scratched, or inserted incorrectly; unit is in HOLD mode.	Clean CD with a soft cloth; ensure CD is inserted label-side up; check HOLD switch.
FM radio not finding stations	Weak signal; unit not in FM mode.	Try scanning in a different location; ensure CD is stopped before scanning FM.

SPECIFICATIONS

- **Model:** CDPR6205
- **Power Source:** DC 3V (2 x "AA" batteries) or AC 120V ~ 60Hz (via included power cord)
- **CD Playback:** CD, CD-R/RW
- **Anti-Skip Protection:** 60 seconds
- **Radio:** Digital FM Scan Radio
- **Output:** 3.5mm Headphone Jack
- **Dimensions:** Approximately 10.2 x 7.5 x 2.5 inches (25.9 x 19.1 x 6.4 cm)
- **Weight:** Approximately 10.9 ounces (309 grams)

WARRANTY AND SUPPORT

GPX products are designed for reliability and performance. For specific warranty information, please refer

to the warranty card included with your purchase or visit the official GPX website. For technical support or customer service inquiries, please contact GPX customer support through their official channels. You can often find additional support and FAQs on the [GPX Store on Amazon](#) or the manufacturer's website.

© 2023 GPX. All rights reserved.